

SERVICE MANUAL

BE-5 CHASSIS

MODEL	COMMANDER	DEST.	CHASSIS NO.	MODEL	COMMANDER	DEST.	CHASSIS NO.
KV-21R1A	RM-836	Italian	SCC-K31A-A				
KV-21R1D	RM-836	AEP	SCC-K32A-A				
KV-21R1E	RM-836	Spanish	SCC-K30A-A				



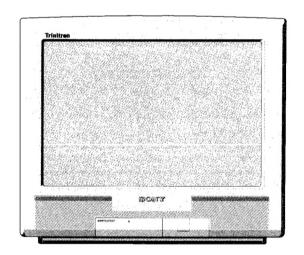

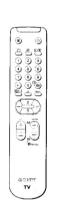



ITEM MODEL	Television System	Channel Coverage	Colour System
Italian	B/G/H	VHF: E2-E12 UHF: E21-E69 Hyper: S1-S41	PAL NTSC3.58/4.43 (video input only)
AEP	B/G/H, D/K	B/G/H VHF: E2-E12 UHF: S1-S20 Hyper: S1-S41 D/K VHF: R1-R20 UHF: R21-R69	PAL, SECAM NTSC3.58/4.43 (video input only)
Spanish	B/G/H, D/K	B/G/H VHF: E2-E12 UHF: E21-E69 Hyper: S1-S41 D/K VHF: R1-R20 UHF: R21-R69	PAL, SECAM NTSC3.58/4.43 (video input only)

MODEL	21R1A	21R1D	21R1E
Power Consumption	75W	75W	75 W

SPECIFICATIONS

Picture Tube

Hi-Black Trinitron

Approx. 55 cm (21 inches) (Approx. 51 cm picture measured diagonally) 100° deflection

Rear/Front Terminals

[REAR]

21-pin Euro connector (CENELEC standard)

Including audio/video input, RGB input

[FRONT]

€ 2 Video input - phono jack Audio inputs - phono jacks

Headphone jack - stereo minijack

Sound output

14Wx2 (music power)

7Wx2 (RMS)

Dimensions

517x472x489 mm approx.

Weight

Approx. 21.0 kg

Supplied accessories

RM-836 Remote Commander (1)

IEC designated batteries (2)

Other features

TELETEXT, Fasttext

TOP text (KV-21R1A and 21R1D only)

NICAM (KV-21R1E only)

[RM-836]

Remote control system

Power requirements

Dimensions

Weight

Infrared control

3V dc (2 batteries) R6 (size AA) Approx. 210x45x24 mm (w/h/d)

Approx. 90g

(Not including battery)


Design and specifications are subject to change without

notice.

Model name	KV-21R1A	KV-21R1D	KV-21R1E
PIP	OFF	OFF	OFF
MPIP	OFF	OFF	OFF
Rotation Coil	ON	ON	ON
VM Set	ON	ON	ON
Scart 1	ON	ON	ON
Scart 2	OFF	OFF	OFF
Front in (3)	ON	ON	ON
AKB in 16:9 mode	ON	ON	ON
TXT	ON	ON	ON
FLOF	ON	ON	ON
TOP	ON	ON	ON
Norm B/G/H	ON	ON	ON
Norm I	OFF	OFF	OFF
Norm D/K	OFF	ON	ON
Norm L	OFF	OFF	OFF
Language Preset	Italian	German	Spanish

21 pin connector (- 1)



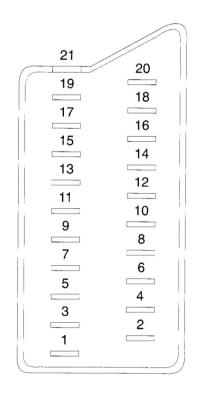

Pin No.	1	2	4	Signal	Signal Level
1	0	0	0	Audio output B (Right)	Standard level : 0.5V rms Output impedance : Less than 1k ohms*
2	0	0	0	Audio input B (Right)	Standard level : 0.5V rms Output impedance : More than 10k ohms*
3	0	0	0	Audio output A (Left)	Standard level : 0.5V rms Output impedance : Less than 1k ohm*
4	0	0	0	Ground (Audio)	
5	0	0	0	Ground (Blue)	
6	0	0	0	Audio input A (Left)	Standard level : 0.5V rms Output impedance : Less than 10k ohm*
7	0	•	•	Blue input	0.7 ± 3 dB, 75 ohms, positive
8	0	0	0	Function select (AV control)	High state (9.5 - 12V): Part mode Low state (0 - 2V): TV mode Input impedance: More10k ohms Input capacitance: Less than 2nF
9	0	0	0	Ground (Green)	
10	0	0	0	Open	
11	0	•	•	Green	
12	0	0	0	Open	
13	0	0	0	Ground (Red)	
14	0	0	0	Ground (Blanking)	
45	0	-	-	Red input	$0.7 \pm 3 dB$, 75 ohms, positive
15	-	0	0	(S signal) croma input	$0.7 \pm 3 dB$, 75 ohms, positive
16	0	•	•	Blanking input (Ys signal)	High state (1 - 3V) Low state (0 - 0.4V) Input impedance : 75 ohms
17	0	0	0	Ground (Video output)	
18	0	0	0	Ground (Video input)	
19	0	0	0	Video output	1V ± 3dB, 75ohms, positive sync : 0.3V (-3 + 10dB)
20	0	-	-	Video input	1V ± 3dB, 75ohms, positive sync : 0.3V (-3 + 10dB)
	-	0	0	Video input Y (S signal)	1V ± 3dB, 75ohms, positive sync : 0.3V (-3 + 10dB)
21	0	0	0	Common ground (plug, sheild)	

○ Connected ● Not Connected (Open) * at 20Hz - 20kHz

10SI RODE		<u> </u>		
-----------	--	----------	--	--

TABLE OF CONTENTS

Sec	ction	<u>Title</u>	<u>Page</u>	<u>Sec</u>	<u>tion</u>	<u>Title</u>	<u>Page</u>
1.	GEN	Getting Started	9 9 12 13	5.	5-1. 5-2. 5-3.	Block Diagram	29 29 33 39
2.	2-1. 2-2. 2-3.	ASSEMBLY Rear Cover Removal Service Position Picture Tube Removal	14		6-1.	CTRICAL PARTS LIST	
3.	3-1. 3-2. 3-3. 3-4.	-UP ADJUSTMENTS Beam Landing	17				
4.	4-1. 4-2. 4-3.	Electrical Adjustments Test Mode 2: BE-5 Self Diagnostic Software	21				

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.


WARNING!!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS.

THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK \(\hat{\Lambda}\) ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND, IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

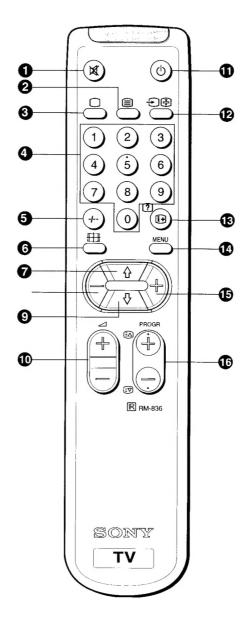

Getting Started

Please open the flaps at the front and at the back of the Instruction Manual for illustrations of the TV set and the Remote Commander. Letters in boxes refer to the buttons on the TV set, numbers in circles to the buttons on the Remote Commander.


Note: The illustrations in this instruction manual are based on the KV-25R1D model. You may find differences between these illustrations and your actual model.

Step 1

Connecting the Aerial


(If you connect a VCR, skip to step 2).

Connect an external aerial to the socket) J.

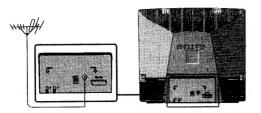

Step 2

Connecting a VCR

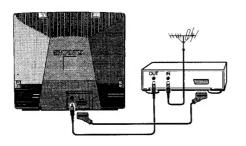

We recommend that you tune in the VCR signal to programme number "0". For details see "Presetting Channels Manually" on page 33.

Step 3

Connecting the Mains Plug

Connect the mains plug of the TV set to the electrical outlet (220-240 V AC, 50 Hz).

Step 4

Inserting the Batteries into the Remote Commander



Always remember to dispose of used batteries in an environmental friendly way.

Step 5

Remote Commander Overview

Refer to Symbol	Effect	Refer to Page
1 • ×	Sound on/off button	30
2 🖹	Teletext on button	37
3 O	TV button / TV power on Teletext off button	30 37
3 1 9, 0	Number buttons	30
6 -/	Double digit entering button	30
6 ₩	Screen Format	30
7, 8, 4, 4	MENU: Cursor buttons to operate Menu functions TELETEXT: Fastext / TOP Text buttons	31 37
9 ⊿+/-	Volume control	30
10 (b)	Standby button	30
1 - 2	Input mode button Teletext: Freezing the subpage	38 37
1	On screen display button Teletext: reveal button	30 37
13 MENU	Menu on/off button	31
16 PROGR +/- □ • • • • • • • • • • • • • • • • • • •	Programme buttons Teletext: Page up/down buttons	30 37

Step 6

Presetting Channels Automatically

TV searches for all available channels. If manual tuning is preferred see Menu option - Presetting Channels Manually.



- Depress power switch

 on TV set.
- Press and hold **D G** on TV set for 2 seconds. Auto tuning starts and screen shows.
- When Auto tuning stops, the programme position 1 is displayed.
- Programme names are automatically taken from Teletext if available. With that function, you can easily identify which channel you are watching.

TV Operation

This section explains functions used whilst watching TV. Most operations are carried out using the Remote Commander (numbers in circles). All basic functions are also available on the TV set (letters in boxes).

То	Press
Switch on	• ① A on TV
Switch off temporarily	• \circlearrowleft \blacksquare TV is now in standby mode, \circlearrowleft indicator \blacksquare on TV lights.
Switch on again	• 🔾 3, PROGR +/- 🚯 🕻 or any number button 4
Switch off completely	 ① A on TV To save energy we recommend switching off completely when TV is not in use.
Select programmes	• PROGR +/- 6 C or number buttons 4 For double digit numbers press -/ 5 then the number e.g. For 23, press -/ 6 then 2 and 3.
Display the programme number	 • • •
Adjust the volume	• <u></u> +/-
Mute the sound	• 🌣 🕦 Press again to restore sound.
View video input	• 🕣 🛈 🖪 Press again to return to TV programme.
View programmes in 16:9 mode	• ## 6 Press again to return to 4:3 mode.

MENU Operation

Use the following buttons on Remote Commander to control Menu screen.

1 Press MENU 18 to switch the Menu Screen on/off.



2 Use the coloured buttons as follows:



Red – **8** decrease/select



Yellow + 10 increase/confirm(OK)

Blue **15** Scroll down

Adjusting the Picture and Sound

1 Press MENU **3**.



MENU

- 2 Press green **7** or blue **6** to select **●** (Picture) or ↑ (Sound) and press yellow **6** (OK) to confirm.
- **3** Press green **7** or blue **15** to select the item you wish to change.

PICTURE CONTROL

Symbol	Item	- I	Effect +
•	• Picture	Less	More
3	 Colour 	Less	More
\(\rightarrow	 Brightness 	Darker	Brighter
(Sharpness 	Softer	Sharper
~ 2	Hue control (only for NTSC)	Reddish video signals)	Greenish



SOUND CONTROL

Symbol	Item	- Effect	+
	• MONO/STEREO	A: channel 1 Stereo/Mono	B: channel 2
&	 Treble 	Less	More
2:	• Bass	Less	More
	 Balance 	More left	More Right
Ω	 Headphones: 		
	Volume	Less	More
	MONO/STEREO	A: channel 1	B: channel 2

Stereo/Mono



- 4 Press red **3** or yellow **1** to change levels.
- **5** Press MENU **13** to return to normal TV screen.
- To reset to factory preset picture levels, press green **⑦** or blue **⑤** to select → ← and press yellow (OK) **⑥**.
- To return to the Main menu, select → and press yellow.
- When receiving a STEREO or Bilingual programme:
- 1. Stereo/Monoaural: on the screen appears □□ or □□.
- 2. Bilingual: on the screen appears DAC or DBC.

Using the Sleep Timer

The TV may be set to switch to the standby mode automatically after a length of time chosen by you. You may set the time in 30 minutes steps up to 4 hours.

- 1 Press MENU 13.
- 2 Press green 7 or blue 6 to select 🖰
- **3** Press red **3** or yellow **4** to set time delay. 0.00 (OFF) 0.30 1.00 1.30 4.00
- 4 Press MENU **3** to return to normal TV screen. When watching TV, press **1 2** to display time remaining.

Presetting Channels Manually

Up to 60 programme positions are available for presetting channels.

- 1 Press MENU ®.
- 2 Press green **②** or blue **③** to select **⇒** and press yellow (OK) **⑥**.

3 Select programme number using PROGR +/- 16 or the number buttons 4.

PROGRAMMENT OF THE PROGRAMMENT O

- 4 Press green **7** or blue **15** to select tuning bar (IIIII...) and press red **3** or yellow **6** to start channel search. When a channel is found the tuning bar stops moving and you see the picture.
- 5 If you want to store, press green **7** or blue **1** to select ♦ and press yellow (OK) **1**. If you don't want to store, press red **3** or yellow **1** to continue search.
- **6** Repeat steps 3 to 5 for all other channels.
- **7** Press MENU **18** to return to normal TV screen.

Skipping Programme Positions

You can skip unused programme positions when selecting channels with the PROGR +/- (b) buttons. You can still select them, however, using the number buttons (a).

- 1 Press MENU **3**.
- 2 Press green **⑤** or blue **⑥** to select **令** and press yellow **⑥**.
- Select programme number you want to skip using PROGR +/- **6 C** or number buttons **4**.
- 4 Press green **7** or blue **15** to select Coo and press yellow (OK) **10**.
- **5** Press green **?** or blue **⑤** to select ♦ and press yellow (OK) **⑥** to store.
- **6** Repeat steps 3 to 5 for other unused programme positions.
- 7 Press MENU 13 to return to normal TV screen.

Fine-Tuning Channels

You can fine tune a stored channel.

- 1 Select the channel you wish to fine tune.
- 2 Press MENU 13.
- **3** Press green **7** or blue **6** button to select **⇒** and press yellow (OK) **6**.
- 4 Press green ⑦ or blue ⑤ to select ←F → and use red ⑤ or yellow ⑥ to adjust tuning.
- 5 Press green **7** or blue **1** to select ♦ and press yellow (OK) **1** to store.
- **6** Press MENU **18** to return to normal TV screen.

Exchanging Programme Positions

After tuning you may wish to rearrange the programme positions.

- 1 Press MENU 13.
- 2 Press green **3** or blue **13** button to select **3** and press yellow (OK) **13**.



Press green or blue to select PROGR and press yellow (OK)



4 Press red 3 or yellow 4 to select the first programme position.



- **5** Press the blue **1** button.
- **6** Press red **3** or yellow **4** to select the second programme position.
- 7 Press blue 6 to select 4 and press yellow (OK) 6 to exchange.
- **8** Repeat steps 4 to 7 for other programme positions.
- **9** Press MENU **13** to return to normal TV screen.

Teletext Operation

Viewing Teletext

Teletext is an information service broadcast by TV stations.

- 1 Select the channel which carries the teletext service you wish to receive.
- 2 Press 2 to switch on teletext.
- 3 Input three digits for the page number using the programme number buttons 4 or 1/2 1/2 1/2 (next or previous page).
- 4 Press 3 to switch off teletext.

Teletext errors may occur if the broadcasting signals are weak.

Using Other Teletext Functions

Superimposing teletext on the TV

Press \blacksquare 2 once in teletext mode or twice in TV mode to superimpose teletext on the TV screen.

Press (2) again to cancel superimposing.



Freezing a teletext subpage

Press ((HOLD) to freeze the subpage. Freezing the page prevents the information that is displayed from being updated.

Press (to cancel HOLD and allow update to continue.

Revealing concealed information (eg: answers to a quiz).

Press ? **12** to reveal information. Press again to conceal the information.

Using colour buttons to access pages (Fastext)

When the colour coded menu appears at the bottom of a page, press the colour button (green, red, yellow or blue) **736** to access the corresponding page.

Connecting Optional Equipment

There is a wide range of optional equipment you can connect to your TV. Refer to the illustrations on the back flap page of this manual.

Symbol

Acceptable input signals

Ð/Ð2 **H** 🛮

 Normal audio/video through the phono jacks.

⊕/→ÖK

• Normal audio/video and RGB through Euro AV connector.

Selecting the Input

Press • • • • repeatedly to select the desired video source.

Press 3 to return to normal TV operation.

Connecting Headphones

Plug in the headphones to the Ω **G** socket on the front of the TV set.

Troubleshooting

Here are some simple solutions to the problems which affect the picture and sound.


Problem	Solution
No picture, screen is dark, no sound	 Plug the TV in. Press ② A on the TV. If ७ indicator B is on press ③ 3 or the programme number ④ on the remote commander. Check the aerial connection. Check that the video source is on. Turn the TV off for 3 or 4 seconds and then turn it on again using ③ A.
Poor or no picture (screen is dark, sound is good)	Press MENU and adjust brightness picture and colour balance level.
Picture moved to the left when watching a RGB video source.	• Press ① repeatedly to select ○ .
Good picture, no sound	 Adjust the volume ∠ +/- ⑤ D. Disconnect any headphones. If ௸ is displayed on the screen, press ௸ ①.
No colour on colour programmes	 Press MENU 13 and adjust colour balance. Press MENU 13 and reset to factory settings.
Distorted picture when changing programmes or selecting teletext	• Turn off the equipment connected to the 21-pin connector K .
Remote commander does not function	Replace the batteries.

If you continue to have these problems, have your TV serviced by qualified personnel.


[•] NEVER open the casing yourself.

SECTION 2 DISASSEMBLY


2-1. REAR COVER REMOVAL

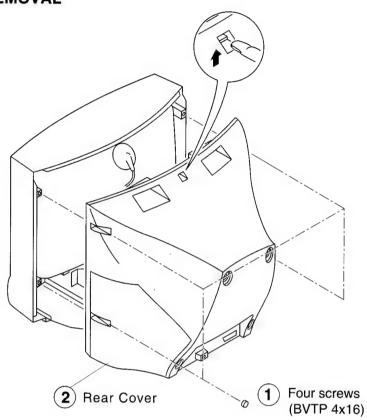

2-2. SERVICE POSITION

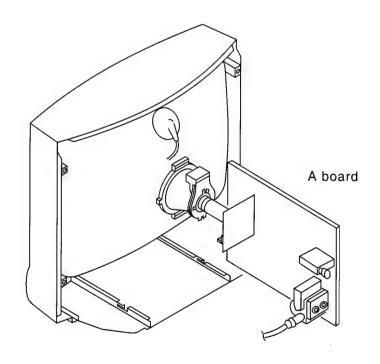


2-3. PICTURE TUBE REMOVAL

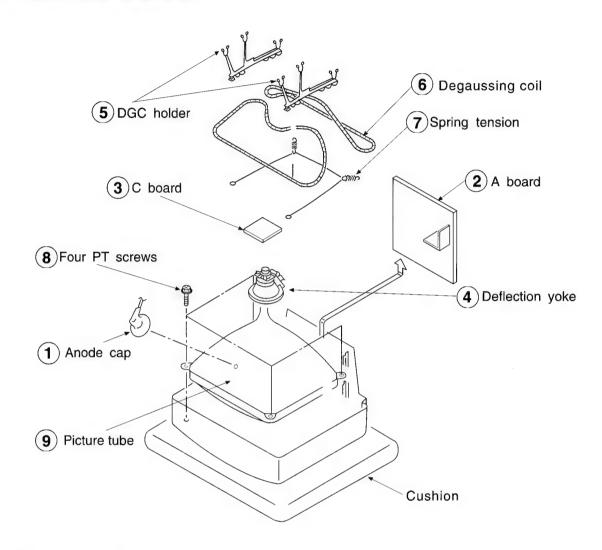


REMOVAL OF ANODE-CAP

Note: Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT, after removing the anode.


* REMOVING PROCEDURES.

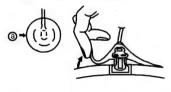

1 Turn up one side of the rubber cap in the direction indicated by the arrow a

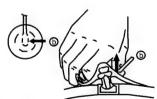

② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ⑤

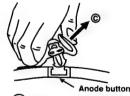

When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling it up in the direction of the arrow ©

HOW TO HANDLE AN ANODE-CAP

- 1 Don't damage the surface of anode-cap with sharp shaped material!
- (2) Don't press the rubber hardly not to hurt inside of anode-caps!

 A metal fitting called as shatter-hook terminal is built into the rubber.
- 3 Don't turn the foot of rubber over hardly!
 The shatter-hook terminal will stick out or damage the rubber.





SECTION 3 SET-UP ADJUSTMENTS

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed.
- These adjustments should be performed with the rated power supply voltage, unless otherwise noted.

The Contrast and Brightness controls should be set as follows unless otherwise noted:

Perform the adjustments in the following order:

- 1. Beam Landing
- 2. Convergence
- 3. Screen (G2), Drive, White Balance, Sub Colour and Sub Brightness.
- 4. Focus

Note: Test Equipment Required.

- 1. Colour bar/Pattern Generator
- 2. Degausser
- 3. DC Power Supply
- 4. Digital multimeter
- 5. Oscilloscope

Preparation:

- In order to reduce the influence of external magnetic forces on the picture tube, face the TV set in an easterly or westerly direction.
- Turn the power switch for the unit ON and erase the magnetic force using a degausser.

3-1. BEAM LANDING

Demagnetize with a degausser.

- Input an all white raster signal from the pattern generator.
 CONTRAST BRIGHTNESS normal
- 2. Switch the raster signal of the pattern generator to Red.
- 3. Move the deflection yoke backward, and adjust with the purity control so that Red is at the centre and the Blue and Green are evenly spaced at the sides. see (Fig. 3-1 3-3)
- 4. Move the deflection yoke forward, and adjust so that the entire screen becomes Red. (Fig. 3-1)
- 5. Switch the raster signal to Blue and then Green to confirm the condition.
- 6. When the position of the deflection yoke has been determined, tighten it with the deflection yoke mounting screw
- 7. When the landing at the corners is not correct, adjust by using disk magnets. (Fig. 3-4)

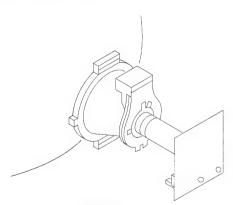


Fig. 3-1

Fig. 3-2

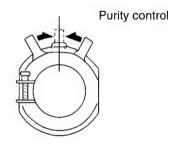


Fig. 3-3


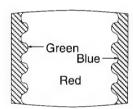


Fig. 3-4

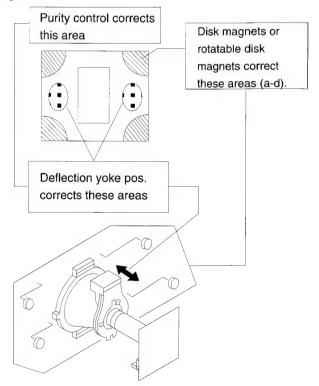


3-2. CONVERGENCE


Preparation:

- Before starting, perform FOCUS, H.SIZE, and V.SIZE adjustments.
- Set the BRIGHTNESS control to minimum.
- Input a dot pattern from the pattern generator.


(1) Horizontal and Vertical Static Convergence

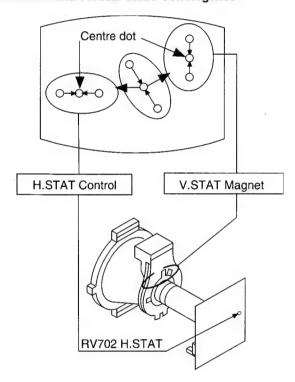


- 1. Adjust the H.STAT control to converge the Red, Green and Blue dots at the centre of the screen. (Horizontal movement)
- 2. Adjust the V.STAT magnet to converge the Red, Green and Blue dots at the centre of the screen. (Vertical movement)
- If the horizontal dots cannot coincide with variable range of the H.STAT convergence, adjust together with the V.STAT convergence while tracking.
 - (Adjust the convergence by tilting the V.STAT convergence or by opening or closing the V.STAT convergence.)

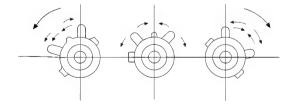

3. When the V.STAT magnet is moved in the direction of the a and b arrows, the Red, Green and Blue dots move as shown below.

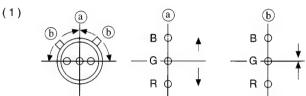


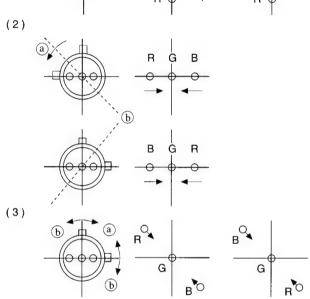

If the Red and Blue dots do not converge with the Green dots, perform the following steps.

- 1. Move the BMC magnet (a) to correct for insufficient H.static convergence.
- 2. Rotate the BMC magnet (b) to correct for insufficient V.static convergence.

In either case, repeat the Beam Landing Adjustment.

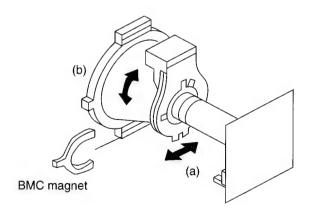


(2) Dynamic Convergence Adjustment


Preparation:


- Before starting, perform the Horizontal and Vertical static convergence adjustment.
- 1. Slightly loosen the deflection yoke screw.
- 2. Remove the deflection yoke spacers.

- 3. Move the deflection yoke for best convergence as shown below.
- 4. Tighten the deflection yoke screw.
- 5. Install the deflection yoke spacers.

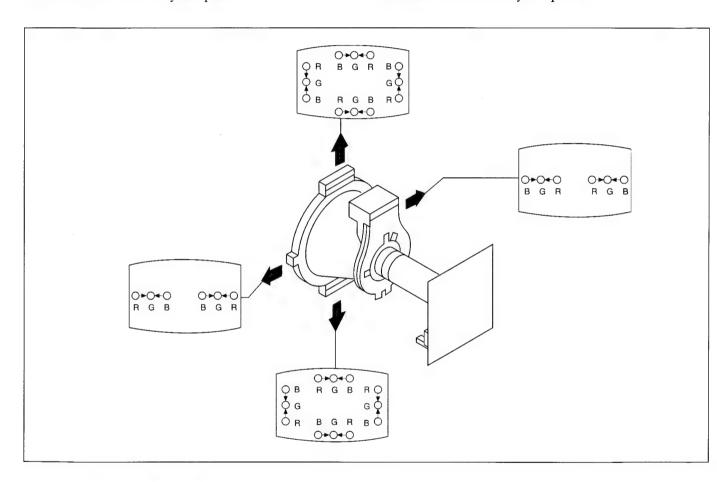


(3) Screen-corner Convergence.

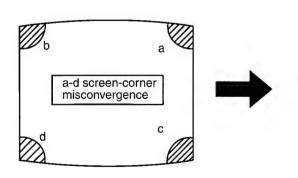

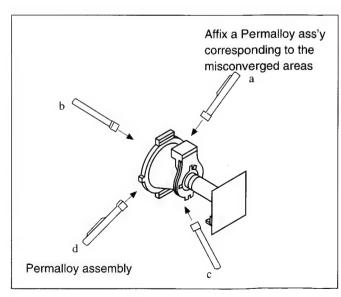

3-3. SCREEN(G2), DRIVE, WHITE BALANCE, SUB COLOUR and SUB BRIGHTNESS.

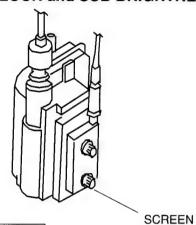


Screen (G2) setting

- 1. Input a 0 IRE (Black Level) signal from the pattern generator.
- 2. Enter into the Service Mode "Test" Test" and 38.
- 3. Adjust the SCREEN VR until the Down arrow is displayed.
- 4. Adjust the SCREEN VR until the Down arrow just disappears.
- 5. Press the TV Button on the Remote Commander to store the data.

Drive Level

- 1. Input a Video signal containing a small area of 100% white on a black background.
- 2. Connect an oscilloscope to Pin 10 of J701 (R OUT) on the C Board.
- 3. Set the Picture to maximum using "Test" Test" and 01.
- 4. Enter into the Service mode (Adjust Menu).
- 5. Using the Blue and Green buttons select "RED HWB".
- 6. Using the Red and Yellow buttons on the Remote Commander adjust until the oscilloscope waveform has an amplitude of 85V.

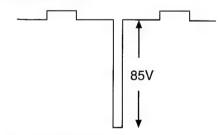


White Balance Adjustment

- 1. Input an all white pattern from the pattern generator.
- Adjust the Colour and Brightness controls to the standard level.
- 3. Enter into the Service Mode.
- 4. Adjust the Green HWB and Blue HWB so that the White Balance becomes optimum.

Sub Colour Adjustment

- 1. Input a PAL colour bar pattern from the pattern generator.
- 2. Connect an oscilloscope to Pin (8) of J701 (B OUT) on the C Board.
- 3. Enter into the Service Mode "Test" Test" and 22.
- 4. Using the Red and Yellow buttons on the Remote Commander adjust until the oscilloscope waveform becomes as follows:

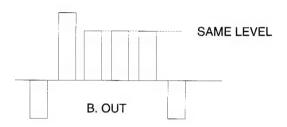

Note: If the TV is able to receive PAL and SECAM transmissions, repeat the above procedure using a Secam colour bar signal.


Sub Brightness Adjustment

- 1. Input a Philips pattern from the pattern generator.
- 2. Enter into the Service Mode "Test" "Test" and 23.
- 3. Using the Red and Yellow buttons on the Remote Commander adjust until the 0 IRE of the grey scale and the cut off are only slightly visible on the screen.

3-4. FOCUS

- 1. Receive a television broadcast.
- 2. Normalize the picture setting.
- Adjust the focus control on the flyback transformer to focus the screen centre area properly.
 Bring only the centre area of the screen into focus, the magenta-ring appears on the screen. In this case, adjust the

focus to optimize the screen uniformly.

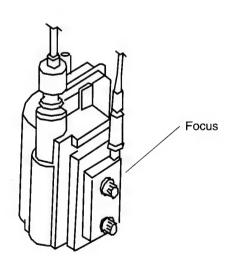


SECTION 4 CIRCUIT ADJUSTMENTS

4-1. ELECTRICAL ADJUSTMENTS

Service adjustment to this model can be performed with the supplied Remote Control Commander RM-836.


HOW TO ENTER INTO SERVICE MODE

- Turn on the main power of the set and enter into stand-by mode.
- 2. Press the following sequence of buttons on the Remote Control Commander.

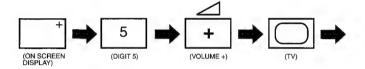

"TT-- " will appear in the top right corner of the screen Other status information will also be displayed.

3. Press the MENU button on the Remote Commander to obtain the menu on the screen.

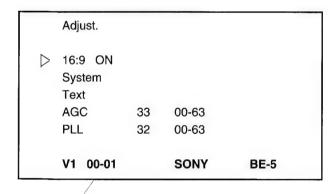

Software version

- 4. Press the Blue (Next) or Green (previous) buttons to select the adjustment item from the table.
- Press the Yellow (+) or Red (-) buttons to change the data as required.
- Turn off the power to quit the service mode when adjustments are completed.

Range of adjustments available from the on screen menu system.

Adjustment	Set	Range
V size	21	0 - 63
V breth	32	0 - 63
Pin amp	12	0 - 63
Para. tilt	43	0 - 63
V linear	42	0 - 63
Corner corr	05	0 - 63
H size	34	0 - 63
V pos	00	0 - 63
H phase	42	0 - 63
Blue	26	0 - 63
Green	32	0 - 63
Red	42	0 - 63
HV blk 1	00	0 - 63
HV blk 2	00	0 - 63
V cent	06	0 - 63
Zwei max	36	0 - 63
zwei min	18	0 - 63

4-2. TEST MODE 2:

TT -- Mode is available by pressing the Test button twice, O.S.D 'TT --' appears. The functions described below are available by pressing two digits. To release the 'TT --' mode, press 0 twice, press 'TEST', press 'TV' or switch the TV into Stand-by mode.

00	Switch 'TT' Mode off.
01	Set picture level to maximum.
02	Set picture level to minimum.
03 .	Set volume to 35%.
04	Set volume to 50%.
05	Set volume to 65%.
06	Set volume to 80%.
07	Ageing condition (picture max., brightness max.).
08	Shipping condition (Analog values are RESET to factory setting, Prog 1 is selected, TT—mode switched off, Vol = 35%).
09	Dummy.
10	No function.
11	Dummy
12	Dummy.
13	Dummy.
14	Dummy.
15	Read factory setting from ROM to NVM - Reads Volume, Brightness, Picture, Hue, Sharpness and Colour values from ROM to the actual used values (Last Power Memory).
16	Save actual used values as reset values.
17	Enable / Disable Sharpness Operation.
18	Dummy.
19	RGB priority.
20	No function.
21	No function.
22	Sub Colour (Pal / Secam Different Stores)
23	Sub Brightness.
24	RGB priority on.

25	Destination Systems DKE.
26	Destination Systems I/U.
27	Destination System I/I'.
28	Destination BG only.
29	Dummy.
30-31	No function.
32	Picture level to 50%
33-35	No function.
36	Audio mute ON.
37	OSD off.
38	Enter G2 adjustment mode.
39	Sub-brightness
40	No function.
41	Re-initialise NVM.
42	Dummy.
43	Re-initialise Geometry settings.
44-47	Dummy
48	Set NVM testbyte to 44h in NVM.
49	Erase NVM testbyte
50	No function.
51	Toggle 60/100 programs.

Note : For Test Modes 41 - 51, it is necessary to ensure that the TV is set to Prog 59.

DEFLECTION SYSTEM ADJUSTMENT


- 1. Enter into the service mode.
- 2. Using the Blue or Green buttons select the Adjust item.
- 3. Press the Yellow button to enter the adjustment submenu.
- 4. Select and adjust each item in order to obtain the optimum image.

See Note on page 23

Adjustment	Set	Range
V size	21	0 - 63
V breth	32	0 - 63
Pin amp	12	0 - 63
Para. tilt	43	0 - 63
V linear	42	0 - 63
Corner corr	05	0 - 63
H size	34	0 - 63
V pos	00	0 - 63
H phase	42	0 - 63
Blue	26	0 - 63
Green	32	0 - 63
Red	42	0 - 63
HV blk 1	00	0 - 63
HV blk 2	00	0 - 63
V cent	06	0 - 63
Zwei max	36	0 - 63
zwei min	18	0 - 63

AGC ADJUSTMENT

- 1. Receive a signal of 63dBuV / 75 ohm terminated via the tuner socket.
- 2. Measure the voltage at AGC TP.
- 3. Adjust TU101 RV to obtain a voltage of 3.0 ± 0.3 V.

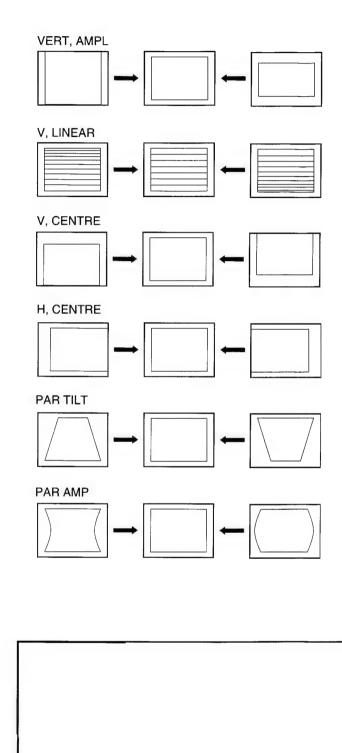

- A Board Component Side -

AGC TP

TU101

4-3. BE-5 SELF DIAGNOSTIC SOFTWARE


The identification of errors within the BE-5 chassis is triggered in 1 of 2 ways: -1: Bus busy or 2: Device failure to respond to I^2C . In the event of one of these situations arising the software will first try to release the Bus if busy (Failure to do sn will report with a continuous flashing LED) and then communicate with each relevant device in turn to establish if a device is faulty. If a device is found to be faulty the relevant device number will be displayed through the LED by a Series of flashes which must be counted (See Table 1), Non fatal errors are reported with this method.

If a fatal error is found, the set will simply stay in whichever state it was when the error occurred, but if a non fatal error occurs the set will try to continue to operate.

To check error code it is necessary to use the TV error display part number S-188-900-10.

Table 1

No of Flashes	Error Codes	Meaning	
2	30	IC301 not acknowledging I ² C transmission, NVM OK.	
3	31	IC301 FAULT (Not OK) - flags	
4	32	IC301 - No H Flyback	
5	40	IC301 - Stack Overflow.	
6	90	Overvoltage / Overcurrent Protection (Pin 52) high.	
7	10	IC002 not acknowledging †2C transmission, IC301 OK.	
8	20	IC002 and IC301 - No I ² C acknowledgment.	
9	01	General I ² C Error (SDA or SCL being held low)	
		(IC301, IC001, IC002, CN001)	

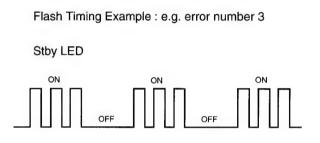


Note: Deflection System Adjustments should not be carried out whilst using an NTSC (60Hz) signal, or if the signal is unlocked.


KV-21R1


МЕМО	
	
-	
	**.

5-1. BLOCK DIAGRAM

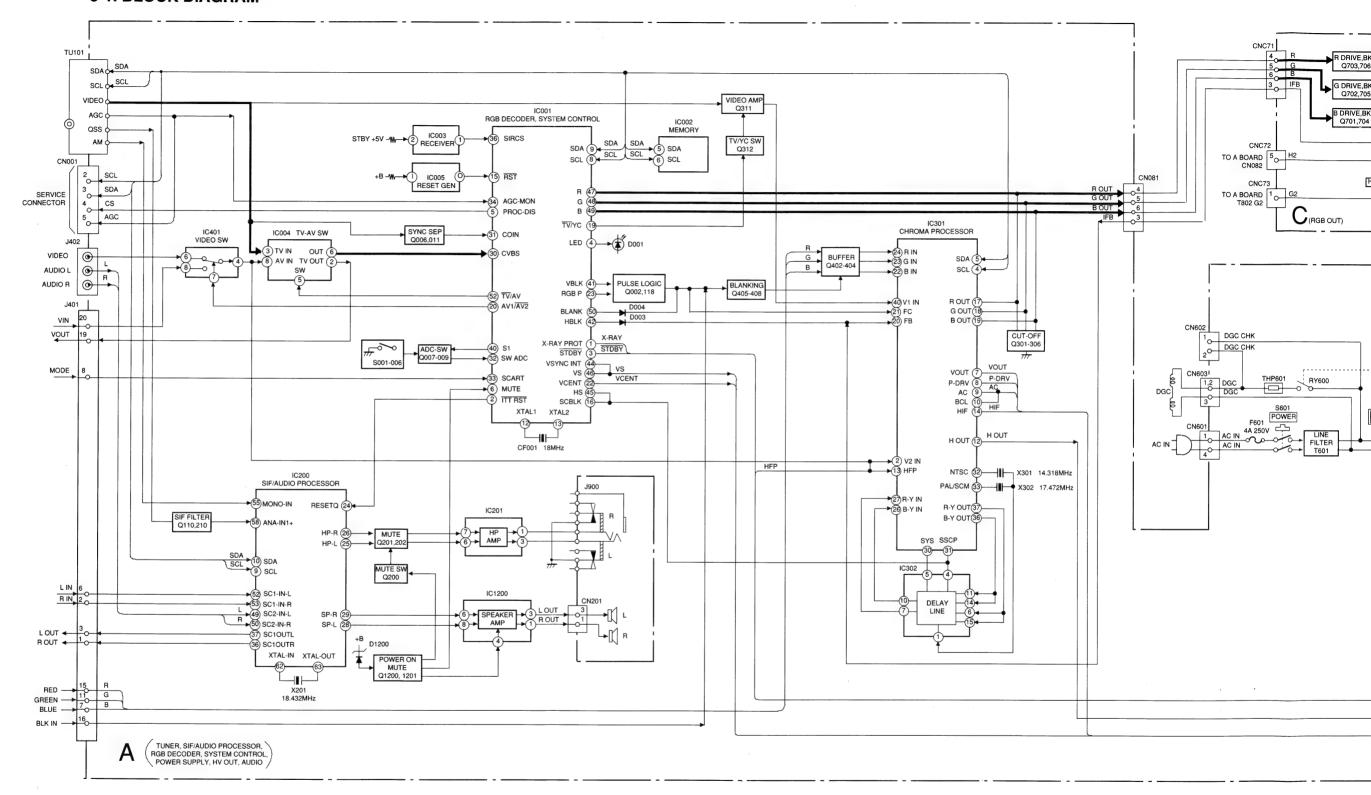


KV-21R1

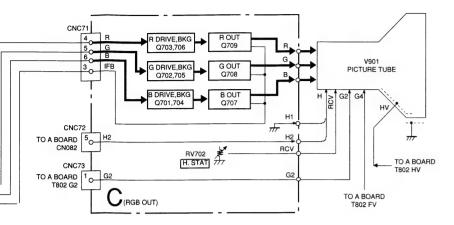

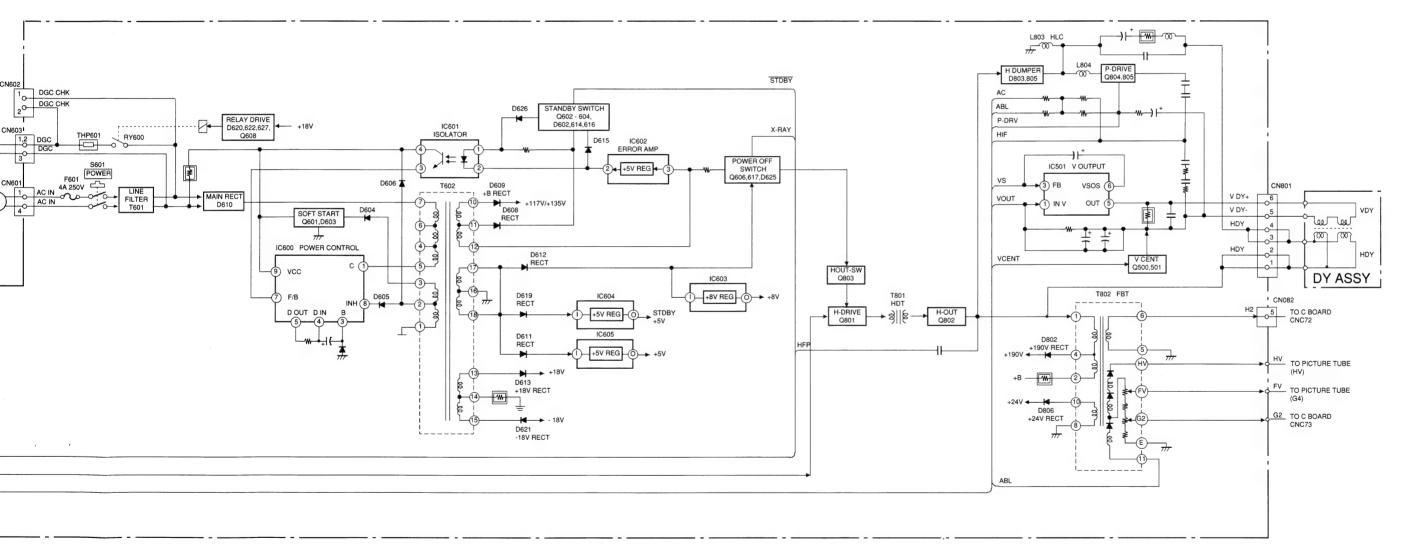

5-2. CIRCUIT BOARDS LOCATION

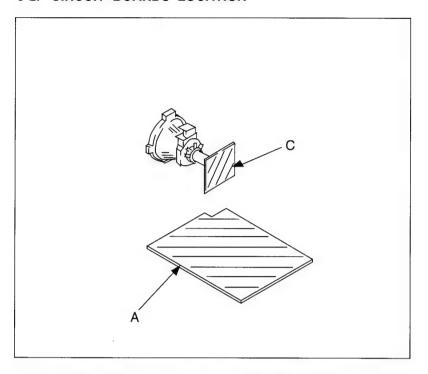

5-3. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

Note:

- All capacitors are in µF unless otherwise noted. pF: µµF 50WV or less are not indicated except for electrolytic and tantalums.
- All resistors are in ohms.

k = 1000, M = 1000K

Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch: 5 mm Rating electrical power 4 W

: nonflammable resistor.

: internal component.

: panel designation, or adjustment for repair.

All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

: earth - ground. H: earth - chassis.

: no mounted.

Note: The components identified by shading and marked are critical for safety. Replace only with the part number specified.

Reference information

: RN

RESISTOR

	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
	: RW	NONFLAMMABLE WIREWOUND
	$: \times$	ADJUSTABLE RESISTOR
COIL	: LF-8L	MICRO INDUCTOR

METAL FILM

CAPACITOR : TA **TANTALUM** : PS STYROL : PP

POLYPROPYLENE

: PT **MYLAR**

: MPS METALIZED POLYESTER : MPP METALIZED POLYPROPYLENE

: ALB **BIPOLAR**

: ALT HIGH TEMPERATURE

: ALR HIGH RIPPLE


- Readings are taken with a colour-bar signal input.
- Readings are taken with 10M digital multimeter.
- Voltages are dc with respect to ground unless otherwise noted.
- Voltage variations may be noted due to normal production tolerances.
- All voltages are in V.
- Circled numbers are waveform references.

: B+ bus.

: signal path. (RF)

A BOARD

IC		DIOI	DE
IC001 IC002 IC003 IC004 IC200 IC201 IC301 IC302 IC401 IC501 IC600 IC601 IC602 IC603 IC604 IC605 IC1200	G-3 H-3 C-1 F-2 F-2 H-10 G-11 I-4 J-6 D-9 C-5 D-3 E-6 F-6 E-2 G-7	D001 D002 D003 D004 D005 D006 D007 D011 D301 D302 D401 D402 D403 D404 D405 D406 D406 D407 D408	D-1 F-11 G-5 F-3 G-4 G-3 E-8 H-4 H-12 H-12 H-13 G-12 G-12 I-12
TRANSIS		D410 D412	I-12 J-2
Q002 Q006 Q007 Q008 Q009 Q011 Q012 Q013 Q014 Q107 Q110 Q118 Q200 Q201 Q202 Q204 Q205 Q210 Q300 Q301 Q302 Q303 Q304 Q305 Q310 Q301 Q302 Q403 Q404 Q405 Q406 Q407 Q408 Q500 Q501 Q601 Q602 Q603 Q604 Q606 Q608 Q617 Q801 Q802 Q803 Q804 Q805 Q1200 Q1201	F-3 F-10 F-1 F-1 F-1 F-1 F-1 F-1 F-1 G-9 G-3 G-3 G-3 G-10 F-11 G-12 H-7 G-10 H-4 I-5 I-5 I-5 I-5 I-5 I-5 I-2 H-12 H-12 G-12 E-12 E-12 E-12 F-1 F-1 F-1 H-17 G-17 G-18 H-18 H-18 H-18 H-18 H-18 H-18 H-18 H	D415 D416 D417 D416 D417 D501 D602 D603 D604 D605 D606 D607 D608 D609 D610 D611 D612 D613 D614 D615 D616 D617 D619 D620 D621 D622 D625 D626 D627 D801 D802 D803 D805 D806 D807 D809 D1200	H-12 I-10 I-10 C-8 E-3 B-4 C-4 C-5 C-4 E-5 E-6 A-3 F-3 E-3 E-3 E-7 F-3 A-7 F-7 E-4 A-7 F-7 E-8 D-10 A-12 C-7 A-11 I-7

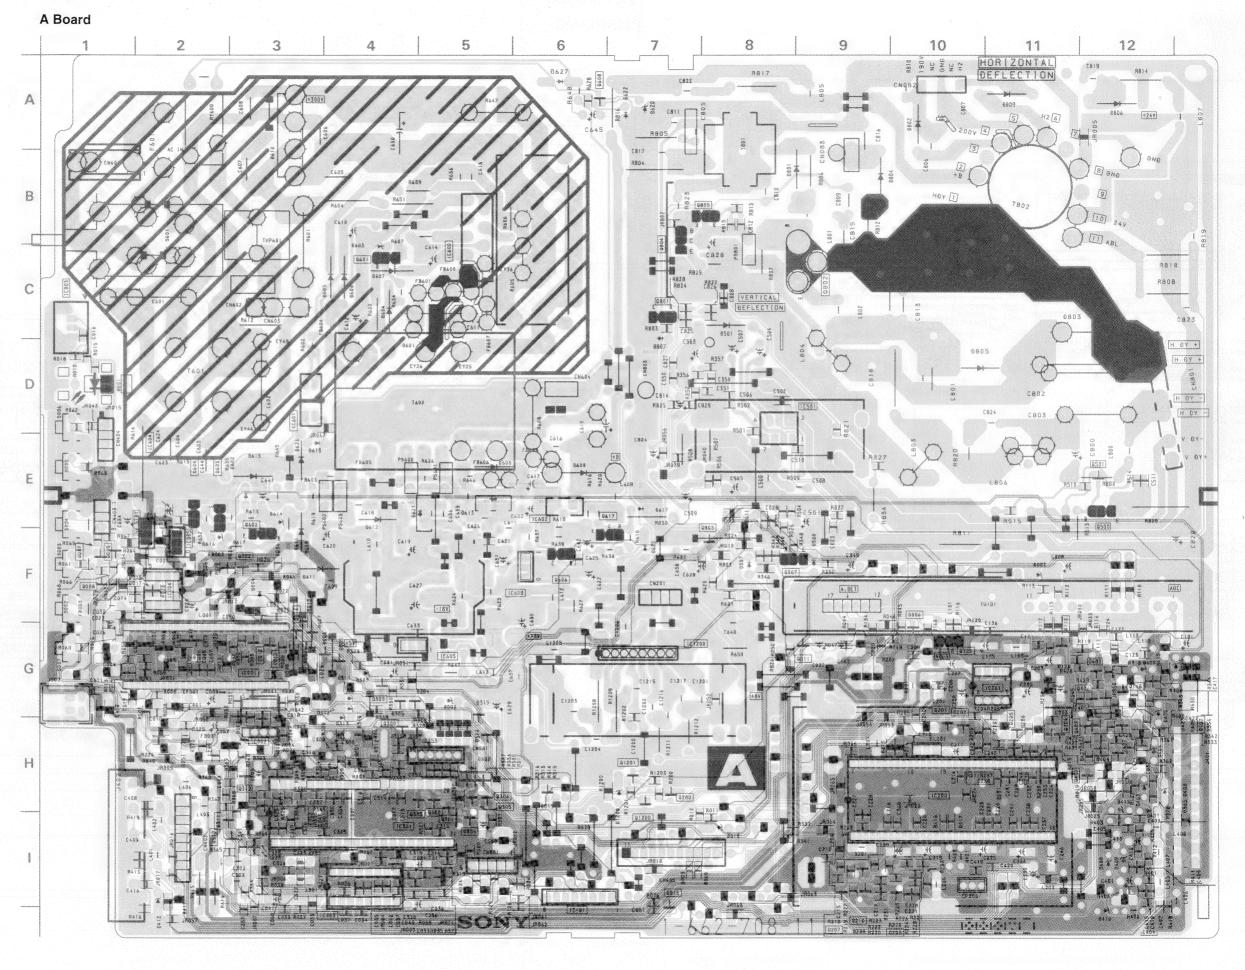



NOTE:

Pin No

2

4

6-7

8 10-11

13 14-15

16

4

6

8

2

3

5

2

4

5

The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

> Voltage (V) 1.6

> > 4.7

1.3

1.4

0.2

1.4 4.7

1.1

1.6

2.1

3.0

2.7

3.0

28.3

1.4

20.0

28.6 2.6

15.8

7.0


-16.0


A BOARD IC VOLTAGE TABLE


		IC Vol	tage Table
Ref No	Pin No	Voltage (V)	Ref N
	2	2.0	-
	3	2.2	
10004	6	1.9	
IC004	7	5.0	1
	8	1.8	IC302
	7	4.8	1
	9	3.1	_
	10	3.1	_
	18	4.8	
	24	4.5	
	31-32	3.8	1
	36-37	3.8	IC401
	38	7.0	
	39	8.0	
IC200	40	7.0	
	42-45	3.8	IC501
	49-50	3.8	1
	52-53	3.8	1
	54	2.6	-
	55	3.8	IC120
	57	4.8	
	58-59	1.5	
	62-63	2.4	
	1	3.5	┨
	2	8.0	1
IC201	3	3.5	1
	5	0.5	1
	8	0.5	1
	1	1.6	1
	2	0.8	
	3	1.3	1
	4-5	3.3	1
	6	0.9	-
	7	1.5	1
	8	1.0	-
	9	1.3	1
	10	2.3	
	11	1.6	1
	12	0.3	1
	13	0.4	1
	14	1.0	1
	15	2.1	1
IC301	17-19	2.4	1
	20	3.1	1
	22-23	3.0	-
	24	2.9	-
	26-27	3.1	-
	28	1.0	
	31	1.3	1
	32-33	1.8	1
	35	4.7	
	36	2.5	
	37	2.4	
	38	0.8	-
-	39	3.0	_
-	40		-
	70	2.8	


A BOARD TRANSISTOR TABLE

Т	Transistor Voltage Table			
Ref No	B Base	C Collector	E Emitter	
Q002	-	5.0	-	
Q006	4.6	0.7	4.8	
Q007	-	5.0	0	
Q008	5.0	5.0	4.5	
Q009	0.1	5.0	4.5	
Q011	0.6	5.0	0	
Q012	-	5.0	-	
Q013	-	5.0	-	
Q014	-	5.0	-	
Q110	4.6	8.0	4.0	
Q118	-	-	0	
Q201	-	-	0	
Q202	-	-	0	
Q204	4.7	8.0	4.0	
Q205	4.6	8.0	4.0	
Q210	3.5	8.0	2.9	
Q300	0.3	0.6	0	
Q301	0	2.0	0	
Q302	0	2.1	0	
Q303	0	2.2	0	
Q304	0	2.0	0	
Q305	0	2.1	0	
Q306	0	2.2	0	
Q310	1.7	5.0	3.0	
Q311	3.6	5.0	3.0	
Q312	-0.2	-	0	
Q403	-	-	-	
Q404	-	-	-	
Q500	5.4	19.7	4.8	
Q501	0.6	5.4	0	
Q601	-0.3	-2.2	-2.6	
Q602	68.0	8.0	68.4	
Q603	0	67.7	0	
Q604	0.6	0	0	
Q608	-	15.8	0	
Q801	0	120	0	
Q802	-0.2	120	0	
Q803	0.1	0.6	0	
Q804	0.5	16.0	-	
Q805	1.0	16.0	0.5	
Q1201	3.5	7.0	2.8	

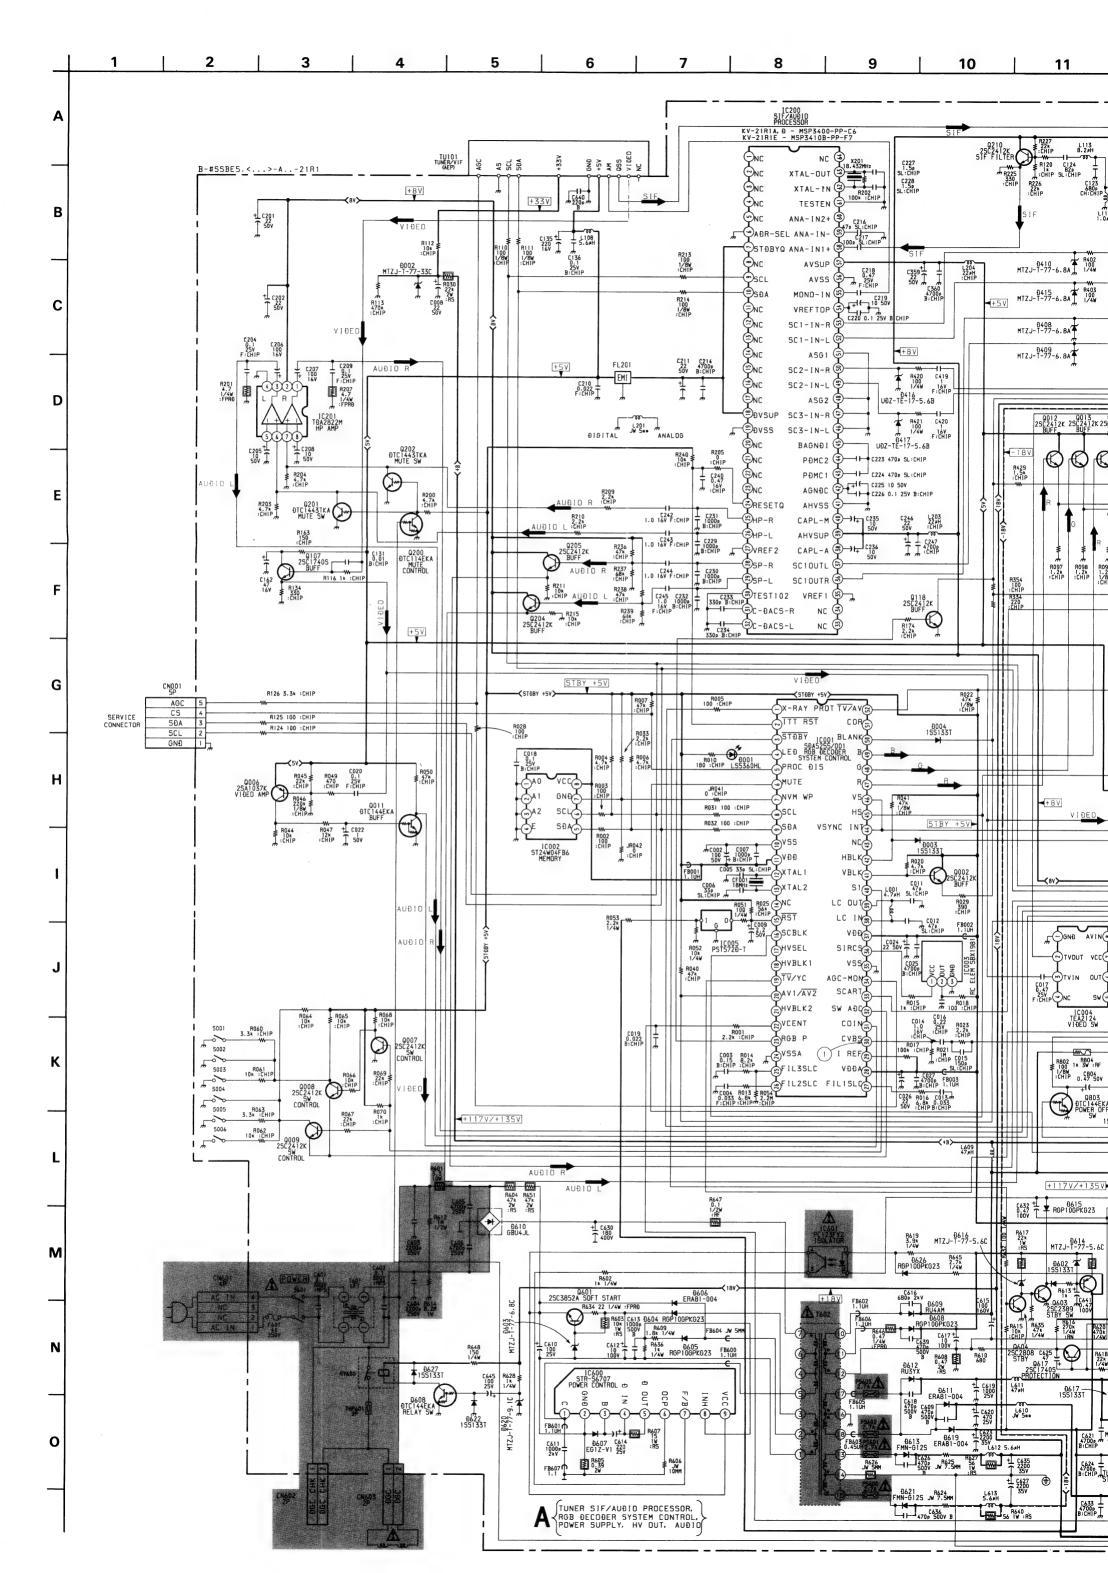


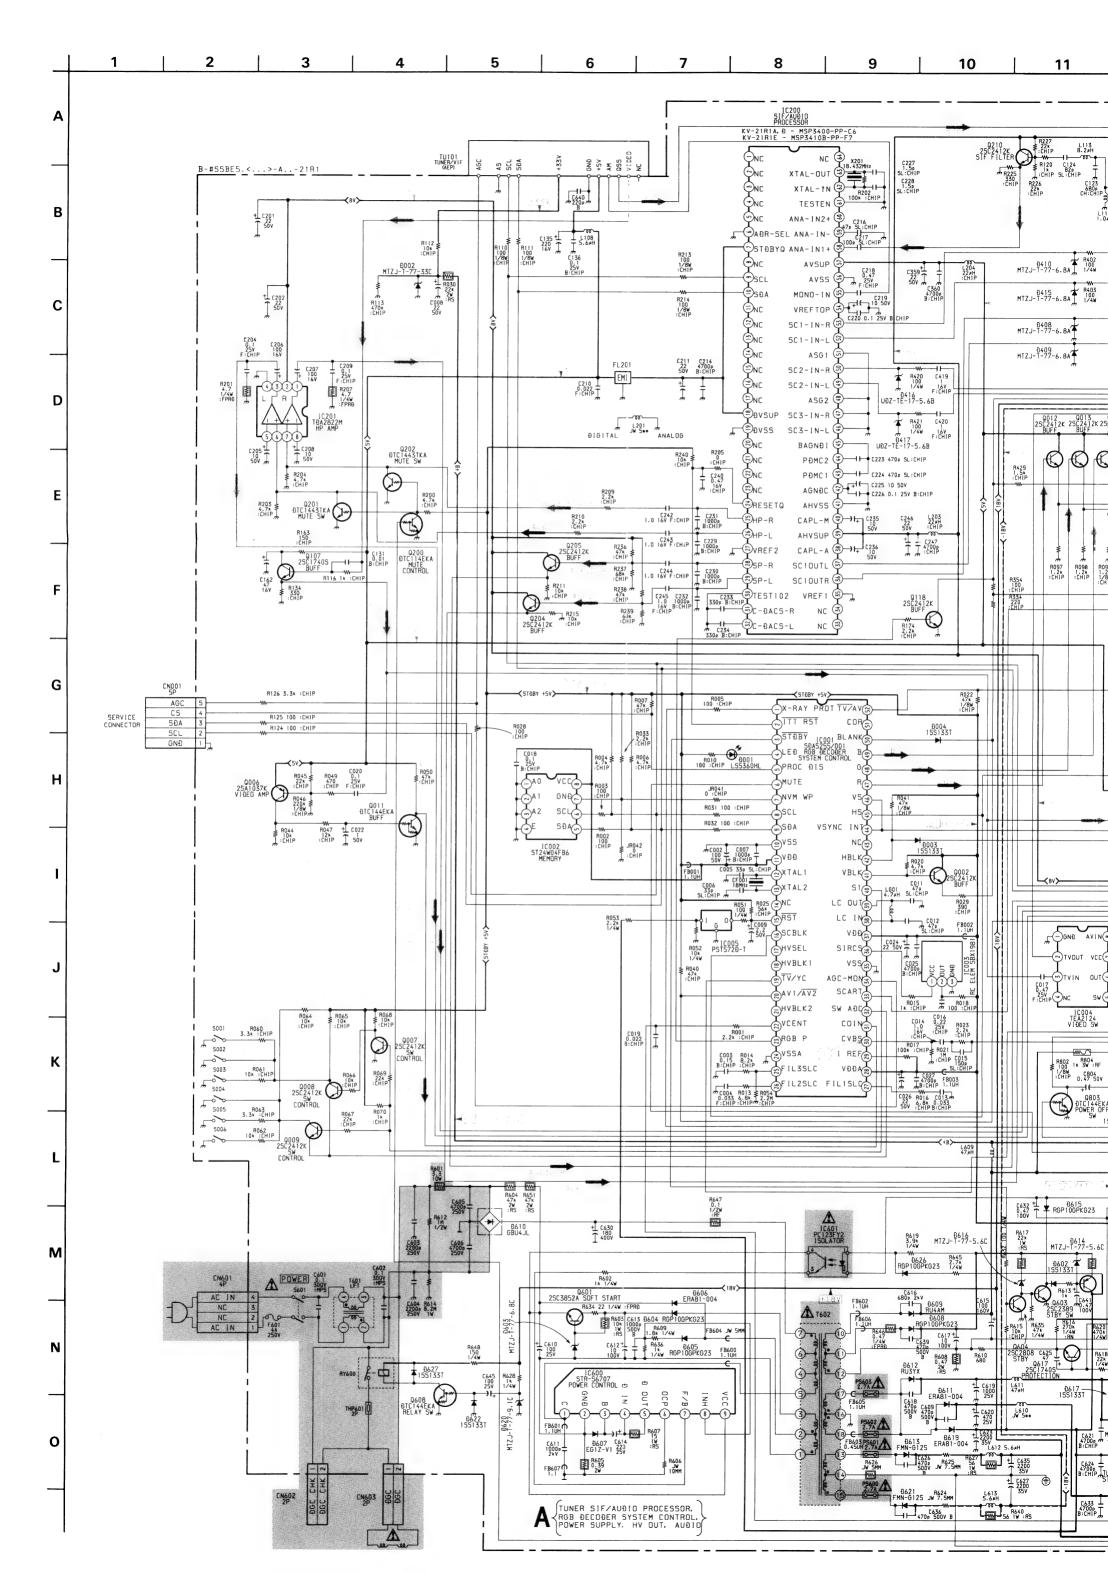


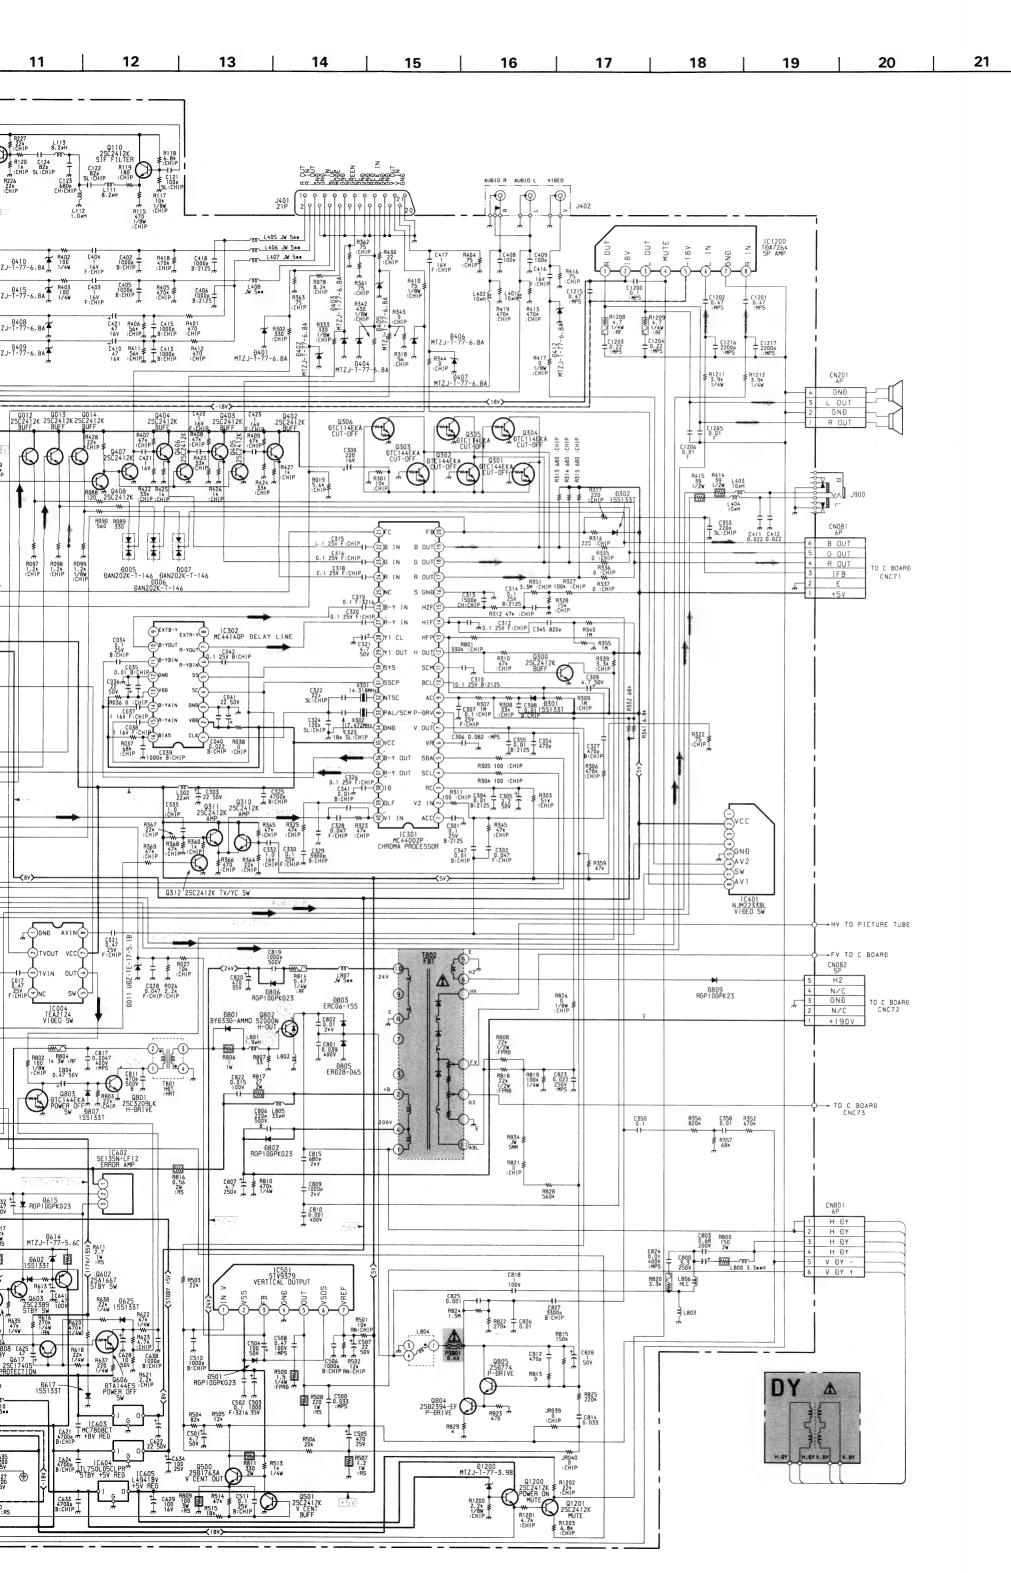


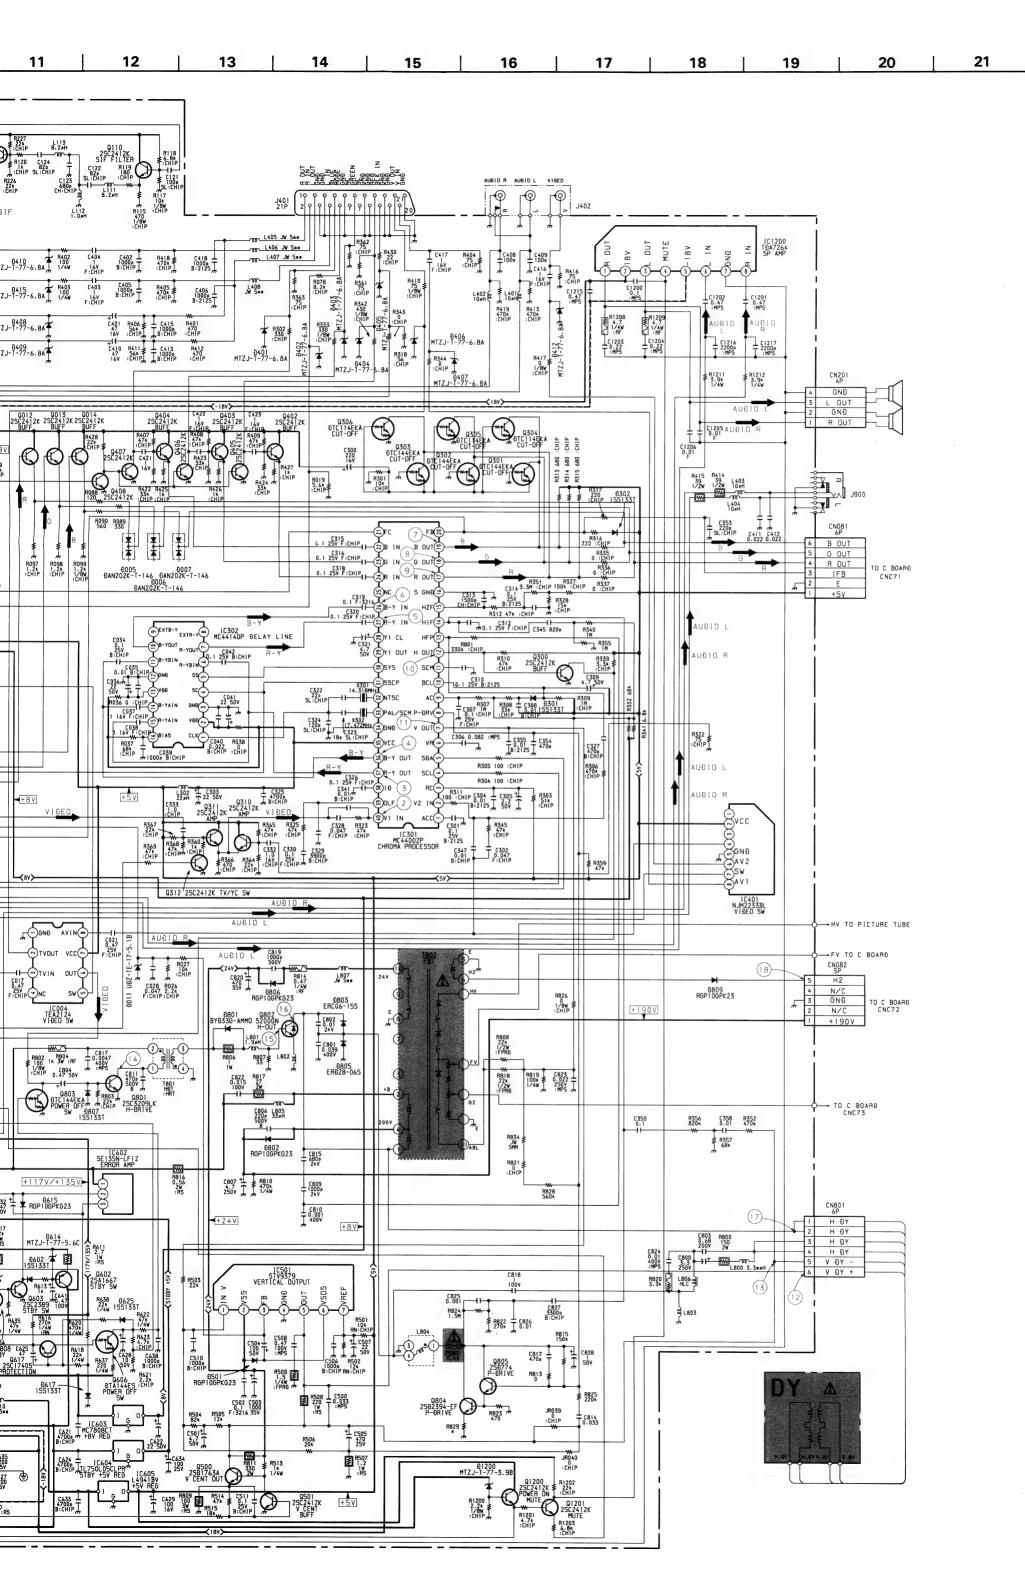

WAVEFORMS A BOARD 2 3 1 4 PAL (4) SECAM/NTSC 2.0 Vp-p (H) 1.0 Vp-p (H) 1.2 Vp-p (H) 6 PAL 5 PAL (5) SECAM (5) NTSC (6) SECAM _V/V__VVV__VVV 1.0 Vp-p (H) 0.5 Vp-p (H) 1.1 Vp-p (H) 1.4 Vp-p (H) 0.7 Vp-p (H) (6) NTSC 8 (10) -ՄՄԻ-ՄՄՄ--ՄՄՄ 1.5 Vp-p (H) 2.0 Vp-p (H) 2.3 Vp-p (H) 2.3 Vp-p (H) 0.8 Vp-p (H) (11) (12) 13) 14) (15) 1.8 Vp-p (H) 55 Vp-p (H) 10 Vp-p (H) 8.4 Vp-p (H) 220 Vp-p (H) (16) 18) (17) A BOARD IC501 STV9379 OUTPUT STAGE FLYBACK SUPPLY GENERATOR 1.4KVp-p (H) 24 Vp-p (H) 210 Vp-p (H) A BOARD IC200 MSP3400C-PP-C6/MSP3410B-PP-F7 INVERTING INPUT (1 POWER AMPLIFIER NON-INVERTING INPUT (7) SBUS Interface I2C Interface GROUND (58) DEMODULATOR D/A 60 D/A **A BOARD IC600 STR-S6707** IDENT **DFP** D/A ▶(26 D/A **►**(25) A/D START UP A/D D/A PRE REG (46) THERMA **SCART Switching Facilities A BOARD IC301 MC44002P**

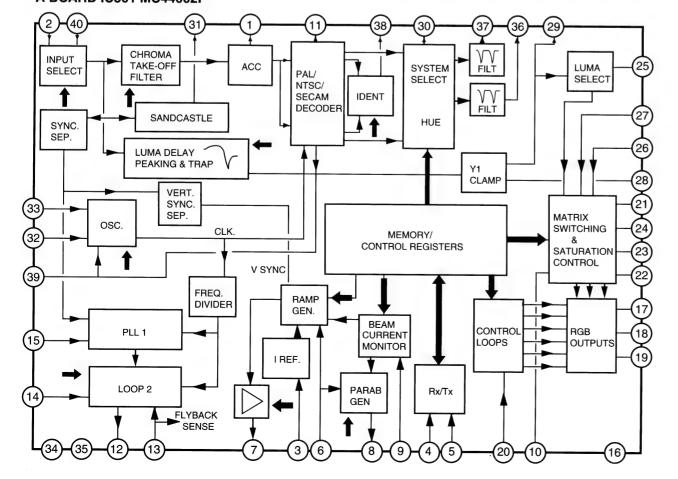

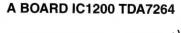

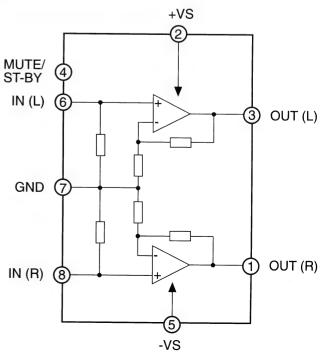


FLYBACK GENERATOR

THERMAL PROTECTION

REF

б ОПТРОТ


C Board

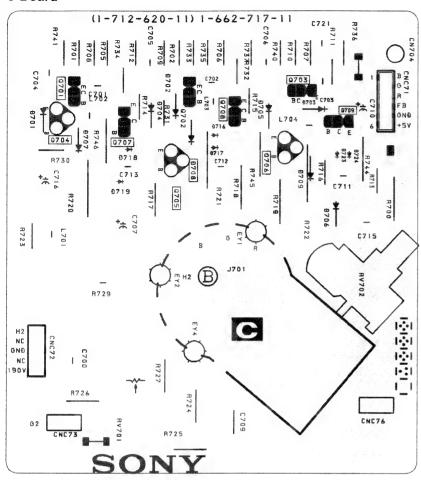


C BOARD
TRANSISTOR VOLTAGE TABLE

Transistor Voltage Table			
Ref No	B Base	C Collector	E Emitter
Q701	2.5	4.3	1.8
Q702	2.5	4.3	1.8
Q703	2.3	4.3	1.7
Q704	5.0	144.8	4.3
Q705	5.0	149.2	4.3
Q706	5.0	152.3	4.3
Q707	144.8	3.5	152.3
Q708	149.2	3.5	149.2
Q709	151.7	3.5	172.1



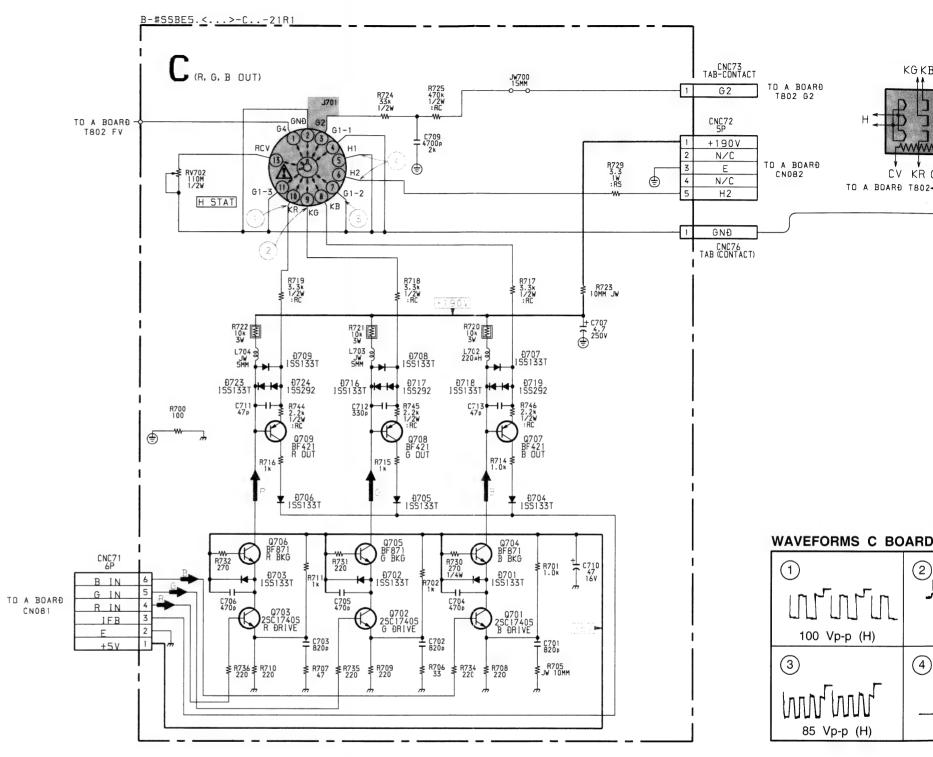



C Board

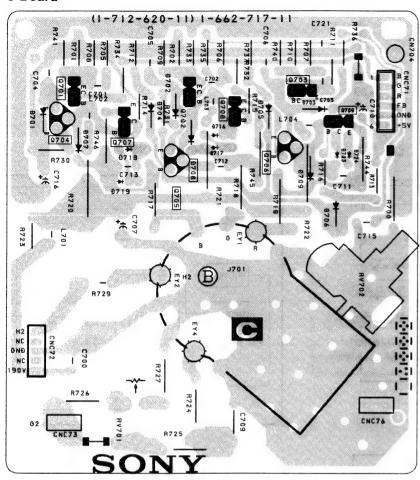


C BOARD TRANSISTOR VOLTAGE TABLE

Transistor Voltage Table			
Ref No	B Base	C Collector	E Emitter
Q701	2.5	4.3	1.8
Q702	2.5	4.3	1.8
Q703	2.3	4.3	1.7
Q704	5.0	144.8	4.3
Q705	5.0	149.2	4.3
Q706	5.0	152.3	4.3
Q707	144.8	3.5	152.3
Q708	149.2	3.5	149.2
Q709	151.7	3.5	172.1

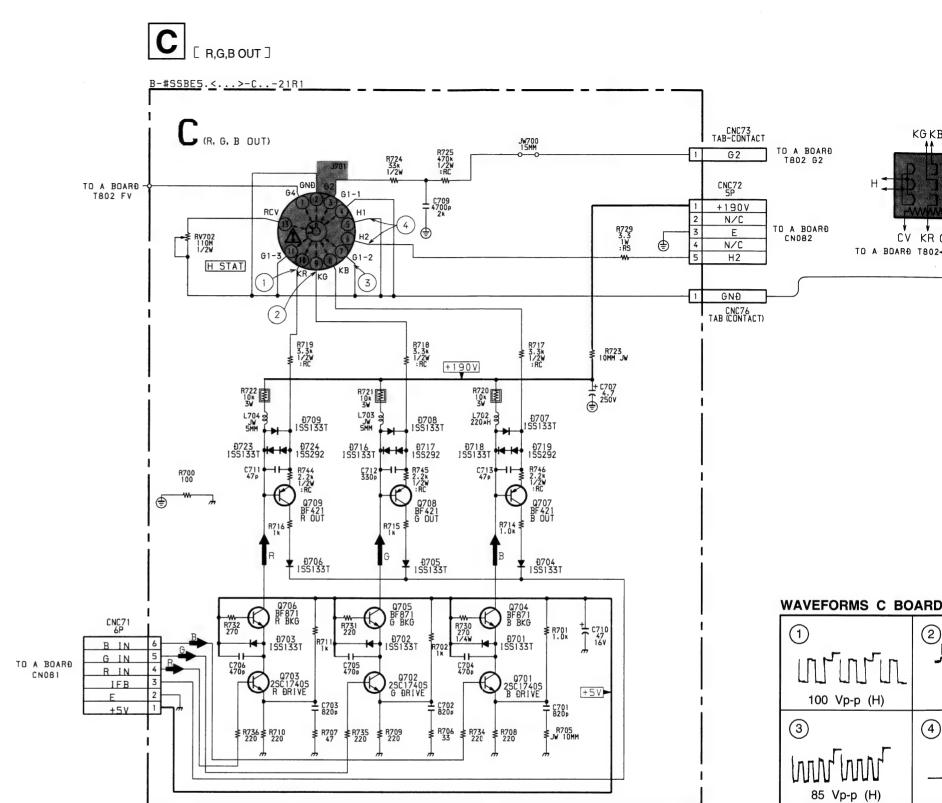

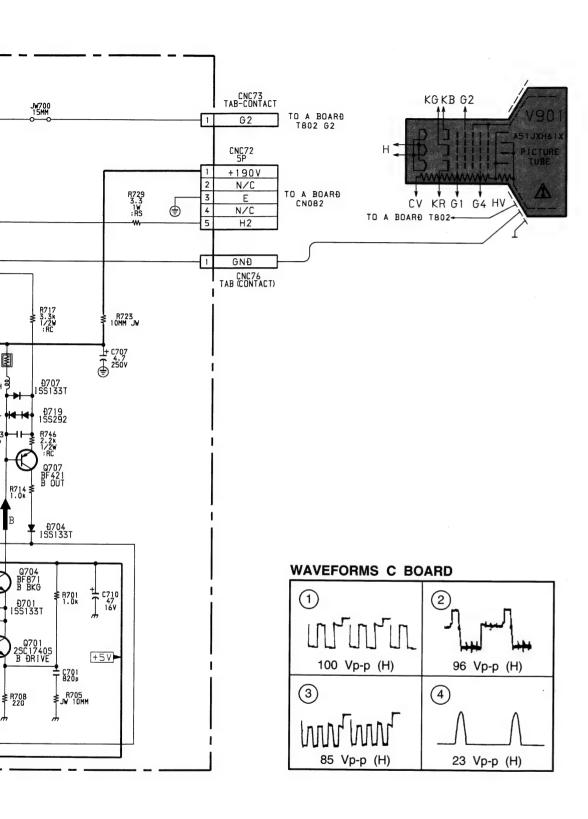

5-4. SEMICONDUCTORS

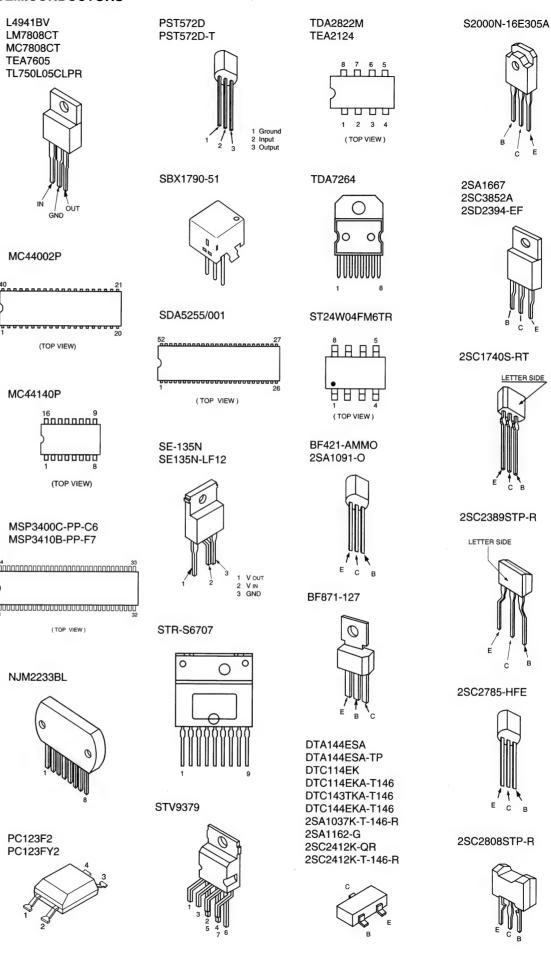

2SC320

2SD774

2SD774

2SC4793

2SD1763

BYD33G BYD33G


ERC06-

DAN202 DAN202


DTZ5.1B RD5.6S-I

UDZ-TE-

UDZ-TE-

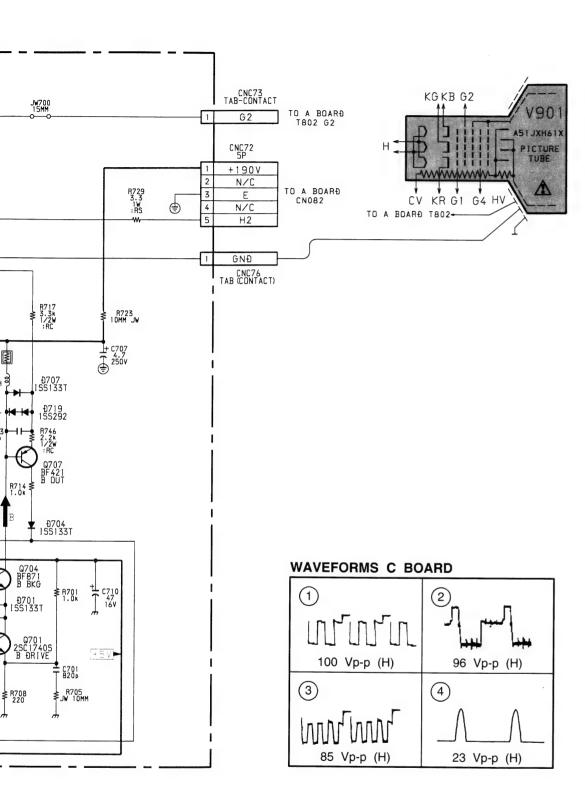

5-4. SEMICONDUCTORS

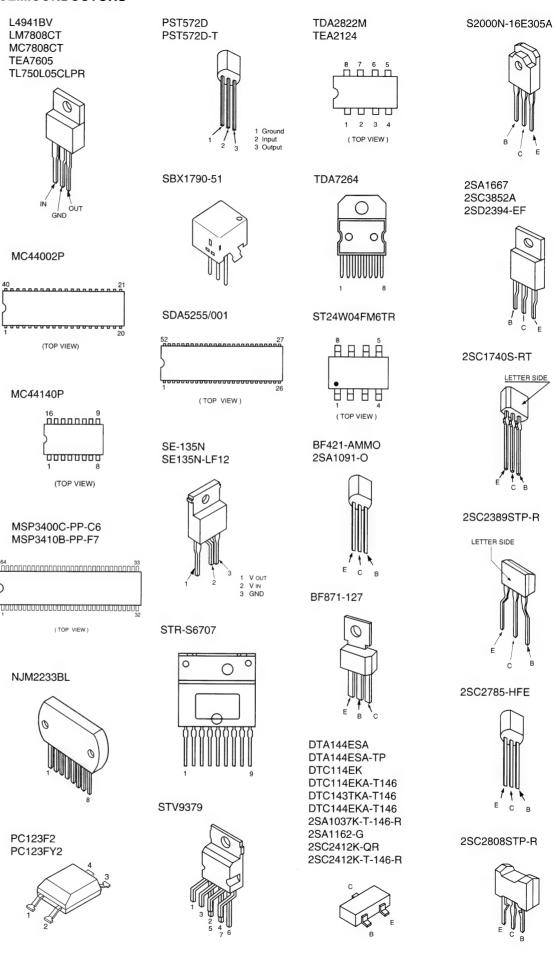

2SC320

2SD774

2SD774

2SC4793

2SD1763

BYD33G BYD33G

ERC06-1


DAN202 DAN202

DTZ5.1B RD5.6S-l

UDZ-TE-

UDZ-TE-


2SC3209LK-TP 2SD774-T-4 2SD774-34

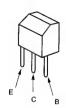

2SC4793 2SD1763A




RGP10GPKG23 RU3YX-LF-C4 RU-3YX-V1 RU4AM-T3 1SS292T-77

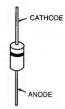


ERA81-004TP1 MERA83-006 MTZJ-T-77-5.6C RMTZJ-T-77-6.8A RMTZJ-T-77-6.8C RMTZJ-T-77-33C R

MTZJ-T-77-3.9B


MTZJ-T-77-9.1C MTZJ-33C RD3.9ES-B2 RD5.6ESB2 RD6.8ES-B2 RD9.1ES-B3 1SS133T-77

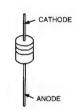

BYD33G BYD33G-AMMO ERC06-15S

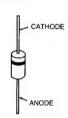

GBU4JL-6088

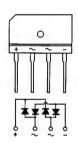


DAN202K DAN202K-T-146





LR5360HL

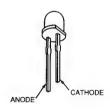

DTZ5.1B RD5.6S-B UDZ-TE-17-5.1B UDZ-TE-17-5.6B




SECTION 6 EXPLODED VIEWS

NOTE:

- Items with no part number and no description are not stocked because they
 are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and marked f are critical for safety.

Replace only with the part number specified.

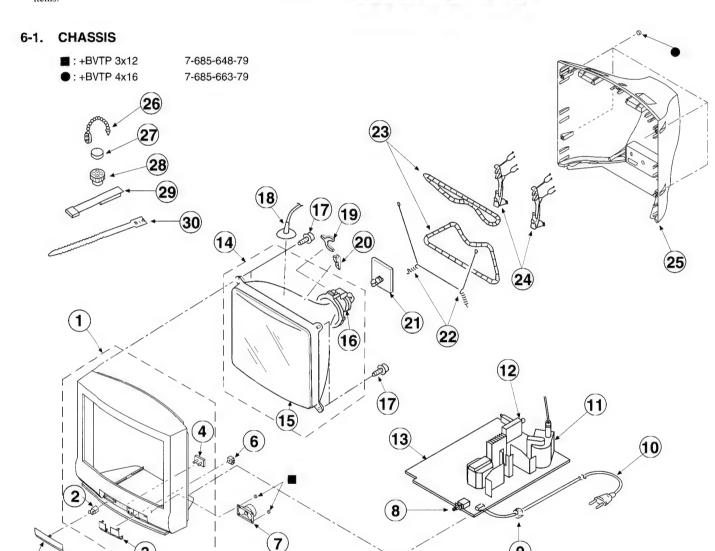

REF NO PART NO DESCRIPTION REMARK REF NO PART NO DESCRIPTION 1 X-4200-282-1 BEZNET ASSY 2-4 13 *A-1632-541-A A BOARD, COMPLETE (KV-21R *A-1632-542-A A BOARD, COMPLETE (KV-21R *A-1632-542-A A BOARD, COMPLETE (KV-21R *A-1632-453-A A BOARD, COMPLET								
2 4-047-464-01 CATCHER, PUSH 3 4-203-432-01 WINDOW 4 4-203-431-01 GUIDE, LIGHT 5 4-203-435-31 DOOR (BARE) (KV-21R1A/21R1D) 4 2-203-435-31 DOOR (PAINTED) (KV-21R1E) 6 4-203-433-01 BUTTON, POWER *A-1632-542-A A BOARD, COMPLETE (KV-21R KV-21R	REF NO	PART NO	DESCRIPTION	REMARK	REF NO	PART NO	DESCRIPTION	REMARK
8 1 1-571-2433-21 SWITCH PUSH (AC POWER) 19 1-452-277-00 MAGNET, BMC 9 *4-202-531-01 AC CORD LOCK (SC) 20 3-704-495-01 SPACER, DY 10 /1 1-765-286-11 CORD POWER 21 *A-1638-102-A C BOARD, COMPLETE	1 2 3 4 5 6 7	X-4200-282-1 4-047-464-01 4-203-432-01 *4-203-431-01 4-203-435-31 4-203-435-31 4-203-433-01 1-503-258-21 *4-202-531-01	BEZNET ASSY CATCHER, PUSH WINDOW GUIDE, LIGHT DOOR (BARE) (KV-21R1A/21R1D) DOOR (PAINTED) (KV-21R1E) BUTTON, POWER SPEAKER SWITCH PUSH (AC POWER) AC CORD LOCK (SC)	2-4	13 14 15 16 17 18 19 20	*A-1632-541-A *A-1632-542-A *A-1632-542-A *A-1632-453-A {\bar{\bar{\bar{\bar{\bar{\bar{\bar	A BOARD, COMPLETE (F A BOARD, COMPLETE (F A BOARD, COMPLETE (F ITC PICTURE TUBE (SD-165 DEFLECTION YOKE (Y21 SCREW (5), SELF TAPE CAP ASSY, HIGH-YOLT? MAGNET, BMC SPACER, DY	(V-21R1A) (V-21R1D) (V-21R1E) 15-16 () (A51JXH61X) PFA2BA) PING

24 *4-386	•	CRIPTION	REMARK	REF NO	PART NO	DESCRIPTION	REMARK
	5_622_11 RAND						
25 4-203	OZZ-II DAND	DGC					
4-403		(REAR)					
26 4-308		LEAD WIRE					
27 1-452	-032-00 MAGNE	T, DISK; 10MM Ø					
28 1-452		T, ROTATABLE DISK; 15	SMM Ø				
29 X-438		LLOY ASSY, CORRECTION					
30 3-701		BINDING	•				

SECTION 7

ELECTRICAL PARTS LIST

When indicating parts by reference number, please include the board name.

CAPACITORS

COILS

MF: mF, PF: mmF


MMH: mH, μH : mH

Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

RESISTORS

- All resistors are in ohms
- F: nonflammable

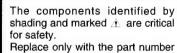

specified.



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION		REMARK
	*A-1632-541-A	A BOARD, COMPLETE (KV-21R1)	A)	C122	1-163-115-00	CERAMIC CHIP 82PF	5%	50V
		*******		C123	1-163-137-00	CERAMIC CHIP 680PF	5%	50V
	*A-1632-542-A	A BOARD, COMPLETE (KV-21R1)	D)	C124	1-163-115-00	CERAMIC CHIP 82PF	5%	50V
	#3-1620 AE2 3		p.\	C131	1-164-232-11	CERAMIC CHIP 0.01MF	10%	50V
	*A-1032-453-A	A BOARD, COMPLETE (KV-21R1)	S)	C135	1-126-934-11	ELECT 220MF	20%	16V
				C136	1-164-004-11		10%	25V
	4-202-373-01	SPRING, IC		C162	1-126-967-11		20%	16V
	4-202-710-11	SPACER, INSULATING		C201	1-126-965-11	ELECT 22MF	20%	50V
	4-382-854-11	SCREW (M3X10), P, SW (+)		C202	1-126-965-11		20%	50V
	< CAP	PACITOR >		C204	1-163-038-00	CERAMIC CHIP 0.1MF		25V
				C205	1-126-964-11		20%	50V
C002	1-126-968-11		0% 50V	C206	1-126-933-11		20%	16V
C003	1-164-492-11	CERAMIC CHIP 0.15MF 10	0% 16V	C207	1-126-933-11	ELECT 100MF	20%	16V
C004	1-163-034-00	CERAMIC CHIP 0.033MF	50V	C208	1-126-964-11	ELECT 10MF	20%	50V
C005	1-163-105-00	CERAMIC CHIP 33PF 59		C209	1-163-038-00	CERAMIC CHIP 0.1MF		25V
C006	1-163-105-00	CERAMIC CHIP 33PF 59	% 50V					
				C210	1-163-033-91			50V
C007	1-163-009-11		0% 50V	C211	1-126-965-11		20%	50V
C008	1-126-965-11		0% 50V	C214	1-163-017-00	CERAMIC CHIP 0.0047MF	10%	50V
C009	1-124-925-11		0% 50V	C216	1-163-109-00	CERAMIC CHIP 47PF	5%	50V
C011	1-163-109-00	CERAMIC CHIP 47PF 59		C217	1-163-117-00	CERAMIC CHIP 100PF	5%	50V
C012	1-163-109-00	CERAMIC CHIP 47PF 59	% 50V					
				C218	1-164-005-11			25V
C013	1-163-078-11		0% 25V	C219	1-126-964-11	ELECT 10MF	20%	50V
C014	1-163-034-00	CERAMIC CHIP 0.033MF	50V	C220	1-164-004-11		10%	25V
C015	1-163-121-00	CERAMIC CHIP 150PF 59		C223	1-163-133-00	CERAMIC CHIP 470PF	5%	50V
C016	1-164-222-11	CERAMIC CHIP 0.22MF	25V	C224	1-163-133-00	CERAMIC CHIP 470PF	5%	50V
C017	1-164-005-11	CERAMIC CHIP 0.47MF	25V	2005	4 400 004 44			
0010	1 161 001 11			C225	1-126-964-11		20%	50V
C018	1-164-004-11		0% 25V	C226	1-164-004-11		10%	25V
C019	1-163-037-11		0% 50V	C227	1-163-084-00	CERAMIC CHIP 1.5PF	0.25PF	
C020	1-163-038-00	CERAMIC CHIP 0.1MF	25V	C228	1-163-084-00	CERAMIC CHIP 1.5PF	0.25PF	
C021	1-164-005-11	CERAMIC CHIP 0.47MF	25V	C229	1-163-009-11	CERAMIC CHIP 0.001MF	10%	50V
C022	1-124-903-11	ELECT 1MF 20	0% 50V	0030	1 162 000 11	CHRANTS OUTD A AAANT	1.00.	F 077
C024	1-126-965-11	ELECT 22MF 20	0% 50V	C230 C231	1-163-009-11 1-163-009-11		10%	50V 50V
C025	1-163-017-00	CERAMIC CHIP 0.0047MF 10		C231			10%	
C025	1-126-965-11		0% 50V 0% 50V	C232		CERAMIC CHIP 0.001MF	10%	50V
C027	1-163-017-00	CERAMIC CHIP 0.0047MF 10		C234	1-163-003-11	CERAMIC CHIP 330PF CERAMIC CHIP 330PF	10% 10%	50V 50V
C028	1-163-017-00	CERAMIC CHIP 0.047MF	50V	C234	1-103-003-111	CERAMIC CHIP 330PF	10%	307
				C235	1-126-964-11		20%	50V
C034	1-164-004-11	CERAMIC CHIP 0.1MF 10)% 25V	C236	1-126-964-11	ELECT 10MF	20%	50V
C035	1-164-232-11		0% 50V	C240	1-107-823-11	CERAMIC CHIP 0.47MF	10%	16V
C036	1-126-965-11		0% 50V	C242	1-164-346-11	CERAMIC CHIP 1MF		16V
C037	1-164-346-11	CERAMIC CHIP 1MF	16V	C243	1-164-346-11	CERAMIC CHIP 1MF		16V
C038	1-164-346-11	CERAMIC CHIP 1MF	16V					
	4 4			C244	1-164-346-11			16V
C039			0% 50V	C245	1-164-346-11			16V
C040	1-163-037-11			C246	1-126-965-11		20%	50V
C041	1-126-965-11		0% 50V	C247	1-163-017-00	CERAMIC CHIP 0.0047MF	10%	50V
C042	1-164-004-11	CERAMIC CHIP 0.1MF 10		C300	1-126-934-11	ELECT 220MF	20%	16V
C121	1-163-117-00	CERAMIC CHIP 100PF 59	6 50V					



The components identified by shading and marked are critical for safety.

Replace only with the part number specified.

REF.NO.	PART NO.	DESCRIPTION		REMARK	REF.NO.	PART NO.	DESCRIPTIO	N		REMARK
C301 C302 C303 C304 C305	1-164-004-11 1-163-035-00 1-126-965-11 1-164-232-11 1-124-257-00	CERAMIC CHIP 0.1MF CERAMIC CHIP 0.047MF ELECT 22MF CERAMIC CHIP 0.01MF ELECT 2.2MF	10% 20% 10% 20%	25V 50V 50V 50V 50V	C423 C500 C501 C502 C503	1-164-346-11 1-130-489-00 1-126-963-11 1-163-077-00 1-126-952-11	CERAMIC CHIP FILM ELECT CERAMIC CHIP ELECT	0.033MF 4.7MF	5% 20% 20%	16V 50V 50V 50V 35V
C306 C307 C308 C309 C310	1-107-380-91 1-163-038-00 1-164-232-11 1-126-163-11 1-164-004-11	FILM 0.0082MF CERAMIC CHIP 0.1MF CERAMIC CHIP 0.01MF ELECT 4.7MF CERAMIC CHIP 0.1MF	5% 10% 20% 10%	200V 25V 50V 50V 25V	C504 C505 C506 C507 C508	1-126-968-11 1-126-941-11 1-163-009-11 1-126-965-11 1-130-785-11	ELECT ELECT CERAMIC CHIP ELECT MYLAR	100MF 470MF 0.001MF 22MF 0.47MF	20% 20% 10% 20% 10%	50V 25V 50V 50V 100V
C312 C313 C314 C315 C316	1-163-038-00 1-163-145-00 1-164-004-11 1-163-038-00 1-163-038-00	CERAMIC CHIP 0.1MF CERAMIC CHIP 0.0015MF CERAMIC CHIP 0.1MF CERAMIC CHIP 0.1MF CERAMIC CHIP 0.1MF	5% 10%	25V 50V 25V 25V 25V	C602 A	1-163-009-11 1-164-004-11 1-136-516-12 1-136-516-12 1-113-890-61	FILM		10% 10% 20% 20% 20%	50V 25V 300V 300V 250V
C318 C319 C320 C321 C322	1-163-038-00 1-163-077-00 1-163-038-00 1-126-963-11 1-163-101-00	CERAMIC CHIP 0.1MF CERAMIC CHIP 0.1MF CERAMIC CHIP 0.1MF ELECT 4.7MF CERAMIC CHIP 22PF	20% 5%	25V 50V 25V 50V 50V	C605	1-113-890-61 1-161-964-91 1-161-964-91 1-102-228-00 1-104-665-11	CERAMIC	0.0022MF 0.0047MF 0.0047MF 470PF 100MF	20% 10% 20%	250V 250V 250V 500V 25V
C323 C324 C325 C326 C327	1-163-099-00 1-163-119-00 1-163-017-00 1-163-038-00 1-163-005-11	CERAMIC CHIP 18PF CERAMIC CHIP 120PF CERAMIC CHIP 0.0047MF CERAMIC CHIP 0.1MF CERAMIC CHIP 470PF	5% 5% 10%	50V 50V 50V 25V 50V	C611 C612 C613 C614 C615	1-161-754-00 1-107-929-11 1-162-318-11 1-104-666-11 1-124-347-00	CERAMIC ELECT CERAMIC ELECT ELECT	0.001MF 10MF 0.001MF 220MF 100MF	10% 20% 10% 20% 20%	2KV 100V 500V 25V 160V
C328 C329 C330 C332 C333	1-163-035-00 1-163-016-00 1-163-038-00 1-164-346-11 1-164-346-11	CERAMIC CHIP 0.047MF CERAMIC CHIP 0.0039MF CERAMIC CHIP 0.1MF CERAMIC CHIP 1MF CERAMIC CHIP 1MF	10%	50V 50V 25V 16V 16V	C616 C617 C618 C619 C620	1-162-116-00 1-107-929-11 1-102-228-00 1-126-942-61 1-126-941-11	CERAMIC BLECT CERAMIC ELECT BLECT	680PF 10MF 470PF 1000MF 470MF	10% 20% 10% 20% 20%	2KV 100V 500V 25V 25V
C341 C345 C347 C350 C353	1-164-232-11 1-163-139-00 1-164-232-11 1-163-038-00 1-163-125-00	CERAMIC CHIP 0.01MF CERAMIC CHIP 820PF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.1MF CERAMIC CHIP 220PF	10% 5% 10%	50V 50V 50V 25V 50V	C621 C622 C623 C624 C625	1-163-017-00 1-126-965-11 1-124-618-11 1-163-017-00 1-126-967-11	CERAMIC CHIP ELECT ELECT CERAMIC CHIP ELECT	22MF 2200MF	10% 20% 20% 10% 20%	50V 50V 35V 50V 50V
C354 C355 C358 C359 C360	1-163-197-00 1-164-232-11 1-164-232-11 1-126-965-11 1-163-017-00	CERAMIC CHIP 0.01MF ELECT 22MF	10% 10% 10% 20% 10%	50V 50V 50V 50V 50V	C626 C627 C628 C629 C630	1-102-228-00 1-111-097-11 1-126-964-11 1-124-455-00 1-113-473-11	CERAMIC ELECT ELECT ELECT (BLOCK)	470PF 0.0022F 10MF 100MF 180MF	10% 20% 20% 20% 20%	500V 35V 50V 16V 400V
C401 C402 C403 C404 C405	1-164-346-11 1-164-346-11	ELECT 47MF CERAMIC CHIP 0.001MF CERAMIC CHIP 1MF CERAMIC CHIP 1MF CERAMIC CHIP 0.001MF	20% 10% 10%	16V 50V 16V 16V 50V	C632 C633 C634 C635 C636	1-106-220-00 1-163-017-00 1-104-665-11 1-111-097-11 1-102-228-00	CERAMIC CHIP ELECT ELECT	0.1MF 0.0047MF 100MF 0.0022F 470PF	10% 10% 20% 20% 10%	100V 50V 25V 35V 500V
C406 C408 C409 C410 C411	1-163-009-11 1-101-810-00 1-101-810-00 1-126-967-11 1-137-372-11	CERAMIC 100PF ELECT 47MF	10% 5% 5% 20% 5%	50V 500V 500V 16V 50V	C638 C639 C640 C641 C645	1-163-009-11 1-102-228-00 1-102-110-00 1-104-797-11 1-104-665-11	CERAMIC ELECT	0.001MF 470PF 220PF 0.47MF 100MF	10% 10% 10% 20% 20%	50V 500V 50V 100V 25V
C412 C413 C415 C416 C417	1-163-009-11 1-164-346-11	FILM 0.022MF CERAMIC CHIP 0.001MF CERAMIC CHIP 0.001MF CERAMIC CHIP 1MF CERAMIC CHIP 1MF	5% 10% 10%	50V 50V 50V 16V	C800 C801 C802 C803 C804	1-107-650-11 1-129-746-00 1-136-079-00 1-136-109-00 1-124-902-00	FILM FILM FILM	3.3MF 0.039MF 0.01MF 0.68MF 0.47MF	20% 10% 3% 5% 20%	250V 400V 2KV 200V 50V
C418 C419 C420 C421 C422	1-164-346-11 1-164-346-11	CERAMIC CHIP 0.001MF CERAMIC CHIP 1MF CERAMIC CHIP 1MF CERAMIC CHIP 1MF CERAMIC CHIP 1MF	10%	50V 16V 16V 16V 16V	C806 C807 C809 C810 C811	1-102-244-00 1-107-651-11 1-161-754-00 1-129-702-00 1-102-228-00	ELECT CERAMIC FILM	220PF 4.7MF 0.001MF 0.001MF 470PF	10% 20% 10% 10% 10%	500V 250V 2KV 400V 500V

The components identified by shading and marked A are critical for safety.

Replace only with the part number specified.



REF.NO.	PART NO.	DESCRIPTION		REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
C812 C814 C815 C817 C818	1-163-197-00 1-136-159-00 1-162-116-00 1-136-559-11 1-136-933-11	CERAMIC 680PF MYLAR 0.0047MF	10% 5% 10% 10% 5%	50V 50V 2KV 400V 100V	D415 D416 D417 D501	8-719-158-15	DIODE RD6.8ES-B2 DIODE RD5.6S-B DIODE RD5.6S-B DIODE EL1Z	
C819 C820 C822 C823 C824	1-162-318-11 1-126-951-11 1-104-696-11 1-106-375-12 1-106-367-00	ELECT 470MF FILM 0.015MF MYLAR 0.022MF	10% 20% 10% 10% 10%	500V 35V 100V 250V 400V	D602 D603 D604 D605 D606	8-719-109-97 8-719-302-43 8-719-302-43 8-719-980-78	DIODE EL1Z DIODE ERA83-006	
C825 C826 C827 C828 C1200	1-164-232-11		10% 10% 10% 20% 5%	50V 100V 50V 50V 50V	D607 D608 D609 D610 D611	8-719-302-43 8-719-312-10 8-719-025-88 8-719-980-78	DIODE RU4AM-T3 DIODE GBU4JL-6088 DIODE ERA83-006	
C1201 C1202 C1203 C1204 C1205	1-136-173-00 1-136-173-00 1-136-169-00 1-136-169-00 1-101-004-00	FILM 0.47MF FILM 0.22MF FILM 0.22MF	5% 5% 5% 5%	50V 50V 50V 50V 50V	D612 D613 D614 D615 D616	8-719-058-38 8-719-109-89 8-719-302-43 8-719-109-89	DIODE RD5.6ESB2	
C1206 C1215 C1216 C1217	1-101-004-00 1-136-173-00 1-137-366-11 1-137-366-11	FILM 0.47MF FILM 0.0022MF	5% 5% 5%	50V 50V 50V 50V	D617 D619 D620 D621 D622	8-719-980-78 8-719-110-14 8-719-058-38	DIODE 1SS133T-77 DIODE ERAB3-006 DIODE RD9.1ES-B3 DIODE FMN-G12S DIODE 1SS133T-77	
CF001	1-767-120-21	TER > VIBRATOR, CERAMIC (18M NNECTOR >	Hz)		D625 D626 D627 D801 D802	8-719-302-43 8-719-991-33	DIODE 1SS133T-77 DIODE BYD33G	
CN001 CN081 CN082 CN201 CN601	*1-568-881-51 *1-568-880-51 *1-568-879-11	PIN, CONNECTOR 5P PIN, CONNECTOR 6P PIN, CONNECTOR 5P PIN, CONNECTOR 4P PIN, CONNECTOR POWER)		1111111	D803 D805 D806 D807 D809	8-719-928-08 8-719-302-43	DIODE 1SS133T-77	
CN602 CN603 CN801	1-508-786-00	PIN, CONNECTOR (5MM PT PIN, CONNECTOR (5MM PT CONNECTOR PIN (DY) 6P	TCH) 2P TCH) 2P		D1200	8-719-109-72 < FUS	DIODE RD3.9ES-B2	
	< DIC	DDE >			F601	1-532-504-41	FUSE (4A 250V)	
D001 D002		DIODE LS5360HL					RITE BEAD >	
D003 D004 D005	8-719-991-33 8-719-991-33	DIODE MTZJ-33C DIODE 1SS133T-77 DIODE 1SS133T-77 DIODE DAN202K			FB001 FB002 FB003 FB600	1-412-911-11 1-412-911-11	INDUCTOR, FERRITE BEAD 1.1 INDUCTOR, FERRITE BEAD 1.1 INDUCTOR, FERRITE BEAD 1.1 FERRITE BEAD INDUCTOR 1.1U	UH UH
D006 D007 D011 D301 D302	8-719-914-43 8-719-976-XX 8-719-991-33	DIODE DAN202K DIODE DAN202K DIODE DTZ5.1B DIODE 1SS133T-77 DIODE 1SS133T-77			FB601 FB602 FB603 FB605	1-410-397-21 1-412-911-11 1-410-396-41 1-412-911-11	FERRITE BEAD INDUCTOR 1.1U INDUCTOR, FERRITE BEAD 1.1 FERRITE BEAD INDUCTOR 0.45 INDUCTOR, FERRITE BEAD 1.1	H UH UH H
D401 D402 D403 D404	8-719-109-97 8-719-109-97	DIODE RD6.8ES-B2 DIODE RD6.8ES-B2 DIODE RD6.8ES-B2 DIODE RD6.8ES-B2			FB606 FB607	1-412-911-11	INDUCTOR, FERRITE BEAD 1.1 INDUCTOR, FERRITE BEAD 1.1 APSULATED FILTER >	Н
D405		DIODE RD6.8ES-B2			FL201	1-239-803-11	FILTER, EMI	
D406 D407 D408 D409 D410	8-719-109-97 8-719-109-97 8-719-109-97 8-719-109-97	DIODE RD6.8ES-B2 DIODE RD6.8ES-B2 DIODE RD6.8ES-B2 DIODE RD6.8ES-B2 DIODE RD6.8ES-B2 DIODE RD6.8ES-B2			IC001 IC002 IC003 IC004 IC005	8-759-432-32	IC SDA5255/001 IC ST24W04FM6TR RAY CATCHER ELEMENT SBX198 IC TEA2124	1-51



The components identified by shading and marked \hat{m} are critical for safety.
Replace only with the part number specified.

7					<u></u>			
REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION		REMARK
IC200	8-759-429-98	IC MSP3400C-PP-C6 IC MSP3410B-PP-F7	(KV-21R1A/21R1D) (KV-21R1E)	Q014 Q107	8-729-920-74 8-729-119-78	TRANSISTOR 2SC TRANSISTOR 2SC	2412K-QR 2785-HFE	
IC201 IC301 IC302	8-759-502-21 8-759-333-45 8-759-333-46	IC MC44002P		Q110 Q118	8-729-920-74		2412K-QR	
				Q200		TRANSISTOR DTC		
IC401 IC501 IC600	8-759-192-71	IC NJM2233BL IC STV9379 IC STR-S6707		Q201 Q202	8-729-027-56	TRANSISTOR DTC	143TKA-T146	
IC601 A	8-749-010-64	IC PG128F2		Q204	8-729-920-74	TRANSISTOR 2SC	2412K-QR	
IC602	8-749-920-61	IC SE-135N		Q205	8-729-920-74	TRANSISTOR 2SC	2412K-QR	
				Q210		TRANSISTOR 2SC		
IC603	8-759-507-29	IC LM7808CT		Q300		TRANSISTOR 2SC		
IC604		IC TL750L05CLPR		Q301	8-729-900-53	TRANSISTOR DTC	TIAEV	
IC605	8-759-510-52			Q302	8-729-900-53	TRANSISTOR DTO	114EK	
IC1200	8-759-250-68	IC TDA/204		Q302		TRANSISTOR DTC		
	- goo	CKET >		Q304		TRANSISTOR DTC		
	\ boc	.KBI >		Q305		TRANSISTOR DTC		
J401	1-561-534-00	SOCKET PIN 21P		Q306	8-729-900-53	TRANSISTOR DTC	114EK	
J402		JACK, PIN 3P						
J900	1-764-606-11	JACK		Q310		TRANSISTOR 2SC		
				Q311		TRANSISTOR 2SC		
	< COI	[L >		Q312	8-729-920-74	TRANSISTOR 2SC TRANSISTOR 2SC	2412K-QK	
T 0.01	1-408-405-00	TATOSTOMOD A	.7UH	Q402 Q403	8-729-920-74	TRANSISTOR 250	2412K-QK	
L001 L108	1-408-405-00		. GUH	Q403	0-12))20 14	IIIIIIIIIII ZDO	ATIEN ON	
L111	1-408-408-00		. 2UH	Q404	8-729-920-74	TRANSISTOR 250	22412K-QR	
L112	1-408-397-00		Л	Q405	8-729-920-74	TRANSISTOR 2SC	2412K-QR	
L113	1-408-408-00	INDUCTOR 8.	.2UH	Q406		TRANSISTOR 2SC		
				Q407		TRANSISTOR 2SO		
L203	1-410-385-11	INDUCTOR CHIP 22	ZUH	Q408	8-729-920-74	TRANSISTOR 2SO	22412K-QR	
L204		INDUCTOR CHIP 22	ZUH	Q500	9-729-017-06	TRANSISTOR 2SO	24793	
L302 L401	1-408-607-31 1-408-409-00		OUH	Q501		TRANSISTOR 250		
L402	1-408-409-00		OUH	0601		TRANSISTOR 2SO		
2102	1 100 103 00	11120000		Q602		TRANSISTOR 2SA		
L403	1-408-409-00		DUH	Q603	8-729-027-08	TRANSISTOR 2SC	C2389STP-R	
L404	1-408-409-00		OUH	2504	0 800 004 05	EDANGEGRAD AG	TOOOOGMD D	
L609	1-412-533-21		7UH	Q604		TRANSISTOR 2SO		
L611	1-412-533-21		7UH	Q606 Q608		TRANSISTOR DTO		
L612	1-412-522-41	INDUCTOR 5	. 6UH	Q617		TRANSISTOR 2SO		
L613	1-412-522-41	INDUCTOR 5	.6UH	Q801	8-729-140-96	TRANSISTOR 2SI	0774-34	
L800	1-412-553-11	INDUCTOR 3	.3MMH					
L801		COIL, AIR-CORE		Q802	8-729-033-85	TRANSISTOR S20	000N-16E3U5A	
L802	1-411-635-11	COIL, AIR-CORE		Q803		TRANSISTOR DTG TRANSISTOR 2SI		
L803	1-459-390-00	COIL (WITH CORE)		Q804 0805		TRANSISTOR 2SI		
L804	1_450_105_21	COIL(WITH CORE)		01200		TRANSISTOR 250		
L805	1-412-531-31	INDUCTOR 3	3UH	22200			_	
L806	1-459-652-12			Q1201	8-729-920-74	TRANSISTOR 2SO	C2412K-QR	
	< IC	LINK >			< RES	SISTOR >		
perno a	11877 - 6461 311	11411. DO 2:11 (()	20-149)	JR003	1-216-295-00	METAL GLAZE	0 5%	1/10W
P\$601 A	1.431.686.11	Trust mr 2, 11 act		JR004	1-216-295-00	METAL GLAZE	0 5%	1/10W
PEK02 A	1-502-684-23	TER 18 2 1 4		JR005	1-216-296-00	METAL GLAZE	0 5%	1/8W
PB603 A	1-532-685-41	山林。1077年 位		JR006		METAL GLAZE	0 5%	1/10W
PS801 A	1-512-605408	十四年,1847年日		JR007	1-216-295-00	METAL GLAZE	0 5%	1/10W
	< TR	ANSISTOR >		JR008	1-216-295-00	METAL GLAZE	0 5%	1/10W
				JR009	1-216-296-00	METAL GLAZE	0 5%	1/8W
Q002	8-729-920-74	TRANSISTOR 2SC24	12K-QR	JR010	1-216-296-00	METAL GLAZE	0 5%	1/8W
Q006	8-729-216-22	TRANSISTOR 2SA11	62-G	JR011	1-216-296-00		0 5%	1/8W
Q007	8-729-920-74	TRANSISTOR 2SC24	12K-QR 12K-QR	JR012	1-210-296-00	METAL GLAZE	0 5%	1/8W
Q008 Q009	8-729-920-74	TRANSISTOR 2SC24 TRANSISTOR 2SC24	12K-QR	JR013	1-216-295-00	METAL GLAZE	0 5%	1/10W
2003	0-127-320-14	TAMESTON BROWN	X	JR014	1-216-295-00	METAL GLAZE	0 5%	1/10W
Q011	8-729-027-59	TRANSISTOR DTC14	4EKA-T146	JR015	1-216-296-00	METAL GLAZE	0 5%	1/8W
Q012	8-729-920-74	TRANSISTOR 2SC24	12K-QR	JR016		METAL GLAZE	0 5%	1/10W
Q013	8-729-920-74	TRANSISTOR 2SC24	12K-QR	JR018	1-216-296-00	METAL GLAZE	0 5%	1/8W



												•
REF.NO.	PART NO.	DESCRIPTION	N		REMARK	REF.NO.	PART NO.	DESCRIPTIO	N		REM	MARK
				=4	4 / 40	-050	4 046 000 00		457	EO.	4 /4 000	
JR019	1-216-296-00	METAL GLAZE	0	5%	1/8W	R050	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
JR020	1-216-296-00	METAL GLAZE	0	5%	1/8W	R051	1-247-807-31	CARBON	100	5%	1/4W	
JR021	1-216-296-00	METAL GLAZE	0	5%	1/8W							
JR022	1-216-296-00	METAL GLAZE	0	5%	1/8W	R052	1-249-429-11	CARBON	10K	5%	1/4W	
JR023	1-216-295-00	METAL GLAZE	0	5%	1/10W	R053	1-249-421-11	CARBON	2.2K	5%	1/4W	
						R054	1-216-129-00	METAL GLAZE	2.2M	5%	1/10W	
JR024	1-216-295-00	METAL GLAZE	0	5%	1/10W	R060	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
JR025	1-216-296-00	METAL GLAZE	Ō	5%	1/8W	R061	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
JR026	1-216-296-00	METAL GLAZE	Ö	5%	1/8W						_,	
JR028	1-216-296-00	METAL GLAZE	Ö	5%	1/8W	R062	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
JR029	1-216-296-00	METAL GLAZE	Ö	5%	1/8W	R063	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
OROZZ	. 1 210 270 00	HEIRO GENEE	•	3.0	1/011	R064	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
JR030	1-216-296-00	METAL GLAZE	0	5%	1/8W	R065	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
JR032	1-216-296-00	METAL GLAZE	0	5%	1/8W	R066	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
	1-216-295-00	METAL GLAZE		5%	1/10W	KOOO	1-210-0/3-00	MEIAL GLAZE	1010	J.0	1/1011	
JR033			0		-	D067	1 216 001 00	MDMAI CIATE	22K	E%	1/10W	
JR034	1-216-296-00	METAL GLAZE	0	5%	1/8W	R067	1-216-081-00	METAL GLAZE		5%		
JR036	1-216-296-00	METAL GLAZE	0	5%	1/8W	R068	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
					4.44.000	R069	1-216-081-00	METAL GLAZE	22K	5%	1/10W	
JR038	1-216-295-00	METAL GLAZE	0	5%	1/10W	R070	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
JR039	1-216-296-00	METAL GLAZE	0	5%	1/8W	R078	1-216-071-00	METAL GLAZE	8.2K	5%	1/10W	
JR040	1-216-295-00	METAL GLAZE	0	5%	1/10W		4 444 447 44		400		4 /4 0==	
JR041	1-216-295-00	METAL GLAZE	0	5%	1/10W	R088	1-216-027-00	METAL GLAZE	120	5%	1/10W	
JR042	1-216-295-00	METAL GLAZE	0	5%	1/10W	R089	1-216-037-00	METAL GLAZE	330	5%	1/10W	
						R090	1-216-043-91	METAL GLAZE	560	5%	1/10W	
JR044	1-216-295-00	METAL GLAZE	0	5%	1/10W	R097	1-216-051-00	METAL GLAZE	1.2K	5%	1/10W	
JR046	1-216-296-00	METAL GLAZE	0	5%	1/8W	R098	1-216-051-00	METAL GLAZE	1.2K	5%	1/10W	
R001	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	R099	1-216-200-11	METAL GLAZE	1.2K	5%	1/8W	
R002	1-216-025-00	METAL GLAZE	100	5%	1/10W	R110	1-216-174-00	METAL GLAZE	100	5%	1/8W	
R003	1-216-025-00	METAL GLAZE	100	5%	1/10W	R111	1-216-174-00	METAL GLAZE	100	5%	1/8W	
R004	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	R112	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R005	1-216-025-00	METAL GLAZE	100	5%	1/10W	R113	1-216-113-71	METAL GLAZE	470K	5%	1/10W	
R006	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	R115	1-216-190-00	METAL GLAZE	470	5%	1/8W	
R007	1-216-089-00	METAL GLAZE	47K	5%	1/10W	R116	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R010	1-216-031-00	METAL GLAZE	180	5%	1/10W	R117	1-216-222-00	METAL GLAZE	10K	5%	1/8W	
R013	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W	R118	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W	
R014	1-216-071-00	METAL GLAZE	8.2K	5%	1/10W	R119	1-216-031-00	METAL GLAZE	180	5%	1/10W	
R015	1-216-049-00	METAL GLAZE	1K	5%	1/10W	R120	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R016	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W	R124	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R017	1-216-097-00	METAL GLAZE	100K	5%	1/10W	R125	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R018	1-216-025 - 00	METAL GLAZE	100	5%	1/10W	R126	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R019	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W	R134	1-216-037-00	METAL GLAZE	330	5%	1/10W	
					4.44.000	-4.50	4 046 000 00		450		4 /4 0**	
R020	1-216-065-00		4.7K		1/10W	R163	1-216-029-00	METAL GLAZE	150	5%	1/10W	
R021	1-216-270-00		1M	5%	1/8W	R174	1-216-057-00	METAL GLAZE	2.2K		1/10W	
R022	1-216-238-91		47K	5%	1/8W	R200	1-216-065-00	METAL GLAZE	4.7K		1/10W	
R023	1-216-057-00		2.2K		1/10W	R201	1-249-389-11		4.7	5%	1/4W F	
R025	1-216-091-00	METAL GLAZE	56K	5%	1/10W	R202	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
					4 (4 8		4 046 067 00		4		4 /4 0**	
R026	1-216-057-00		2.2K	5%	1/10W	R203	1-216-065-00		4.7K		1/10W	
R027	1-216-073-00		10K	5%	1/10W	R204	1-216-065-00		4.7K		1/10W	
R028	1-216-025-00		100	5%	1/10W	R205	1-216-295-00		0	5%	1/10W	
R029	1-216-039-00		390	5%	1/10W	R207	1-249-389-11		4.7	5%	1/4W F	
R030	1-215-900-11	METAL OXIDE	22K	5%	2W F	R209	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
			400		4.14.000	-010	4 045 055 00				4 /4 0**	
R031	1-216-025-00		100	5%	1/10W	R210	1-216-057-00		2.2K	5%	1/10W	
R032	1-216-025-00		100	5%	1/10W	R211	1-216-073-00		10K	5%	1/10W	
R033	1-216-057-00		2.2K		1/10W	R213	1-216-174-00		100	5%	1/8W	
R036	1-216-295-00		0	5%	1/10W	R214	1-216-174-00		100	5%	1/8W	
R037	1-216-093-00	METAL GLAZE	68K	5%	1/10W	R215	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
2000	4 444 444 41			=c	4 /4 0		4 045 055 55	100m3 = 45	222	F0	4 /4 /4*	
R038	1-216-295-00	METAL GLAZE	0	5%	1/10W	R225	1-216-037-00		330	5%	1/10W	
R040	1-216-089-00		47K	5%	1/10W	R226	1-216-081-00		22K	5%	1/10W	
R041	1-216-238-91		47K	5%	1/8W	R227	1-216-081-00		22K	5%	1/10W	
R044	1-216-073-00		10K	5%	1/10W	R236	1-216-089-00		47K	5%	1/10W	
R045	1-216-081-00	METAL GLAZE	22K	5%	1/10W	R237	1-216-093-00	METAL GLAZE	68K	5%	1/10W	
					4.40				4		4 14 00-	
R046		METAL GLAZE	220K	5%	1/8W	R238	1-216-089-00		47K	5%	1/10W	
R047	1-216-075-00		12K	5%	1/10W	R239	1-216-093-00		68K	5%	1/10W	
R049	1-216-041-71	METAL GLAZE	470	5%	1/10W	R240	1-216-073-00	METAL GLAZE	10K	5%	1/10W	



The components identified by shading and marked r. are critical for safety.

Replace only with the part number specified.

REF.NO.	PART NO.	DESCRIPTIO	N		REMARK	REF.NO.	PART NO.	DESCRIPTIO	N .		REMA	ARK
R301 R302	1-216-073-00 1-216-037-00	METAL GLAZE	10K 330	5% 5%	1/10W 1/10W	R408 R409	1-216-089-00 1-216-089-00	METAL GLAZE METAL GLAZE	47K 47K	5% 5%	1/10W 1/10W	
R303 R304 R305 R306 R307	1-216-090-00 1-216-025-00 1-216-025-00 1-216-113-71 1-216-121-71	METAL GLAZE METAL GLAZE	51K 100 100 470K 1M	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	R410 R411 R412 R413 R414	1-216-171-00 1-216-091-00 1-216-041-71 1-216-113-71 1-202-539-00		75 56K 470 470K 39	5% 5% 5% 5% 10%	1/8W 1/10W 1/10W 1/10W 1/2W	
R308 R309 R310 R311 R312	1-216-085-00 1-216-121-71 1-216-089-00 1-216-025-00 1-216-089-00	METAL GLAZE METAL GLAZE METAL GLAZE	33K 1M 47K 100 47K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	R415 R416 R417 R418 R419	1-202-539-00 1-216-022-00 1-216-296-00 1-216-113-71 1-216-113-71	SOLID METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	39 75 0 470K 470K	10% 5% 5% 5% 5%	1/2W 1/10W 1/8W 1/10W 1/10W	
R313 R314 R315 R316 R317	1-216-045-00 1-216-045-00 1-216-045-00 1-216-033-71 1-216-033-71	METAL GLAZE	680 680 680 220 220	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	R420 R421 R422 R423 R424	1-247-807-31 1-247-807-31 1-216-085-00 1-216-085-00 1-216-085-00	CARBON CARBON METAL GLAZE METAL GLAZE METAL GLAZE	100 100 33K 33K 33K	5% 5% 5% 5% 5%	1/4W 1/4W 1/10W 1/10W 1/10W	
R318 R322 R323 R325 R327	1-216-019-00 1-216-022-00 1-216-089-00 1-216-089-00 1-216-097-00	METAL GLAZE METAL GLAZE METAL GLAZE	56 75 47K 47K 100K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	R425 R426 R427 R428 R429	1-216-049-00 1-216-049-00 1-216-049-00 1-216-081-00 1-216-053-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 1K 1K 22K 1.5K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R328 R332 R333 R334 R335	1-216-077-00 1-216-093-00 1-216-037-00 1-216-033-71 1-216-295-00	METAL GLAZE	15K 68K 330 220	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	R430 R501 R502 R503 R504	1-216-009-00 1-208-806-11 1-216-677-11 1-216-230-00 1-216-095-00	METAL CHIP METAL GLAZE	22 10K 12K 22K 82K		1/10W 1/10W 1/10W 1/8W 1/10W	
R336 R337 R339 R340 R341	1-216-295-00 1-216-295-00 1-216-061-00 1-216-270-00 1-216-069-00		0 0 3.3K 1M 6.8K	5%	1/10W 1/10W 1/10W 1/8W 1/10W	R505 R506 R507 R508 R509	1-216-075-00 1-216-080-00 1-216-350-11 1-215-865-11 1-249-383-11		12K 20K 1.2 220 1.5	5% 5% 5% 5%	1/10W 1/10W 1W F 1W F 1/4W F	
R342 R343 R344 R345 R351	1-216-189-00 1-216-295-00 1-216-295-00 1-216-089-00 1-216-133-00	METAL GLAZE	430 0 0 47K 3.3M	5% 5% 5% 5%	1/8W 1/10W 1/10W 1/10W 1/10W	R513 R514 R515 R601		METAL GLAZE METAL GLAZE WIREWOUND	1K 47K 18K 3 3 1	5% 5% 5% 5% 5%	1/4W 1/10W 1/10W 10W 14 1/4W	を見る 中間 では では では では では では では で
R352 R354 R355 R356 R357	1-216-113-71 1-216-025-00 1-216-121-71 1-216-119-00 1-216-093-00	METAL GLAZE METAL GLAZE METAL GLAZE	470K 100 1M 820K 68K	5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	R603 R604 R605 R607 R608	1-215-875-11 1-215-902-11 1-216-364-71 1-215-858-00 1-216-365-00	METAL OXIDE METAL OXIDE METAL OXIDE	0.39 15	5%	1W F 2W F 2W F 1W F 2W F	
R359 R360 R361 R362 R363	1-216-089-00 1-216-049-00 1-216-022-00 1-216-022-00 1-216-022-00	METAL GLAZE METAL GLAZE METAL GLAZE	47K 1K 75 75	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	R611	1-249-420-11 1-249-415-11 1-216-354-11 1-260-135-111 1-249-417-11	CARBON METAL OXIDE CARBON	2.7	5% 5%	1/4W 1/4W 1W F 1/2W	
R364 R365 R366 R367 R368	1-216-081-00 1-216-089-00 1-216-041-71 1-216-081-00 1-216-089-00	METAL GLAZE METAL GLAZE METAL GLAZE	470 22K 5	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	R615 R616	1+210+265+11 1-216-073-00 1-215-479-00 1-215-877-11 1-247-863-91	METAL GLAZE METAL METAL OXIDE		5%	1/10W 1/4W 1W F 1/4W	RECEIVE N
R369 R401 R402 R403 R404	1-216-089-00 1-216-041-71 1-247-807-31 1-247-807-31 1-216-022-00	METAL GLAZE CARBON CARBON	470 100	5% 5% 5% 5% 5%	1/10W 1/10W 1/4W 1/4W 1/10W	R621	1-249-424-11 1-247-895-91 1-216-057-00 1-249-437-11 1-216-065-00	CARBON METAL GLAZE CARBON	3.9K 470K 2.2K 47K 4.7K	5% 5% 5%	1/4W 1/4W 1/10W 1/4W 1/10W	
R405 R406 R407	1-216-113-71 1-216-091-00 1-216-089-00	METAL GLAZE		5% 5% 5%	1/10W 1/10W 1/10W		1-216-425-11 1-249-417-11 1-247-807-31	CARBON	1K	5% 5% 5%	1W F 1/4W F 1/4W	

The components identified by shading and marked in are critical for safety.

Replace only with the part number

specified.



										L		DEMARK
REF.NO.	PART NO.	DESCRIPTIO	IN .			REMARK	REF.NO.	PART NO.	DESCRIPT	ION		REMARK
R634 R635	1-249-397-11 1-249-437-11	CARBON CARBON	22 47K	5% 5%	1/4W 1/4W	F	LD32 4044		NSFORMER >	x	L 0 00000:	S.E.ILLESSE
R636 R637 R638 R640 R645	1-249-417-11 1-247-815-91 1-247-863-91 1-216-425-11 1-249-422-11	CARBON CARBON	1K 220 22K 56 2.7K	5% 5% 5% 5%	1/4W 1/4W 1/4W 1W 1/4W	F	T602 T	1-427-962-21 1-429-840-11 1-437-090-31 1-453-199-11 < THE	TRANSFORMER HDT	CONVERTER		
R646 R647 R648 R651 R800	1-249-377-11 1-202-933-61 1-249-407-11 1-215-902-11 1-215-887-00	FUSIBLE CARBON	0.47 0.1 150 47K 150	5% 10% 5% 5% 5%	1/4W 1/2W 1/4W 2W 2W		TRP6CL	. 1-809-827-11 < TUN 1-693-338-11	ER >			
R801 R802 R803 R804	1-216-109-00 1-216-174-00 1-216-081-00 1-215-917-11	METAL GLAZE METAL GLAZE METAL GLAZE METAL	330K 100 22K 1K	5% 5% 5% 5%	1/10V 1/8W 1/10V 3W		X201 X301	< CRY 1-760-628-11 1-760-907-21	•	RYSTAL (18.4 RYSTAL (14.3		
R806	1-216-349-00	METAL OXIDE	1	5%	1W	F	X302	1-760-710-21		RYSTAL (17.4		
R807	1-249-399-11	CARBON CARBON	33 22K	5% 5%	1/4W 1/2W		******	******	******	******	*****	*****
R808 R809 R810 R811	1-260-115-11 1-215-911-11 1-247-895-91 1-215-889-00		100 470K 330	5% 5% 5%	3W 1/4W 2W	F		*A-1638-102-A	C BOARD, CO			
			0	5%	1/100			< CAF	PACITOR >			
R813 R814 R815 R816 R817	1-216-295-00 1-217-811-11 1-216-101-00 1-216-366-00 1-216-447-00	METAL GLAZE FUSIBLE METAL GLAZE METAL OXIDE METAL OXIDE	0.47 150K 0.56 27	5%	1/4W 1/4W 1/10V 2W 2W		C701 C702 C703 C704 C705	1-102-117-00 1-102-117-00 1-102-117-00 1-102-824-00 1-102-824-00	CERAMIC CERAMIC CERAMIC CERAMIC CERAMIC	820PF 820PF 820PF 470PF 470PF	10% 10% 10% 5% 5%	50V 50V 50V 50V 50V
R818 R819 R820 R821 R822	1-260-115-11 1-249-441-11 1-217-820-11 1-216-295-00 1-216-107-00	CARBON CARBON FUSIBLE METAL GLAZE METAL GLAZE	22K 100K 3.3K 0 270K	5% 5%	1/2W 1/4W 1/4W 1/10W 1/10W		C706 C707 C709 C710 C711	1-102-824-00 1-107-651-11 1-162-114-00 1-126-967-11 1-101-880-00	CERAMIC ELECT CERAMIC ELECT CERAMIC	470PF 4.7MF 0.0047MF 47MF 47PF	5% 20% 20% 5%	50V 250V 2KV 16V 50V
R823 R824 R825 R826 R828	1-249-413-11 1-216-125-00 1-216-105-71 1-216-296-00 1-216-115-00	METAL GLAZE	470 1.5M 220K 0 560K	5% 5%	1/4W 1/10V 1/10V 1/8W 1/10V	7	C712 C713	1-102-820-00 1-101-880-00	CERAMIC	330PF 47PF	5% 5%	50V 50V
R1200 R1201 R1202 R1203 R1208	1-216-065-00 1-216-081-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE FUSIBLE	2.2K 4.7K 22K 6.8K 4.7	5% 5%	1/8W 1/10V 1/10V 1/10V 1/4W	∛	CNC71 CNC72 CNC73 CNC76	*1-568-881-51 *1-568-880-51 1-695-915-21 1-695-915-21	PIN, CONNEC	TOR 5P		
R1209	1-212-849-00		4.7	5%	1/4W			< DIC	DE >			
R1211 R1212	1-249-424-11 1-249-424-11	CARBON CARBON	3.9K 3.9K	5%	1/4W 1/4W		D701 D702 D703	8-719-991-33 8-719-991-33 8-719-991-33	DIODE 1SS13 DIODE 1SS13	3T-77 3T-77		
40778LESS		LAY >	基础 医原生	17591	1 张慈慈惠	生景度, 紹介 基	D704 D705	8-719-991-33 8-719-991-33				
KIOUU A	1+755-018-11		468811	SIII)	1111	412(2)	D706	8-719-991-33				
S001 S002	1-571-532-21	ITCH > SWITCH, TACT SWITCH, TACT					D707 D708 D709 D716	8-719-991-33 8-719-991-33 8-719-991-33 8-719-991-33	DIODE 1SS13 DIODE 1SS13	3T-77 3T-77		
S003 S004 S005	1-571-532-21 1-571-532-21	SWITCH, TACT SWITCH, TACT SWITCH, TACT	IL IL				D717 D718 D719 D723	8-719-054-81 8-719-991-33 8-719-054-81 8-719-991-33	DIODE 1SS13 DIODE 1SS29	3T-77 2T-77		
	1-5/1-433-21			OWER)	1111	111 311	D724	8-719-054-81				



PART NO. REF.NO.

DESCRIPTION

The components identified by shading and marked 🛝 are critical for safety.

Replace only with the part number

specified.

REF.NO.

REMARK

PART NO.

DESCRIPTION

REMARK

(PORTUGUESE)

MISCELLANEOUS

***	*****
A 1-406-828-11	COIL, DEGAUSSING
1-452-032-00	MAGNET, DISC; 10MM Ø
1-452-094-00	
1-452-277-00	
1. 1-453-199-11	TRANSFORMER ASSY, FLYBACK (MX-1741/U2)
1-503-258-21	
A. 1-540-806-22	CAP ASSY, ETGH-VOLTAGE
A 1-571-433-11	SWITTCH, PUSH (AC POWER)
A 1-765-285-11	
1-693-338-11	TUNER (TUVIF) (AEP)
A 8-738-784-05	PICTURE TUBE (SD-169] (ASIJIMEIK)
△ 8-738-787-71	
4 8-151-295-49	distinction tone (Y21PA2BA)
	ESSORIES AND PACKING MATERIALS
*4-042-477-01	BAG, PROTECTION
*4-203-444-01	
*4-203-445-01	
*4-203-447-01	
4 000 574 44	WANTED THOMPSON ON CONTRACT CONTRACT
4-203-574-41 4-203-574-11	
4-203-3/4-11	MANUAL, INSTRUCTION (KV-21R1D) (GERMAN/ENGLISH/DUTCH/ITALIAN/FRENCH
	GREEK/TURKISH)
4-203-574-71	MANUAL, INSTRUCTION (KV-21R1E) (SPANISH
4-203-574-81	MANUAL, INSTRUCTION (KV-21R1E)
	/ DODMICITE CE

REMOTE COMMANDER

1-473-194-11 COMMANDER, STANDARD TYPE (RM-836)

•	CVI	POCKET	,
- max	OR MORE STORY OF		S . I

U.A.G.Z.	A 1-526-990-22				in ret	2 4 T T	
	< IN	IDUCTOR >					
L702	1-408-425-00	INDUCTOR	220UH				
	< TF	RANSISTOR >					
Q701	8-729-119-78	TRANSISTOR					
Q702 0703	8-729-119-78 8-729-119-78	TRANSISTOR TRANSISTOR					
Q704	8-729-906-70	TRANSISTOR					
Q705	8-729-906-70	TRANSISTOR	BF871-12	27			
Q706	8-729-906-70	TRANSISTOR					
Q707 Q708	8-729-200-17 8-729-200-17	TRANSISTOR TRANSISTOR		-			
Q709	8-729-200-17	TRANSISTOR		-			
	< RES	SISTOR >					
R700	1-247-807-31	CARBON	100	5%	1/4W		
R701 R702	1-249-417-11 1-249-417-11	CARBON CARBON	1K 1K	5% 5%	1/4W 1/4W		
R706	1-249-399-11	CARBON	33	5%	1/4W	F	
R707	1-249-401-11	CARBON	47	5%	1/4W		
R708	1-247-815-91	CARBON	220	5%	1/4W		
R709 R710	1-247-815-91 1-247-815-91	CARBON CARBON	220 220	5% 5%	1/4W 1/4W		
R711	1-249-417-11	CARBON	1K	5%	1/4W		
R714	1-249-417-11	CARBON	1K	5%	1/4W		
R715	1-249-417-11	CARBON	1K	5%	1/4W		
R716 R717	1-249-417-11 1-260-105-11	CARBON CARBON	1K 3.3K	5% 5%	1/4W 1/2W		
R718	1-260-105-11	CARBON	3.3K	5%	1/2W		
R719	1-260-105-11	CARBON	3.3K	5%	1/2W		
R720 R721	1-215-923-51	METAL OXIDE	10K	5%	3W	F	
3722	1-215-923-51 1-215-923-51	METAL OXIDE	10K 10K	5% 5%	3W 3W	F F	
724	1-202-814-91	SOLID	33K	10%	1/2W	-	
R725	1-202-846-00	SOLID	470K	10%	1/2W		
R729	1-216-355-11	METAL OXIDE	3.3	5%	1W	F	
R730 R731	1-249-410-11 1-247-815-91	CARBON CARBON	270 220	5% 5%	1/4W 1/4W		
2732	1-249-410-11	CARBON	270	5%	1/4W		
R734	1-247-815-91	CARBON	220	5%	1/4W		
735	1-247-815-91	CARBON	220	5%	1/4W		
R736 R744	1-247-815-91 1-260-103-11	CARBON CARBON	220	5%	1/4W		
745	1-260-103-11	CARBON	2.2K 2.2K	5% 5%	1/2W 1/2W		
746	1-260-103-11	CARBON	2.2K	5%	1/2W		

< VARIABLE RESISTOR >

RV702 1-241-656-21 RES, ADJ, METAL GLAZE 110M

SERVICE MANUAL

BE-5 CHASSIS

MODEL	COMMANDER	DEST.	CHASSIS NO.	MODEL	COMMANDER	DEST.	CHASSIS NO.
KV-21R1A	RM-836	Italian	SCC-K31A-A				
KV-21R1D	RM-836	AEP	SCC-K32A-A				
KV-21R1E	RM-836	Spanish	SCC-K30A-A				

SUPPLEMENT - 1

SUBJECT: ADDITION OF M BOARD

File this supplement with the service manual

INTRODUCTION: New M Board has been added to the above models

SECTION 4 CIRCUIT ADJUSTMENTS

4-2 TEST MODE 2 (Page 21) See page 2

SECTION 5 DIAGRAMS

(A board, Page 33) See page 3 (M board, NEW) See page 9

SECTION 6 EXPLODED VIEWS

6-1. CHASSIS (Page 43) See page 11

• SECTION 7 ELECTRICAL PARTS LIST (Page 45) See page 12





 \bigcirc

4-2. TEST MODE 2:

Is available by pressing the Test button twice, OSD "TT" appears. The functions described below are available by pressing two digits. To release Test Mode 2, press 0 twice, press 'TEST', press 'TV' or switch the TV into Standby Mode.

00	Switch'TT' mode off				
01	Set picture level to maximum				
02	Set picture level to minimum				
03	Set volume to 35%				
04	Set volume to 50%				
05	Set volume to 65%				
06	Set Volume to 80%				
07	Aging condition (picture max. brightness max.)				
08	Shipping Condition(prog 1. Zoom1(16"). Zoom2(21"&25"). Volume, loudspeaker & headphones 35%				
09-10	No function				
11	Sets zoom mode in 4:3 mode				
12-14	No function				
15	Read factory setting from ROM to NVM. Reads volume, Brightness, Picture, Hue, Sharpness and Colour values from ROM to the actual used values(last power memory)				
16	Save actual used values as reset values.				
17	Meshing enable/disable.				
18	No function				
19	RGB priority enable/disable				
20-21	No function				
22	Sub Colour (Pal / Secam different stores)				
23	Sub Brightness				
24	Destination B, system BG/L, L by default, RGB priority off				
25	Destination E, system BG/DK, BG by default, RGB priority off				
26	Destination U, system I only, RGB priority off				
27	Destination L, system I/I, RGB priority off				
28	Destination A, system BG only, RGB priority off				
29	Destination K, system DK/BG, DK by default, RGB priority off				
30	Destination D, system BG/DK, BG by default RGB priority off				


31	no function
32	Picture level to 50%
33-35	no function
36	Audio mute ON.
37	OSD off.
38	Enter G2 adjustment mode.
39	Sub-brightness
40	no function
41	Re-initialise NVM.
42	Dummy.
43	Re-initialise Geometry settings.
44-47	no function
48	Set NVM testbyte to 44h in NVM.
49	Erase NVM testbyte
50	Toggle 16:9 / 4:3 models
51	Toggle 60 / 100 programes
55	OSD horizontal adjustment, left side.
66	OSD horizontal adjustment, right side.
75	Text not interlaced and odd field
76	Text not interlaced and even field
77	Toggle text destination west or east
88	Sets V size to minimum and zoom1 (blankings adjustment for wide model)
99	Recovers V size and sets zoom3 (blankings adjustment for wide model)


Note: For Test Modes 41-51, it is necessary to ensure that the TV is set to Prog 59.


 $\mbox{\bf Note}: TT$ modes are available from the following software versions onwards:

•	8-759-456-22 8-759-458-83	M27C512-90C1-BE5-7 M27C512-90C1-BE5-R2 (RUSSIA)
	8-759-440-74 8-759-444-78	M27C512-90C1-BE5-1 M27C512-90C1-BE5-R1 (RUSSIA)

8-759-460-03 M27C512-90C1-BE5-10 M27C512-90C1-BE5-12 (RUSSIA)

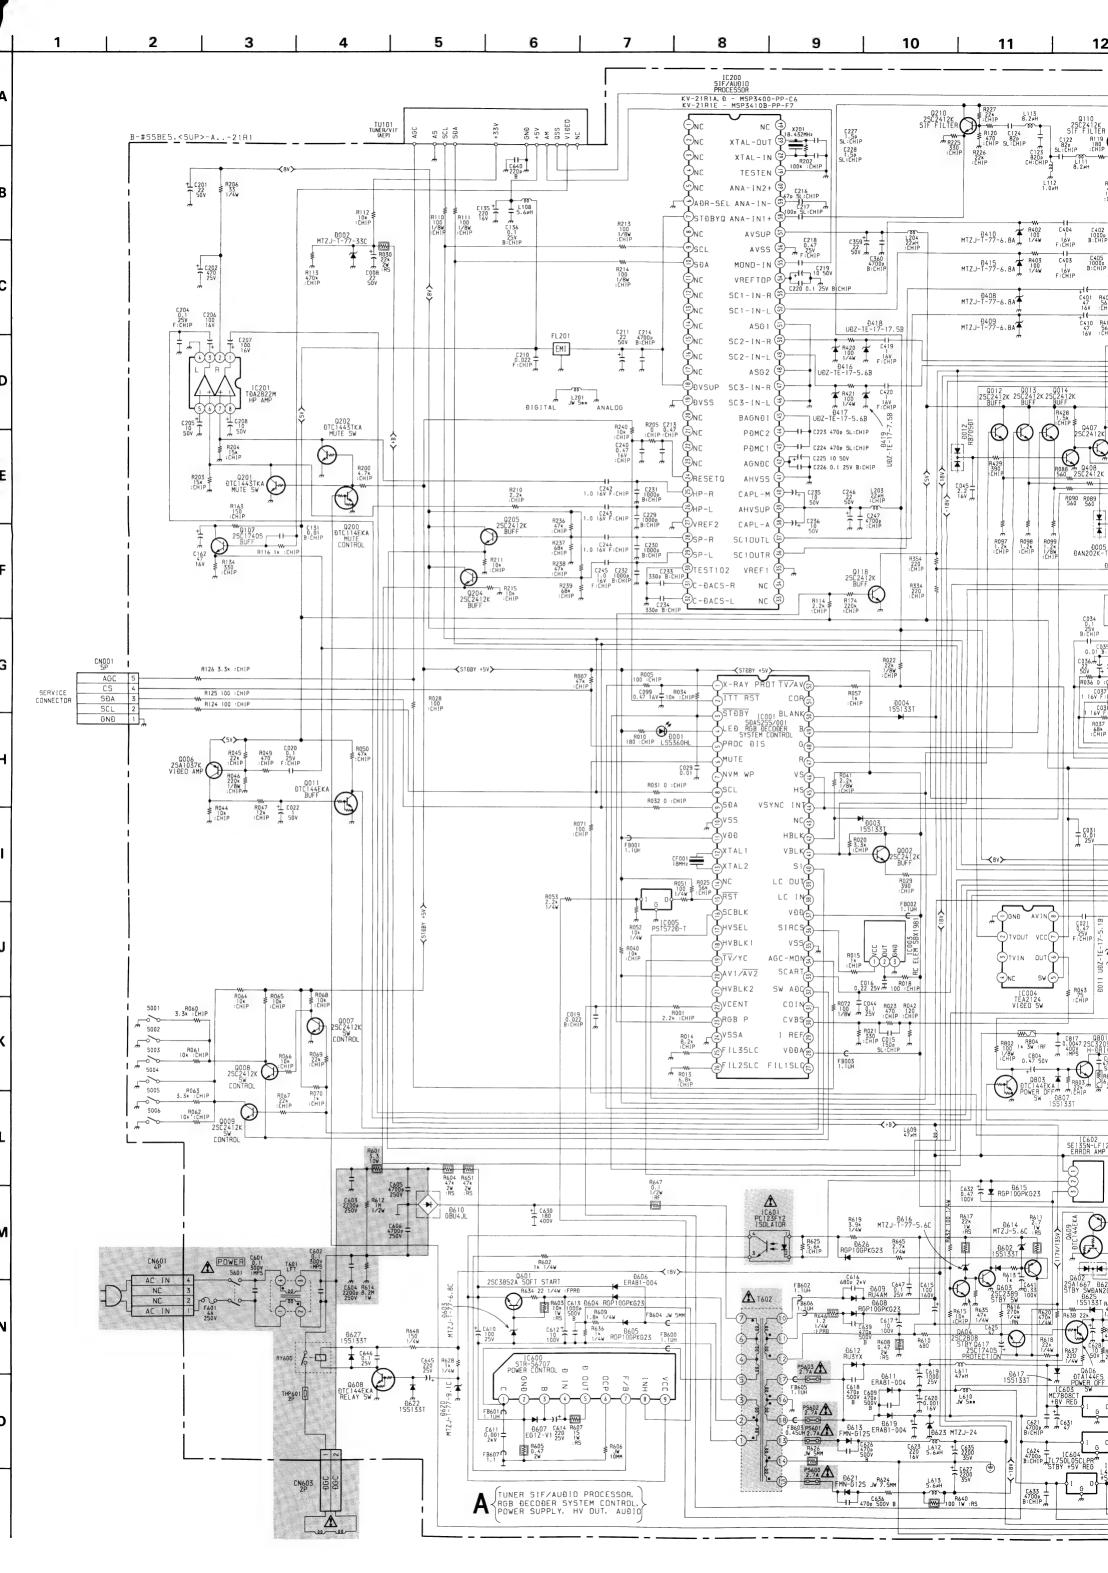

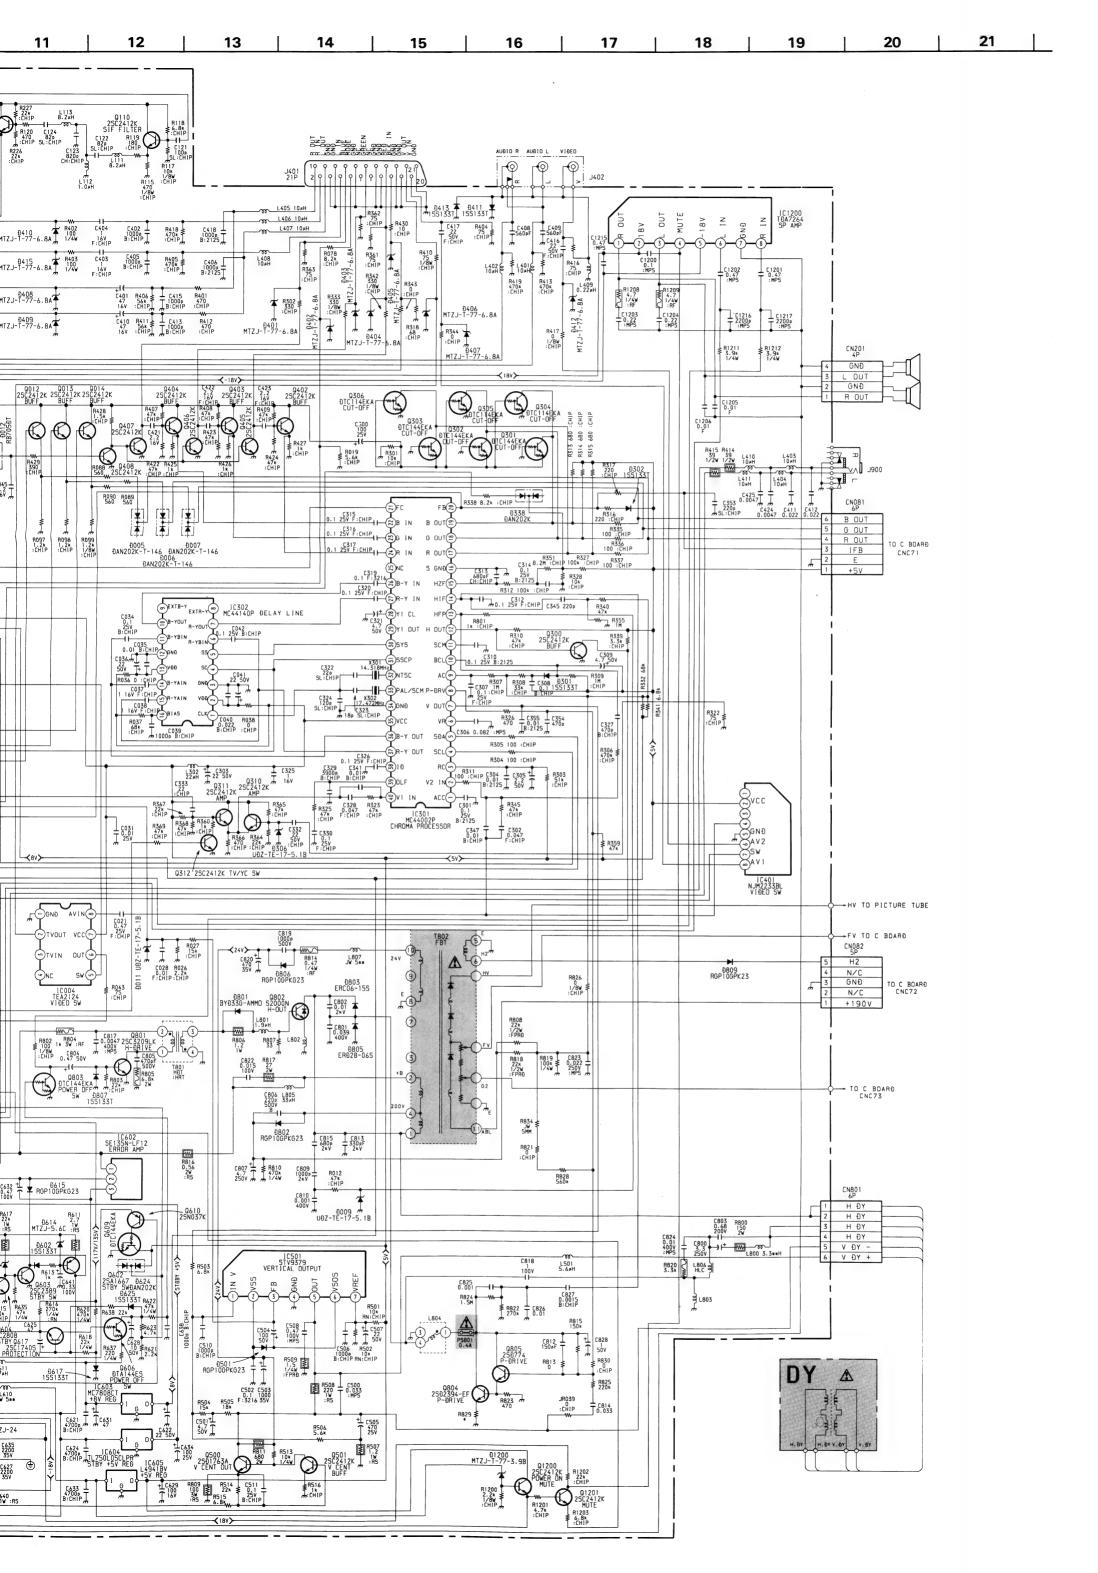


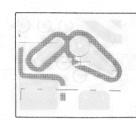


NOTE: The circuit indicated 600 Vp-p. Care must inspection or repairin


A


TUNER, SIF/AUDIO PROCESSOR, CRT DRIVER, POWER SUPPLY, HV OUT, AUDIO

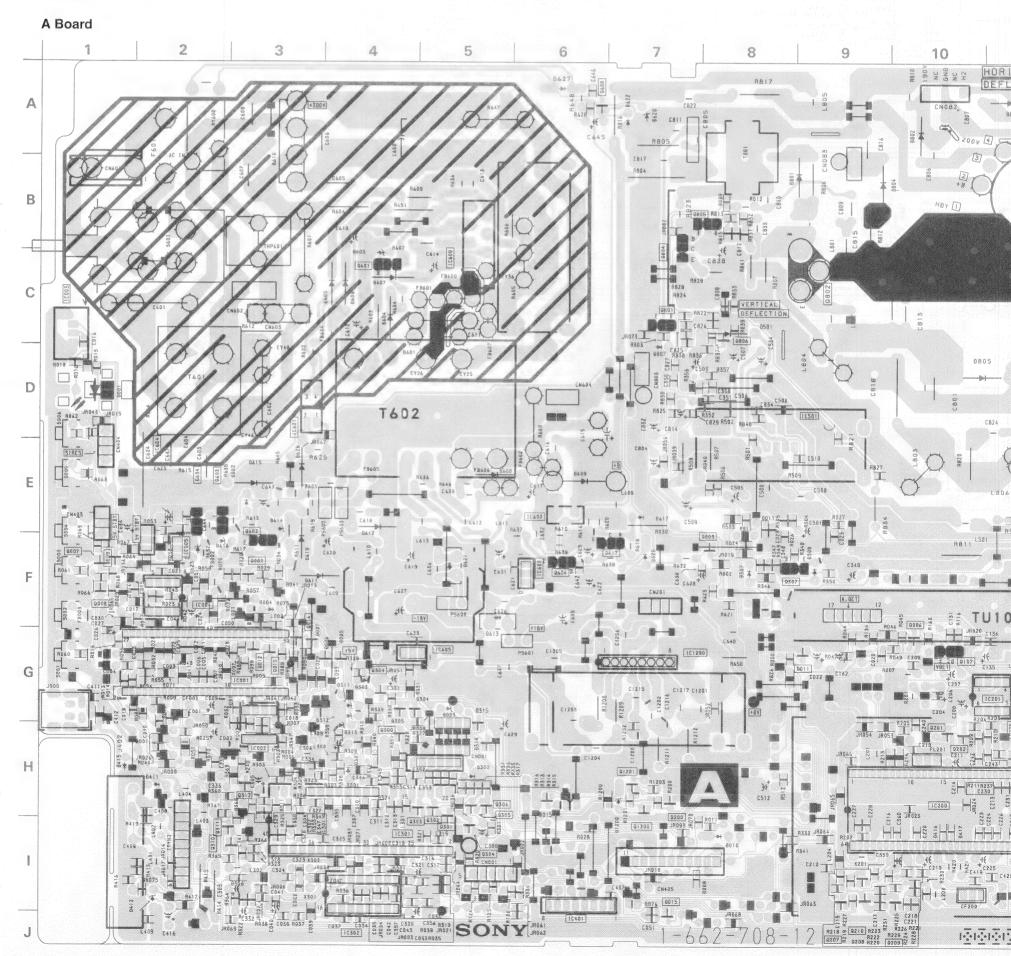


uit indicated as left contains high voltage of over b. Care must be paid to prevent an electric shock in on or repairing.

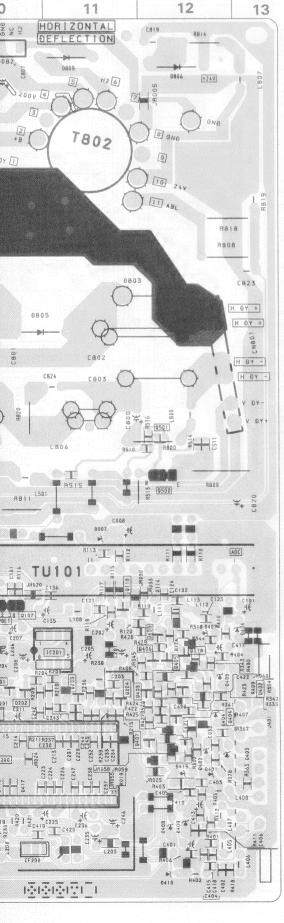

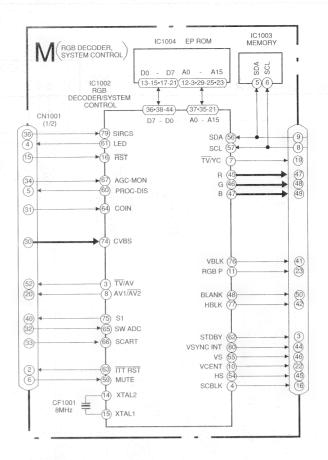

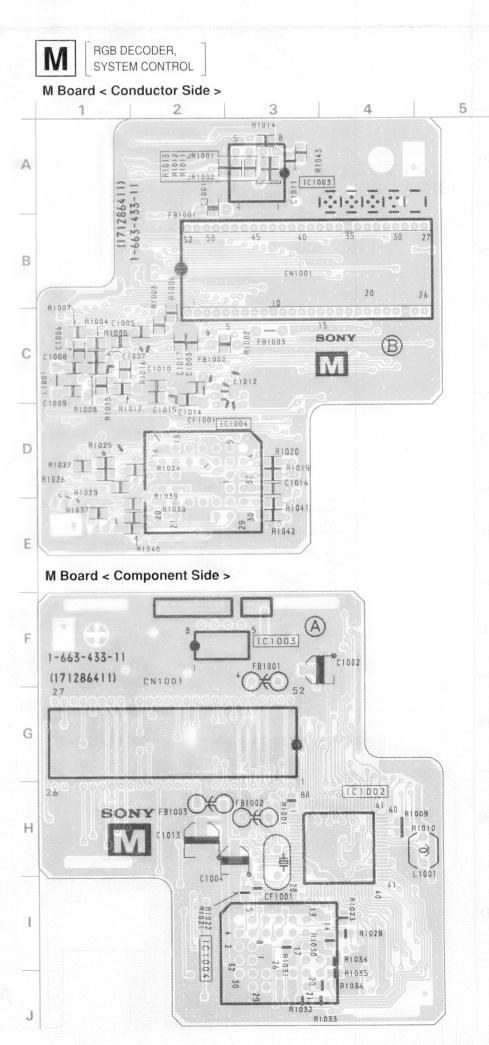

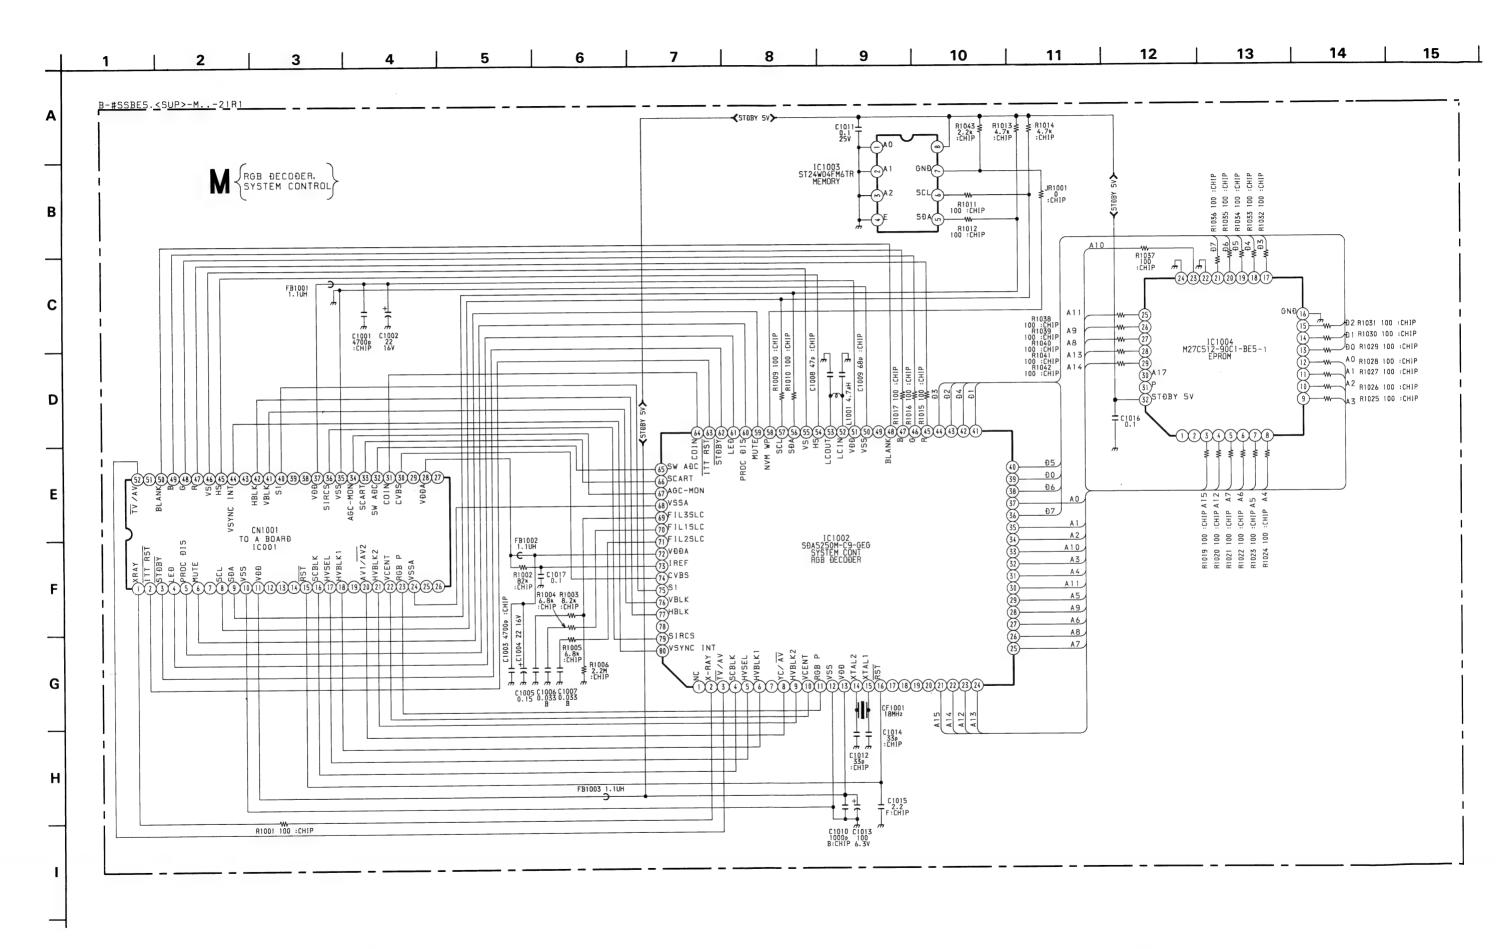

A

SECTION 6

NOTE:

EXPLODED VIEWS

- Items with no part number and no description are not stocked because they are seldom required for routine service.


 The construction serves for a service below the service in the service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and marked ! are critical for safety.

Replace only with the part number specified.

Les composants identifies par une trame et une marque de sont critiques pour la securite.

Ne les remplacer que par une piece portant le numero specifie.

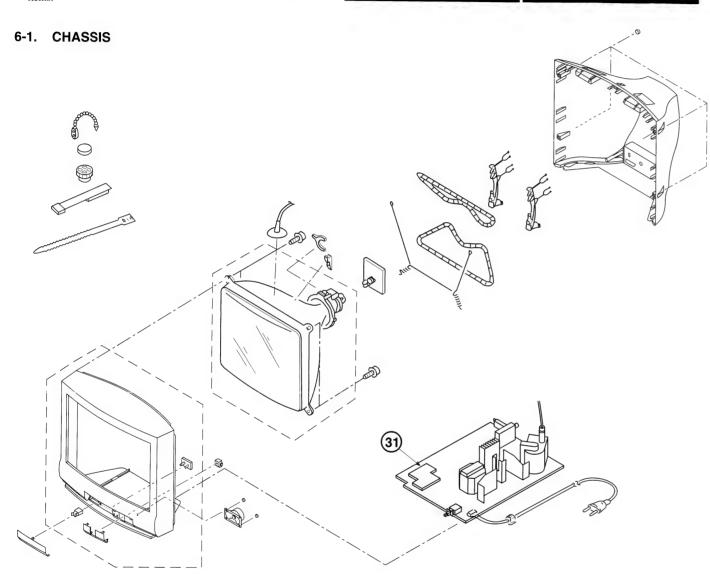

REF NO	PART NO	DESCRIPTION	REMARK	REF NO	PART NO	DESCRIPTION	REMARK
31	A-1634-042-A	M BOARD, COMPLETE					
				1			

SECTION 7 ELECTRICAL PARTS LIST

When indicating parts by reference number, please include the board name.

 $\begin{array}{ccc} CAPACITORS & COILS \\ MF: mF, PF: mmF & MMH: mH, \mu H: mH \end{array}$

they are seldom required for routine service. Some delay should be anticipated when ordering these items.

• Items marked " * " are not stocked since

 All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

RESISTORS

- All resistors are in ohms
- F: nonflammable

The components identified by shading and marked in are critical for safety.

Replace only with the part number specified.

Les composants identifies par une trame et une marque As sont critiques pour la securite.

Ne les remplacer que par une piece portant le numero specifie.

REF.NO.	PART NO.	DESCRIPTI	ON		REMARK	REF.NO.	PART NO.	DESCRIPTION	ON		REMARK
		A BOARD				C345 C350	1-163-125-00 DELETED	CERAMIC CHIP	220PF	5%	50V
	< CA	PACITOR >				C354 C358	1-163-005-11 DELETED	CERAMIC CHIP	470PF	10%	50V
C002	DELETED					C408	1-163-135-00	CERAMIC	560PF	5%	50V
C003 C004 C005 C006	DELETED DELETED DELETED DELETED					C409 C416 C417 C421	1-163-135-00 1-126-965-11 1-126-965-11 1-164-337-11	ELECT ELECT	560PF 22MF 22MF 2.2MF	5% 20% 20%	50V 50V 50V 16V
C007	DELETED					C422	1-164-337-11	CERAMIC CHIP	2.2MF		16V
C009 C011 C012 C013	DELETED DELETED DELETED DELETED					C423 C424 C425 C611 C620	1-164-337-11 1-163-017-00 1-163-017-00 1-136-538-11 1-111-041-11		0.0047MF 0.0047MF 0.001MF	10% 10% 3%	16V 50V 50V 2KV
C014	1-164-346-11				16V	C020	1-111-041-11	ELECT	0.001MF	20%	16V
C017 C018 C024 C025	1-162-638-11 DELETED DELETED DELETED	CERAMIC CHI	P 1MF		16V	C623 C629 C631 C632 C641	1-111-034-11 1-124-455-00 1-124-910-11 1-130-785-11	ELECT ELECT MYLAR	220MF 100MF 47MF 0.47MF	20% 20% 20% 10%	16V 16V 50V 100V
C026	DELETED						1-130-783-00	MYLAR	0.33MF	10%	100V
C027 C028 C029 C031	DELETED 1-164-232-11 1-163-077-00 1-163-038-00	CERAMIC CHIR CERAMIC CHIR CERAMIC CHIR	0.01MF	10%	50V 50V 25V	C645 C646 C647 C805	1-104-666-11 1-163-038-00 1-163-038-00 1-102-228-00	CERAMIC CHIP		20%	25V 25V 25V 500V
C044	1-164-004-11	CERAMIC CHIE	0.1MF	10%	25V	C811	DELETED				
C045 C099 C123	1-164-505-11 1-165-320-11 1-163-139-00	CERAMIC CHIE CERAMIC CHIE CERAMIC CHIE	2.2MF 0.47MF	10% 5%	16V 16V 50V	C812 C813 C827	1-163-121-00 1-162-115-00 1-163-011-11	CERAMIC CHIP CERAMIC CERAMIC CHIP	330PF	5% 10% 10%	50V 2KV 50V
C202	1-126-941-11	ELECT	470MF	20%	25V				010013111	200	301
C204 C205	1-163-038-00	CERAMIC CHIE			25V	Section (in the section of the contract of the		NECTOR >			
C205 C206 C207 C208	1-126-964-11 1-126-933-11 1-126-933-11 1-126-964-11	ELECT ELECT	10MF 100MF 100MF 10MF	20% 20% 20% 20%	50V 16V 16V 50V	CN602 1	DELETED < DIO		And the second s		
C209 C213 C300	DELETED 1-164-005-11 1-126-942-61	CERAMIC CHIP	0.47MF 1000MF	20%	25V 25V	D009 D011 D012 D306	8-719-976-99 8-719-992-02 8-719-976-99	DIODE DTZ5.1E DIODE DTZ5.1E DIODE RB705D- DIODE DTZ5.1E	T146		
C306 C308	1-136-164-00 1-164-004-11	FILM CERAMIC CHIP	0.082MF 0.1MF	5% 10%	50V 25V	D338	8-719-914-43	DIODE DAN202K			
C313 C317 C318 C325	1-163-137-00 1-163-038-00 DELETED 1-164-346-11		0.1MF	5%	50V 25V	D411 D413 D418 D419	8-719-991-33 8-719-991-33 8-719-056-84 8-719-056-84	DIODE 1SS133T DIODE 1SS133T DIODE UDZ-TE- DIODE UDZ-TE-	-77 17-7.5B 17-7.5B		
C332	1-126-965-11		22MF	20%	16V 50V	D623	8-719-924-16	DIODE MTZJ-T-			
C333	1-107-715-11	ELECT	22MF		16V	D624	8-719-914-43	DIODE DAN202K			



REF.NO.	PART NO.	DESCRIPTION	1		REMARK	REF.NO.	PART NO.	DESCRIPTIO	N		REMARK
IC002	< IC DELETED < COI					R207 R209 R312 R318 R326	DELETED DELETED 1-216-097-00 1-216-021-00 1-216-041-00		100K 68 470	5% 5% 5%	1/10W 1/10W 1/10W
L001 L405 L406 L407 L408	DELETED 1-408-409-00 1-408-409-00 1-408-409-00 1-408-409-00	INDUCTOR INDUCTOR INDUCTOR INDUCTOR	10UH 10UH 10UH 10UH			R328 R335 R336 R337 R338	1-216-073-00 1-216-025-00 1-216-025-00 1-216-025-00 1-216-071-00	METAL GLAZE METAL GLAZE METAL GLAZE	10K 100 100 100 8.2K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
L409 L410 L411 L501	1-410-985-11 1-408-409-00 1-408-409-00 1-412-522-41	INDUCTOR CHIP INDUCTOR INDUCTOR INDUCTOR	0.22 10UH 10UH 5.6U			R340 R342 R351 R352 R354	1-216-238-91 1-216-186-00 1-218-463-91 DELETED 1-216-033-00	METAL GLAZE METAL GLAZE	47K 330 8.2M	5% 5% 5%	1/8W 1/8W 1/10W
	< TRA	NSISTOR >						METAL GUALL	220	3.0	1/1011
Q609 Q610	8-729-027-59 8-729-216-22 < RES					R356 R357 R414 R415 R422	DELETED DELETED 1-260-311-11 1-260-311-11 1-216-691-11	CARBON	39 39 47K	5% 5% 0.5%	1/2W 1/2W 1/10W
JR038 JR040 JR041 JR042	DELETED DELETED DELETED					R423 R424 R425 R426 R427	1-216-691-11 1-216-691-11 1-216-651-11 1-216-651-11 1-216-651-11	METAL CHIP METAL CHIP METAL CHIP	47K 47K 1K 1K 1K	0.5% 0.5%	1/10W 1/10W 1/10W 1/10W 1/10W
R001 R002 R003 R004 R006	1-216-057-00 DELETED DELETED DELETED DELETED	METAL GLAZE	2.2K	5%	1/10W	R428 R429 R430 R502 R503	1-216-053-00 1-216-188-00 1-216-001-00 1-208-806-11 1-216-218-00	METAL GLAZE METAL GLAZE METAL GLAZE	1.5K 390 10 10K 6.8K	5% 5% 5%	1/10W 1/8W 1/10W 5 1/10W 1/8W
R012 R015 R016 R017 R020	1-249-437-11 1-216-296-00 DELETED DELETED 1-216-061-00	METAL GLAZE	47K 1K	5% 0.5% 5%	1/4W 1/8W	R504 R505 R506 R513	1-216-077-00 1-216-079-00 1-216-669-11 1-249-429-11	METAL GLAZE METAL GLAZE METAL GLAZE CARBON	15K 18K 5.6K 10K	5% 5% 0.5% 5%	1/10W 1/10W 1/10W 1/4W
R021 R022 R023 R027 R031	1-216-258-00 1-216-081-91 1-216-041-00 1-216-077-00 1-216-295-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	330K 22K 470 15K 0	5% 5% 5% 5% 5%	1/8W 1/8W 1/10W 1/10W 1/10W	R514 R515 R516 R605 R625 R623	1-216-081-00 1-216-069-00 1-216-049-00 1-216-365-00 1-249-426-11 1-216-065-00	METAL GLAZE METAL OXIDE	22K 6.8K 1K 0.47 5.6K 4.7K	5%	1/10W 1/10W 1/10W 2W F 1/4W 1/10W
R033 R034 R040 R041	DELETED 1-216-073-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE	10K 10K 2.2K	5% 5%	1/10W 1/10W 1/8W	R627 R640 R646 R801 R805	DELETED 1-216-025-00 1-249-382-11 1-216-049-00 1-215-897-11	CARBON METAL GLAZE	100 1.2 1K 6.8K	5% 5% 5% 5%	1/10W 1/4W F 1/10W 2W
R042 R043 R054 R057 R071	1-216-027-00 1-216-022-00 DELETED 1-216-198-91 1-216-174-00	METAL GLAZE	120 75 1K 100	5% 5% 5% 5%	1/10W 1/10W 1/8W 1/8W	R806 R811 R830	1-216-350-00 1-215-891-11 1-216-295-00	METAL OXIDE METAL OXIDE METAL GLAZE	1.2 680 0	5% 5% 5%	1W F 2W F 1/10W
R072 R088 R089 R114 R120	1-216-174-00 1-216-043-91 1-216-043-91 1-216-057-00	METAL GLAZE METAL GLAZE METAL GLAZE	100 560 560 2.2K 470	5% 5% 5%	1/8W 1/10W 1/10W 1/10W 1/10W	******	******	******	*****	*****	******
R174 R200 R201 R203	1-216-033-00 1-216-065-00 DELETED 1-216-077-00	METAL GLAZE	220K 4.7K 15K		1/10W 1/10W 1/10W						
R204	1-216-077-00		15K	5%	1/10W						
R206	1-249-399-11	CARBON	33	5%	1/4W						

										M	C
REF.NO.	PART NO.	DESCRIPTION		REMARK	REF.NO.	PART NO.	DESCRIPTION	NC			REMARK
	*A-1634-042-A	M BOARD, COMPLETE			R1013 R1014 R1015	1-216-065-00 1-216-065-00 1-216-025-00	METAL GLAZE	4.7K 4.7K 100		1/10W 1/10W 1/10W	1
	1-750-797-11	SOCKET, PLCC			R1016 R1017	1-216-025-00 1-216-025-00 1-216-025-00		100 100	5% 5%	1/10W 1/10W 1/10W	1
	< CAP	ACITOR >			R1019						
C1001 C1002 C1003 C1004	1-126-395-11	CERAMIC CHIP 0.0047MF	10% 20% 10% 20%	50V 16V 50V 16V	R1019 R1020 R1021 R1022 R1023	1-216-025-00 1-216-025-00 1-216-025-00 1-216-025-00 1-216-025-00	METAL GLAZE METAL GLAZE	100 100 100 100 100	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
C1005	1-164-492-11		10%	16V							
C1006 C1007 C1008 C1009 C1010	1-163-078-11 1-163-109-00 1-163-247-91	CERAMIC CHIP 0.033MF CERAMIC CHIP 0.033MF CERAMIC CHIP 47PF CERAMIC CHIP 68PF CERAMIC CHIP 0.001MF	10% 10% 5% 5% 10%	25V 25V 50V 50V 50V	R1024 R1025 R1026 R1027 R1028	1-216-025-00 1-216-025-00 1-216-025-00 1-216-025-00 1-216-025-00	METAL GLAZE	100 100 100 100 100	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
C1011 C1012 C1013 C1014 C1015	1-163-105-00 1-126-206-11 1-163-105-00	CERAMIC CHIP 0.1MF CERAMIC CHIP 33PF ELECT 100MF CERAMIC CHIP 33PF CERAMIC CHIP 2.2MF	10% 5% 20% 5%	25V 50V 6.3V 50V 16V	R1029 R1030 R1031 R1032 R1033	1-216-025-00 1-216-025-00 1-216-025-00 1-216-025-00 1-216-025-00	METAL GLAZE METAL GLAZE METAL GLAZE	100 100 100 100 100	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
C1016 C1017	1-164-004-11 1-164-004-11	CERAMIC CHIP 0.1MF CERAMIC CHIP 0.1MF	10% 10%	25V 25V	R1034 R1035 R1036 R1037	1-216-025-00 1-216-025-00 1-216-025-00 1-216-025-00	METAL GLAZE METAL GLAZE METAL GLAZE	100 100 100 100	5% 5% 5%	1/10W 1/10W 1/10W 1/10W	
	< FIL	TER >			R1038	1-216-025-00	METAL GLAZE	100	5%	1/10W	
CF1001		VIBRATOR, CERAMIC (8MHz) RITE BEAD >)		R1039 R1040 R1041	1-216-025-00 1-216-025-00 1-216-025-00	METAL GLAZE	100 100	5% 5% 5%	1/10W 1/10W	
FB1001		FERRITE BEAD INDUCTOR 1.	. 1UH		R1042 R1043	1-216-025-00 1-216-025-00 1-216-057-00	METAL GLAZE	100 100 2,2K	5%	1/10W 1/10W 1/10W	
FB1002 FB1003	1-410-397-21	FERRITE BEAD INDUCTOR 1. FERRITE BEAD INDUCTOR 1.	.1UH			******				•	
	< IC	>					C BOARD				
IC1002 IC1003 IC1004	8-759-432-32	IC SDA5250M-C9-GEG IC ST24W04FM6TR IC M27C512-90C1-BE5-1					ACITOR >				
	< COI	L >			C701 C702 C703	1-102-115-00 1-102-115-00 1-102-115-00	CERAMIC	560PF 560PF 560PF		10% 10% 10%	50V 50V 50V
L1001	1-408-405-00	INDUCTOR 4.7UH					ISTOR >	50011		200	301
	< RES	ISTOR >			R700	1-202-549-00	SOLID	100	20%	1/2W	
JR1001	1-216-295-00	METAL GLAZE 0 5%	1/10	٧	R729	1-216-350-11		1.2	20% 5%	1W	
R1001 R1002 R1003 R1004 R1005	1-216-025-00 1-216-095-00 1-216-071-00 1-216-069-00	METAL GLAZE 82K 5% METAL GLAZE 8.2K 5% METAL GLAZE 6.8K 5%	1/100 1/100 1/100 1/100	4 4	******	*********	*******	******	****	******	******

Sony Corporation
Sony UK
Service Promotions Div.

English 97BP7144-1 Printed in U.K. © 1997.02

R1005

R1006

R1009

R1010

R1011

R1012

1-216-069-00 METAL GLAZE

1-216-129-00 METAL GLAZE

1-216-025-00 METAL GLAZE 1-216-025-00 METAL GLAZE

1-216-025-00 METAL GLAZE

1-216-025-00 METAL GLAZE

6.8K 5%

2.2M 5% 100 5%

100

100

100

5%

5% 5% 1/10W

1/10W

1/10W

1/10W

1/10W

1/10W

SERVICE MANUAL

BE-5 CHASSIS

MODEL	COMMANDER	DEST.	CHASSIS NO.	MODEL	COMMANDER	DEST.	CHASSIS NO.
KV-21R1A	RM-836	Italian	SCC-K31A-A				
KV-21R1D	RM-836	AEP	SCC-K32A-A				
KV-21R1E	RM-836	Spanish	SCC-K30A-A				

SUPPLEMENT - 2

SUBJECT: DELETION OF M BOARD

File this supplement with the service manual

INTRODUCTION: 1. This supplement refers to models where the M Board has been deleted, and the circuitry incorporated onto the A Board.


• SECTION 5 DIAGRAMS


(A Board, Page 33) See page 3


• SECTION 6 EXPLODED VIEWS
6-1. CHASSIS (Page 43) See page 8

• SECTION 7 ELECTRICAL PARTS LIST (Page 45) See page 9



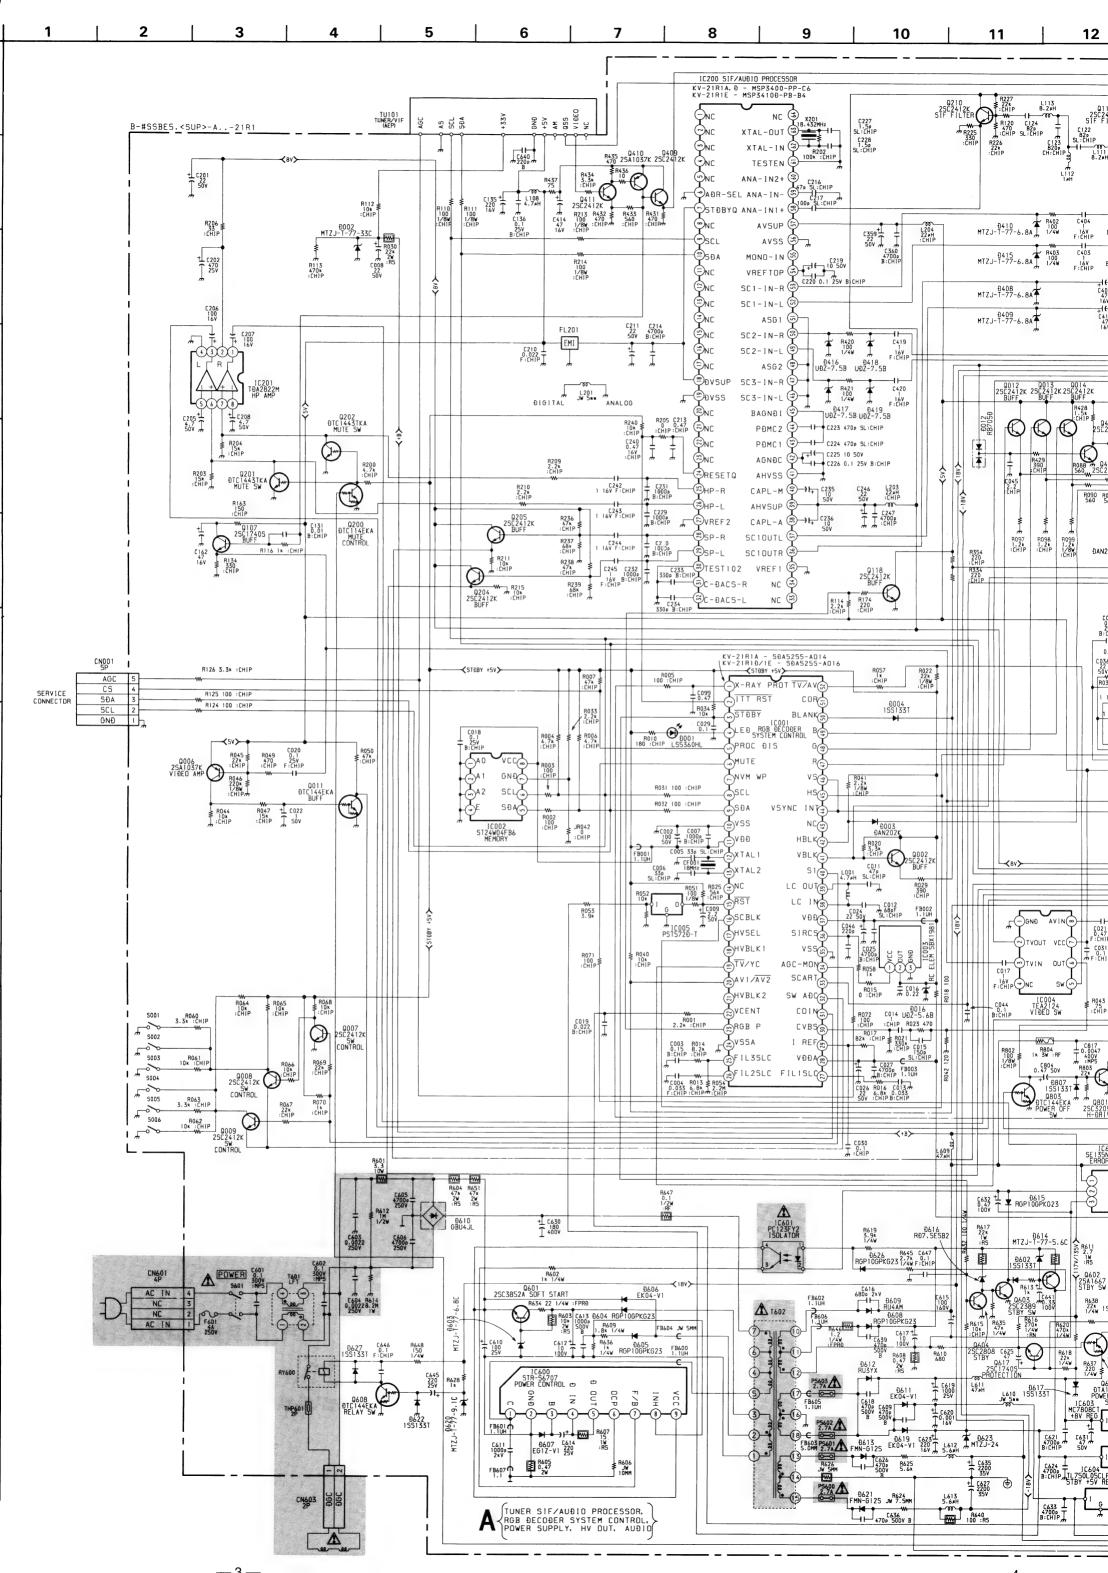

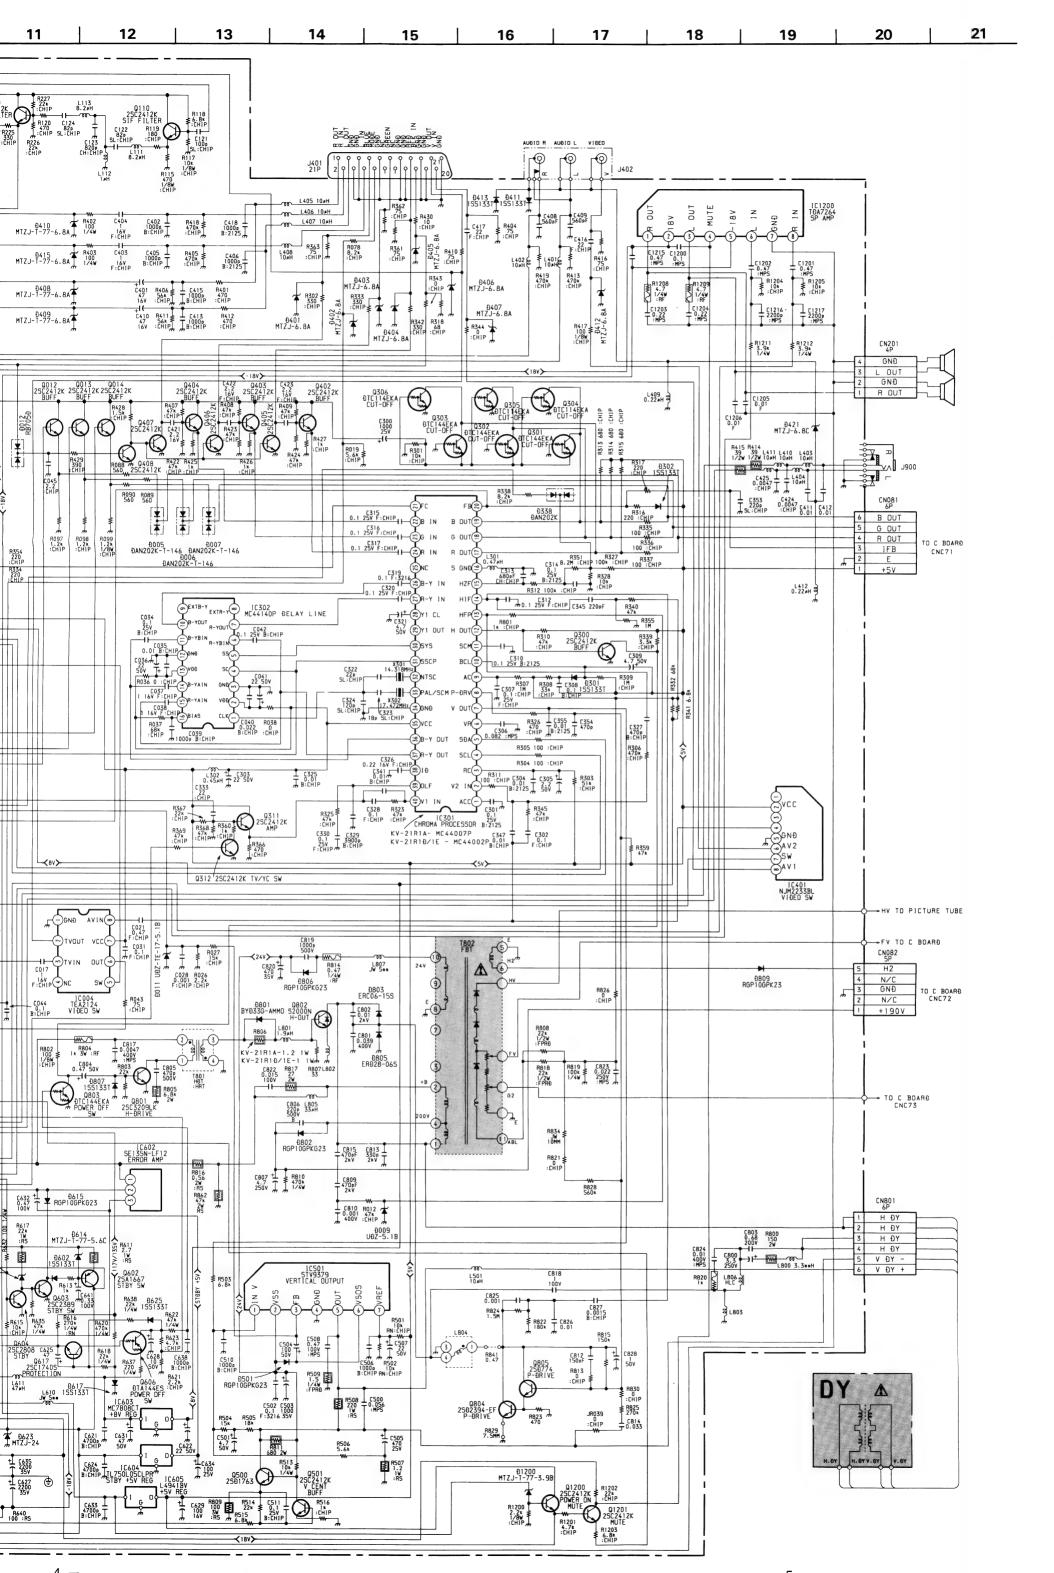

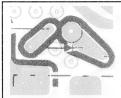


Note:


The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.



TUNER, SIF/AUDIO PROCESSOR CRT DRIVER POWER SUPPLY. HV OUT AUDIO

A Board

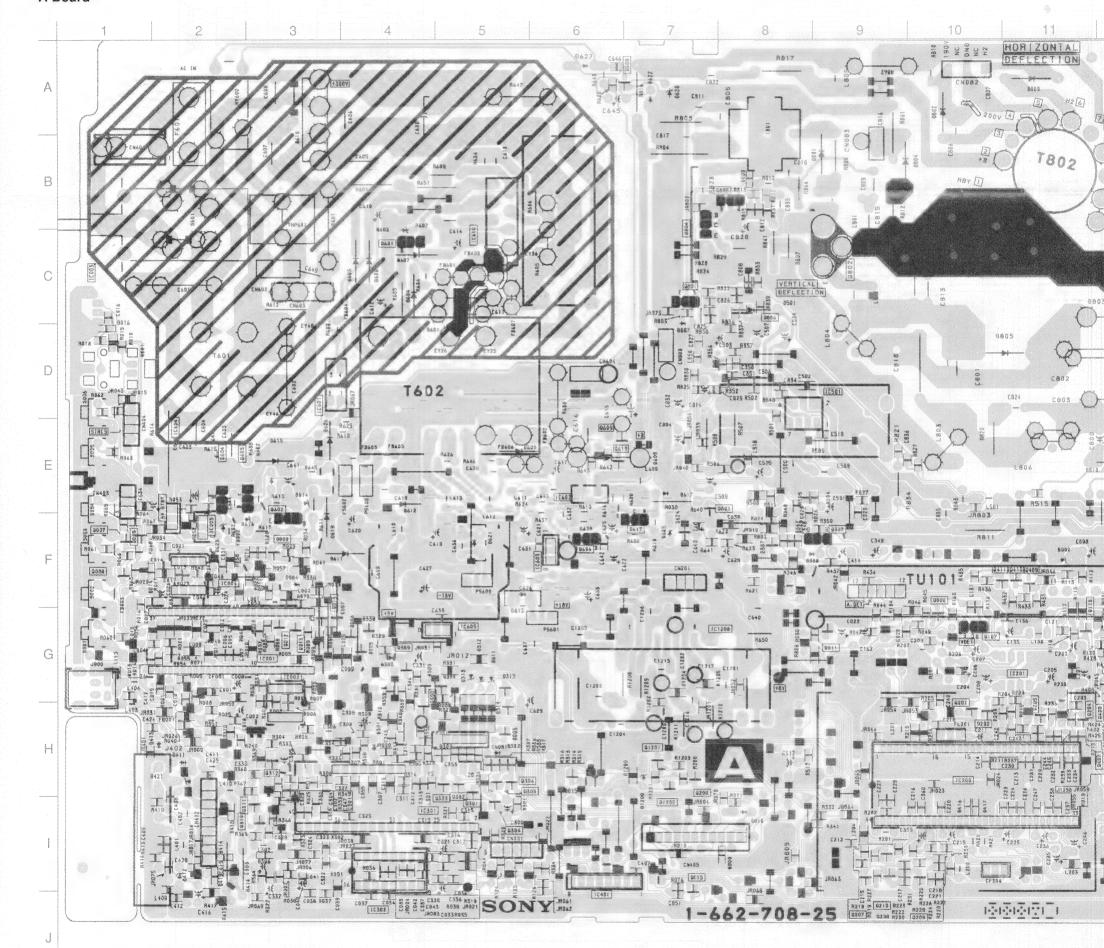

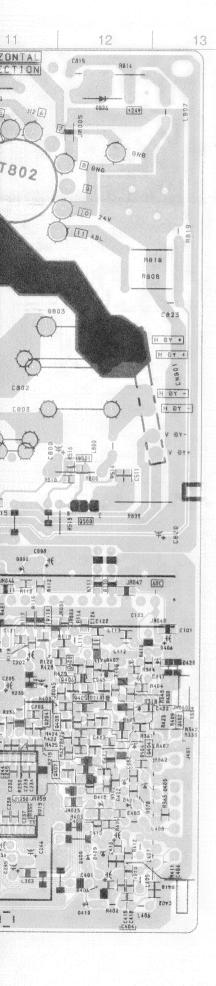

SECTION 6 EXPLODED VIEWS

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and marked \bigwedge are critical for safety.

Replace only with the part number specified.


Les composants identifies par trame et une marque 🛆 s critiques pour la securite. Ne les remplacer que par une pi

portant le numero specifie.

DESCRIPTION

REN

6-1. CHASSIS

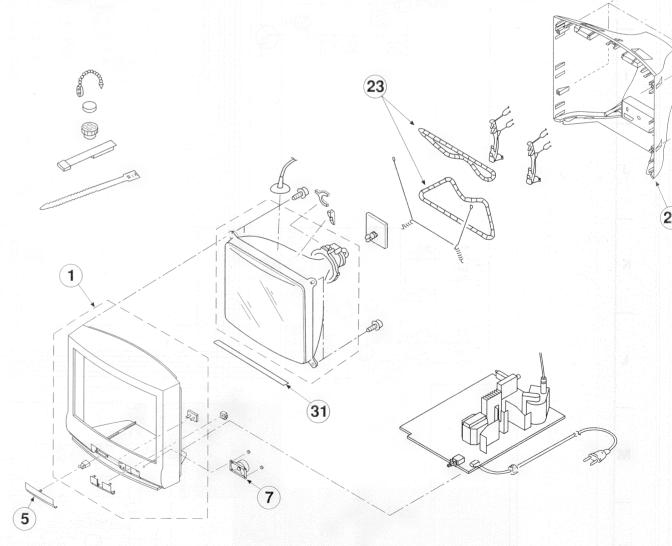

REF NO	PART NO	DESCRIPTION REMARK
1	X-4200-282-2	BEZNET ASSY 2-4
5	4-203-435-41	DOOR (PRINTED) (KV-21R1A/21R1D)
	4-203-435-31	DOOR (PRINTED) (KV-21R1E)
7	1-505-598-11	SPEAKER
23	1-411-922-11	COIL DEGAUSSING
25	4-203-429-04	COVER (REAR)
31	4-203-128-01	SHEET, BLOTTING

REF NO

PART NO

SECTION 6

EXPLODED VIEWS

NOTE:


- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked "* " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and marked $f \setminus f$ are critical for safety.

Replace only with the part number specified.

Les composants identifies par une trame et une marque sont critiques pour la securite.

Ne les remplacer que par une piece portant le numero specifie.

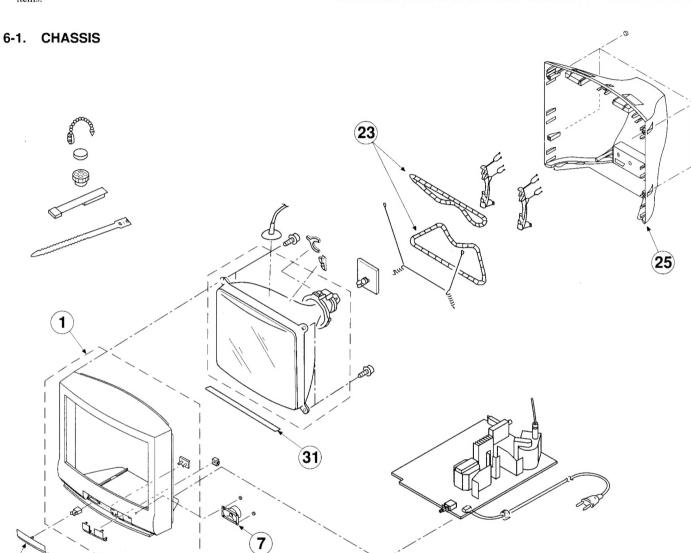

REF NO	PART NO	DESCRIPTION	REMARK	REF NO	PART NO	DESCRIPTION	REMARK
5 4. 7 1. 23 1 1. 25 4.	4-4200-282-2 4-203-435-41 4-203-435-31 1-505-598-11 1-411-922-11 1-203-429-04 1-203-128-01	DEZNET ASSY DOOR (PRINTED) (KV-21R DOOR (PRINTED) (KV-21R SPEAKER COIL DEGAUSSING COVER (REAR) SHEET RIOTTING					

REMARK

SECTION 7

ELECTRICAL PARTS LIST

When indicating parts by reference number, please include the board name.

CAPACITORS

COILS

MF: mF, PF: mmF

MMH: mH, µH: mH

 Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

REF.NO.

PART NO.


 All variable and adjustable resistors have characteristic curve B, unless otherwise noted. The components identified by shading and marked \circledast are critical for safety.

Replace only with the part number specified.

DESCRIPTION

RESISTORS

- · All resistors are in ohms
- F: nonflammable

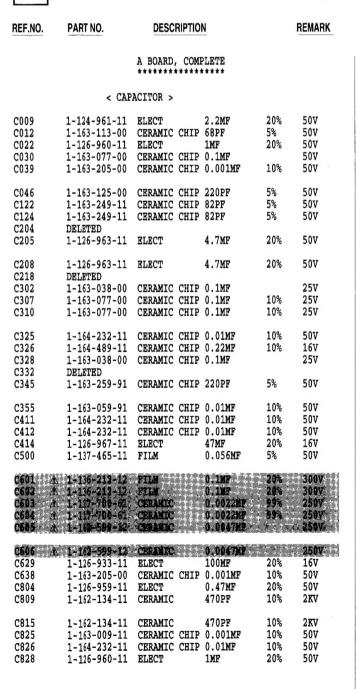

	< CON	NECTOR >						
CN001	*1-564-508-11	PIN, CONNECTOR 5P						
	< DIO	DE >						
D003 D016 D408 D409 D410	8-719-158-15 8-719-110-14	DIODE DAN202K DIODE RD5.6S-B DIODE RD9.1ES-B3 DIODE RD9.1ES-B3 DIODE RD9.1ES-B3						
D415 D416 D417 D421 D606	8-719-110-14 8-719-056-84 8-719-056-84 8-719-109-97 8-719-028-89	DIODE UDZ-TE-17-7.5B DIODE UDZ-TE-17-7.5B DIODE RD6.8ES-B2						
D611 D616 D619 D623 D802	8-719-028-89 8-719-110-03 8-719-028-89 8-719-924-16 8-719-302-43	DIODE RD7.5ESB2 DIODE EK04-V1 DIODE MTZJ-T-77-24						
	< FUSE >							
P601	1-532-350-00	PDSR: (4A-250V)						
	< FER	RITE BEAD >						
FB003 FB603 FB604	1-410-397-21 1-535-303-00 1-535-303-00	LEAD, JUMPER (5.0MM)						
	< IC	>						
IC001 IC002	8-759-473-01 8-759-472-99 8-759-437-34	IC SDA5255-A016 (KV-21R1D/21R1E) IC ST24W04FB6						
IC003 IC200	8-747-014-11 8-759-493-49							
IC301	8-759-333-44 8-759-333-45							
	< SOC	KET >						
J401	1-695-551-11	SOCKET PIN 21P						
	< COI	L >						
L108 L112	1-414-740-21 1-414-177-11							



The components identified by shading and marked * are critical for safety.
Replace only with the part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION			REMARK	
L201 L301 L302 L412	1-410-989-11 1-410-396-41	LEAD, JUMPER (5.0MM) INDUCTOR CHIP 0.47UH FERRITE BEAD INDUCTOR INDUCTOR CHIP 0.22UH	0.45UH	JR016 JR018 JR019 JR020	DELETED DELETED DELETED DELETED					
L501	1-412-525-31	INDUCTOR 10UH		JR021	DELETED					
L610 L611 L807	1-414-743-21	LEAD, JUMPER (5.0MM) INDUCTOR 47UH LEAD, JUMPER (5.0MM)		JR022 JR023 JR024	DELETED DELETED DELETED					
< IC LINK >				JR025 JR026	DELETED DELETED					
esson in september of the contract of the cont				JR028 JR029	DELETED DELETED					
0000		ANSISTOR >		JR030 JR032	DELETED DELETED					
Q002 Q007 Q008	8-729-620-06	TRANSISTOR 2SC3052-EF TRANSISTOR 2SC3052-EF TRANSISTOR 2SC3052-EF		JR033 JR034	DELETED DELETED					
Q009 Q012	8-729-620-06	TRANSISTOR 2SC3052-EF TRANSISTOR 2SC3052-EF		JR036 JR044 JR046	DELETED DELETED DELETED					
Q013 Q014	8-729-620-06	TRANSISTOR 2SC3052-EF TRANSISTOR 2SC3052-EF		R005	1-216-174-00		100	5%	1/8W	
Q110 Q118 Q204	8-729-620-06	TRANSISTOR 2SC3052-EF TRANSISTOR 2SC3052-EF TRANSISTOR 2SC3052-EF		R015 R017 R022 R028	1-216-296-00 1-216-095-00 1-216-081-00 DELETED	METAL GLAZE	0 82K 22K	5% 5% 5%	1/10W 1/10W 1/10W	
Q205 Q210	8-729-620-06 8-729-620-06	TRANSISTOR 2SC3052-EF		R047	1-216-077-00		15K	5%	1/10W	
Q300 Q310 Q311	8-729-620-06 DELETED 8-729-620-06			R051 R052 R053	1-216-174-00 1-216-073-00 1-216-063-91	METAL GLAZE	100 10K 3.9K	5% 5% 5%	1/8W 1/10W 1/10W	
Q312		TRANSISTOR 2SC3052-EF		R058	1-216-198-91		1K	5%	1/8W	
Q402 Q403	8-729-620-06	TRANSISTOR 2SC3052-EF TRANSISTOR 2SC3052-EF		R064 R113	1-216-222-00 1-216-113-00	METAL GLAZE	10K 470K	5% 5%	1/8W 1/10W	
Q404 Q405	8-729-620-06 8-729-620-06	TRANSISTOR 2SC3052-EF TRANSISTOR 2SC3052-EF		R174 R306 R307	1-216-033-00 1-216-113-00 1-216-121-91	METAL GLAZE	220 470K 1M	5% 5% 5%	1/10W 1/10W 1/10W	
Q406 Q407	8-729-620-06	TRANSISTOR 2SC3052-EF TRANSISTOR 2SC3052-EF		R309	1-216-121-91	METAL GLAZE	1M	5%	1/10W	
Q408 Q409	8-729-620-06	TRANSISTOR 2SC3052-EF TRANSISTOR 2SC3052-EF		R316 R317	1-216-033-00 1-216-033-00		220 220	5% 5%	1/10W 1/10W	
Q410		TRANSISTOR 2SA1037K-T1	46-R	R322 R334	DELETED 1-216-033-00	METAL GLAZE	220	5%	1/10W	
Q411 Q501	8-729-620-06		146	R351	1-218-463-11		8.2M		1/10W	
Q608 Q801 Q805	8-729-027-56 8-729-140-50 8-729-140-96		140	R355 R364 R365	1-216-121-91 DELETED DELETED	METAL GLAZE	1M	5%	1/10W	
Q1200	8-729-620-06			R366	1-216-041-00	METAL GLAZE	470	5%	1/10W	
Q1201		TRANSISTOR 2SC3052-EF		R369 R405	1-216-238-91 1-216-113-00	METAL GLAZE	47K 470K	5% 5%	1/10W 1/10W	
JR003	< RES	SISTOR >		R407 R408 R409	1-216-691-11 1-216-691-11 1-216-691-11	METAL CHIP	47K 47K 47K	0.50% 0.50% 0.50%	1/10W	
JR004 JR005	DELETED DELETED			R410	1-216-022-00		75	5%	1/10W	
JR006 JR007	DELETED DELETED			R412 R413	1-216-041-00 1-216-113-00	METAL GLAZE METAL GLAZE	470 470K	5% 5%	1/10W 1/10W	
JR008 JR009	DELETED DELETED			R417 R418	1-216-174-00 1-216-113-00		100 470K	5% 5%	1/8W 1/10W	
JR010 JR011	DELETED DELETED		and the second	R419 R431	1-216-113-00 1-216-041-00		470K 470	5% 5%	1/10W 1/10W	
JR012	DELETED			R432 R433	1-216-041-00 1-216-041-00 1-216-043-91	METAL GLAZE	470 470 560	5% 5%	1/10W 1/10W 1/10W	
JR013 JR014	DELETED DELETED			R434	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
JR015	DELETED			R435	1-216-041-00	METAL GLAZE	470	5%	1/10W	

The components identified by shading and marked \hat{x} are critical for safety.

Replace only with the part number specified.



DESCRIPTION

эрссп	icu.					
REF.NO.	PART NO.	DESCRIPTION		REMARK	REF.NO.	PART NO
R436	1-216-001-00	METAL GLAZE 10	5% 1/10)w		
R437	1-216-022-00		5% 1/10			
R501	1-216-675-11					
R502	4 444 4 44					
R506	1-216-669-11	METAL CHIP 10K METAL CHIP 5.6K	0.50% 1/10)W		
603	1-215-898-11	METAL OXIDE 10K	5% 2W	F		
R606		LEAD, JUMPER (10.0)		F		
R626	1-535-303-00	LEAD, JUMPER (5.0M	M/			
R628	1-216-049-00	METAL GLAZE 1K	", 5% 1/10	ਬ ਘ		
R806	1-216-350-00		5% 1W	F		
		0.1.00	(KV-21R1A)	-		
	1-216-349-00	METAL OXIDE 1	5% 1W	F		
			(KV-21R1D/	-		
R820	1-215-869-11	METAL OXIDE 1K	5% 1W			
R822	1-216-103-00			w		
R825	1-216-107-00					
R829		LEAD, JUMPER (7.5M		'''		
834		LEAD, JUMPER (10.0)				
0.41						
R841	1-249-377-11			1		
R862 R1204	1-215-902-11		5% 2W	,		
1204	1-216-222-00 1-216-222-00					
1203	1-210-222-00	METAL GLAZE 10K	5% 1/8W			
*****	*******	*******	******	*****		
		C BOARD, COMPLETE				
	< CON	NECTOR >				
CNC73	1 605 015 11	TAB (CONTACT)				
CNC76		TAB (CONTACT)				
	2 000 010 11	in (continci)				
	< CRT	SOCKET >				
761 A	1-526-990-21	SOCKET, CRT		#####		
	< IN	DUCTOR >				
L702	1-408-425-00	INDUCTOR 220UH				
703		LEAD, JUMPER (5.0MM	r)			
704	1-535-303-00	LEAD, JUMPER (5.0MM	()			
			-1			
		ISTOR >				
700	1-260-087-81					
705		LEAD, JUMPER (10.0M	•			
720 721	1-215-923-00		5% 3W	F		
1721	1-215-923-00		5% 3W	F		
722	1-215-923-00	METAL OXIDE 10K	5% 3W	F		
723	1-535-143-11	LEAD, JUMPER (10.0M	DM)			
724	1-260-117-11		10% 1/2W			
725	1-260-131-11					
******	******	*******	*****	*****		
	MIS	CELLANEOUS				

	1-411-022-11	COIL, DEGAUSSING		111111111		
1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1	1-505-598-11					

— 11 —